



***CBR***

**Packaged Boiler**

**125-800 HP**

**Light Oil, Heavy Oil, Gas, or Combination**

**Operation and Maintenance**



Manual Part No. 750-225

10/2015



**DO NOT OPERATE, SERVICE, OR REPAIR THIS EQUIPMENT UNLESS YOU FULLY UNDERSTAND ALL APPLICABLE SECTIONS OF THIS MANUAL.**

**DO NOT ALLOW OTHERS TO OPERATE, SERVICE, OR REPAIR THIS EQUIPMENT UNLESS THEY FULLY UNDERSTAND ALL APPLICABLE SECTIONS OF THIS MANUAL.**

**FAILURE TO FOLLOW ALL APPLICABLE WARNINGS AND INSTRUCTIONS MAY RESULT IN SEVERE PERSONAL INJURY OR DEATH.**

#### **TO: Owners, Operators, and/or Maintenance Personnel**

This operating manual presents information that will help to properly operate and care for the equipment. Study its contents carefully. The unit will provide good service and continued operation if proper operating and maintenance instructions are followed. No attempt should be made to operate the unit until the principles of operation and all of the components are thoroughly understood. Failure to follow all applicable instructions and warnings may result in severe personal injury or death.

It is the responsibility of the owner to train and advise not only his or her personnel, but the contractors' personnel who are servicing, repairing or operating the equipment, in all safety aspects.

Cleaver-Brooks equipment is designed and engineered to give long life and excellent service on the job. The electrical and mechanical devices supplied as part of the unit were chosen because of their known ability to perform; however, proper operating techniques and maintenance procedures must be followed at all times. Although these components afford a high degree of protection and safety, operation of equipment is not to be considered free from all dangers and hazards inherent in handling and firing of fuel.

Any "automatic" features included in the design do not relieve the attendant of any responsibility. Such features merely free him of certain repetitive chores and give him more time to devote to the proper upkeep of equipment.

It is solely the operator's responsibility to properly operate and maintain the equipment. No amount of written instructions can replace intelligent thinking and reasoning and this manual is not intended to relieve the operating personnel of the responsibility for proper operation. On the other hand, a thorough understanding of this manual is required before attempting to operate, maintain, service, or repair this equipment.

Because of state, local, or other applicable codes, there are a variety of electric controls and safety devices which vary considerably from one boiler to another. This manual contains information designed to show how a basic burner operates.

Operating controls will normally function for long periods of time and we have found that some operators become lax in their daily or monthly testing, assuming that normal operation will continue indefinitely. Malfunctions of controls lead to uneconomical operation and damage and, in most cases, these conditions can be traced directly to carelessness and deficiencies in testing and maintenance.

It is recommended that a boiler room log or record be maintained. Recording of daily, weekly, monthly and yearly maintenance activities and recording of any unusual operation will serve as a valuable guide to any necessary investigation.

Most instances of major boiler damage are the result of operation with low water. We cannot emphasize too strongly the need for the operator to periodically check his low water controls and to follow good maintenance and testing practices. Cross-connecting piping to low water devices must be internally inspected periodically to guard against any stoppages which could obstruct the free flow of water to the low water devices. Float bowls of these controls must be inspected frequently to check for the presence of foreign substances that would impede float ball movement.

The waterside condition of the pressure vessel is of extreme importance. Waterside surfaces should be inspected frequently to check for the presence of any mud, sludge, scale or corrosion.

The services of a qualified water treating company or a water consultant to recommend the proper boiler water treating practices are essential.

The operation of this equipment by the owner and his or her operating personnel must comply with all requirements or regulations of his insurance company and/or other authority having jurisdiction. In the event of any conflict or inconsistency between such requirements and the warnings or instructions contained herein, please contact Cleaver-Brooks before proceeding.

---

## TABLE OF CONTENTS

### CHAPTER 1. BASICS

GENERAL	1-1
THE BOILER	1-3
CONSTRUCTION	1-4
COMPONENTS COMMON TO ALL BOILERS	1-4
STEAM CONTROLS (ALL FUELS)	1-7
HOT WATER CONTROLS (ALL FUELS)	1-8
IFGR COMPONENTS	1-9

### CHAPTER 2. BURNER AND FUEL SYSTEMS

THE BURNER	2-1
GAS TRAIN	2-2
NO. 2 OIL COMPONENTS	2-3
HEAVY OIL COMPONENTS	2-6
CONTROLS FOR COMBINATION BURNERS ONLY	2-8
COMBUSTION AIR	2-8
AUTOMATIC IGNITION	2-9
ATOMIZING AIR	2-9
OIL FUEL FLOW - LIGHT OIL	2-9
OIL FUEL FLOW - HEAVY OIL	2-11
GAS FUEL FLOW	2-13
MODULATING FIRING	2-13

### CHAPTER 3. WATERSIDE CARE

GENERAL	3-1
WATER REQUIREMENTS	3-1
WATER TREATMENT	3-5
CLEANING	3-6
BOIL-OUT OF A NEW UNIT	3-7
WASHING OUT	3-9
BLOWDOWN STEAM BOILER	3-10
PERIODIC INSPECTION	3-12
PREPARATION FOR EXTENDED LAY-UP	3-13

### CHAPTER 4. SEQUENCE OF OPERATION

GENERAL	4-1
CIRCUIT AND INTERLOCK CONTROLS	4-1
SEQUENCE OF OPERATION - OIL OR GAS	4-3
FLAME LOSS SEQUENCE	4-5

### CHAPTER 5. STARTING AND OPERATING INSTRUCTIONS

GENERAL PREPARATION FOR START-UP, ALL FUELS	5-1
---	-----

CONTROL SETTINGS - STEAM AND HOT WATER . . . . .	5-2
GAS PILOT . . . . .	5-3
ATOMIZING AIR . . . . .	5-3
FIRING PREPARATIONS FOR NO. 2 OIL (SERIES 100-200) . . . . .	5-4
FIRING PREPARATION FOR NO. 6 OIL (SERIES 400-600) . . . . .	5-6
FIRING PREPARATIONS FOR GAS (SERIES 200-400-700) . . . . .	5-8
IFGR SETUP . . . . .	5-9
START-UP, OPERATING AND SHUTDOWN - ALL FUELS . . . . .	5-11
CONTROL OPERATIONAL CHECKS . . . . .	5-13

## **CHAPTER 6. ADJUSTMENT PROCEDURES**

GENERAL . . . . .	6-1
LINKAGE - MODULATING MOTOR AND AIR DAMPER . . . . .	6-1
MODULATING MOTOR . . . . .	6-4
MODULATING MOTOR SWITCHES - LOW FIRE AND HIGH FIRE . . . . .	6-4
BURNER OPERATING CONTROLS . . . . .	6-4
LOW WATER CUTOFF DEVICES (Steam and Hot Water) . . . . .	6-8
COMBUSTION AIR PROVING SWITCH . . . . .	6-8
ATOMIZING AIR PROVING SWITCH . . . . .	6-9
GAS PILOT FLAME ADJUSTMENT . . . . .	6-9
GAS PRESSURE AND FLOW INFORMATION . . . . .	6-10
GAS FUEL CONSUMPTION ADJUSTMENT . . . . .	6-13
LOW-GAS-PRESSURE SWITCH . . . . .	6-17
HIGH-GAS-PRESSURE SWITCH . . . . .	6-17
FUEL OIL PRESSURE AND TEMPERATURE - GENERAL . . . . .	6-17
FUEL OIL COMBUSTION ADJUSTMENT . . . . .	6-18
BURNER DRAWER ADJUSTMENT . . . . .	6-20
OIL DRAWER SWITCH . . . . .	6-21
LOW OIL TEMPERATURE SWITCH . . . . .	6-21
HIGH OIL TEMPERATURE SWITCH (OPTIONAL) . . . . .	6-22
LOW OIL PRESSURE SWITCH (OPTIONAL) . . . . .	6-22
ELECTRIC OIL HEATER THERMOSTAT (400 and 600 Series - Steam) . . . . .	6-22
STEAM OIL HEATER THERMOSTAT (No. 6 Oil) (400 and 600 Series - Steam) . . . . .	6-22
HOT WATER OIL HEATER THERMOSTAT (400 and 600 Series) . . . . .	6-23
STEAM HEATER PRESSURE REGULATOR (400 and 600 Series - Steam) . . . . .	6-23

## **CHAPTER 7. TROUBLESHOOTING**

## **CHAPTER 8. INSPECTION AND MAINTENANCE**

PERIODIC INSPECTION . . . . .	8-1
FIRESIDE CLEANING . . . . .	8-2
WATER LEVEL CONTROLS . . . . .	8-2
ELECTRICAL CONTROLS . . . . .	8-4

FLAME SAFETY CONTROL .....	8-4
OIL BURNER MAINTENANCE .....	8-6
IGNITION SYSTEM .....	8-7
GAS BURNER MAINTENANCE .....	8-8
FORCED DRAFT FAN .....	8-10
FAN/MOTOR CASSETTE REMOVAL .....	8-11
IFGR INSPECTION AND ADJUSTMENT .....	8-12
AIRBOX GASKET INSTALLATION .....	8-14
FAN/MOTOR CASSETTE INSTALLATION .....	8-14
SAFETY VALVES .....	8-15
FUEL OIL METERING VALVE .....	8-15
AIR COMPRESSOR .....	8-17
REFRACTORY .....	8-20
REAR DOOR .....	8-22
LUBRICATION .....	8-25
CONTROL LINKAGE .....	8-26
SOLENOID AND MOTORIZED VALVES .....	8-26
OIL HEATERS - ELECTRIC, STEAM, HOT WATER .....	8-26
COMBUSTION .....	8-26

## **CHAPTER 9. PARTS**

FURNACE LINER & BRICKING .....	9-2
BURNER DRAWER .....	9-7
BLOWER CARTRIDGE .....	9-10
FRONT HEAD ELECTRICAL .....	9-11
FRONT HEAD LINKAGE .....	9-13
LOW WATER CUT OFF (STEAM) .....	9-15
PRESSURE CONTROLS .....	9-18
LOW WATER CUT OFF (HOT WATER) .....	9-18
TEMPERATURE CONTROLS .....	9-19
GAS TRAIN .....	9-20
FRONT HEAD OIL / AIR PIPING (LIGHT OIL) .....	9-26
FRONT HEAD OIL / AIR PIPING (HEAVY OIL) .....	9-29
COMMON HEAVY OIL PARTS .....	9-32
REAR HEAD SEALING .....	9-33


---

## ***Notes***

---

## 1.1 - General

Firetube boilers are available for low or high pressure steam, or for hot water applications. Firetube boilers are typically used for applications ranging from 15 to 800 horsepower. A firetube boiler is a cylindrical vessel, with horizontal tubes passing through and connected to the front and rear tube sheets. The vessel contains the water and absorbs the energy generated from the flame. The front door and rear door provide the seal to contain the hot combustion gases. Baffles designed into the doors serve to redirect the combustion gases through the firetubes. The flame originates in the furnace. As the combustion gases travel down the furnace and through the firetubes, heat from the flame and combustion gases is transferred to the water. The swirling action caused by the rifled firetubes provides a much more efficient heat transfer capability. Transferred energy develops into the required steam or hot water. The primary purpose of the boiler is to supply energy to the facility's operations - for heat, manufacturing process, laundry, kitchen, etc.

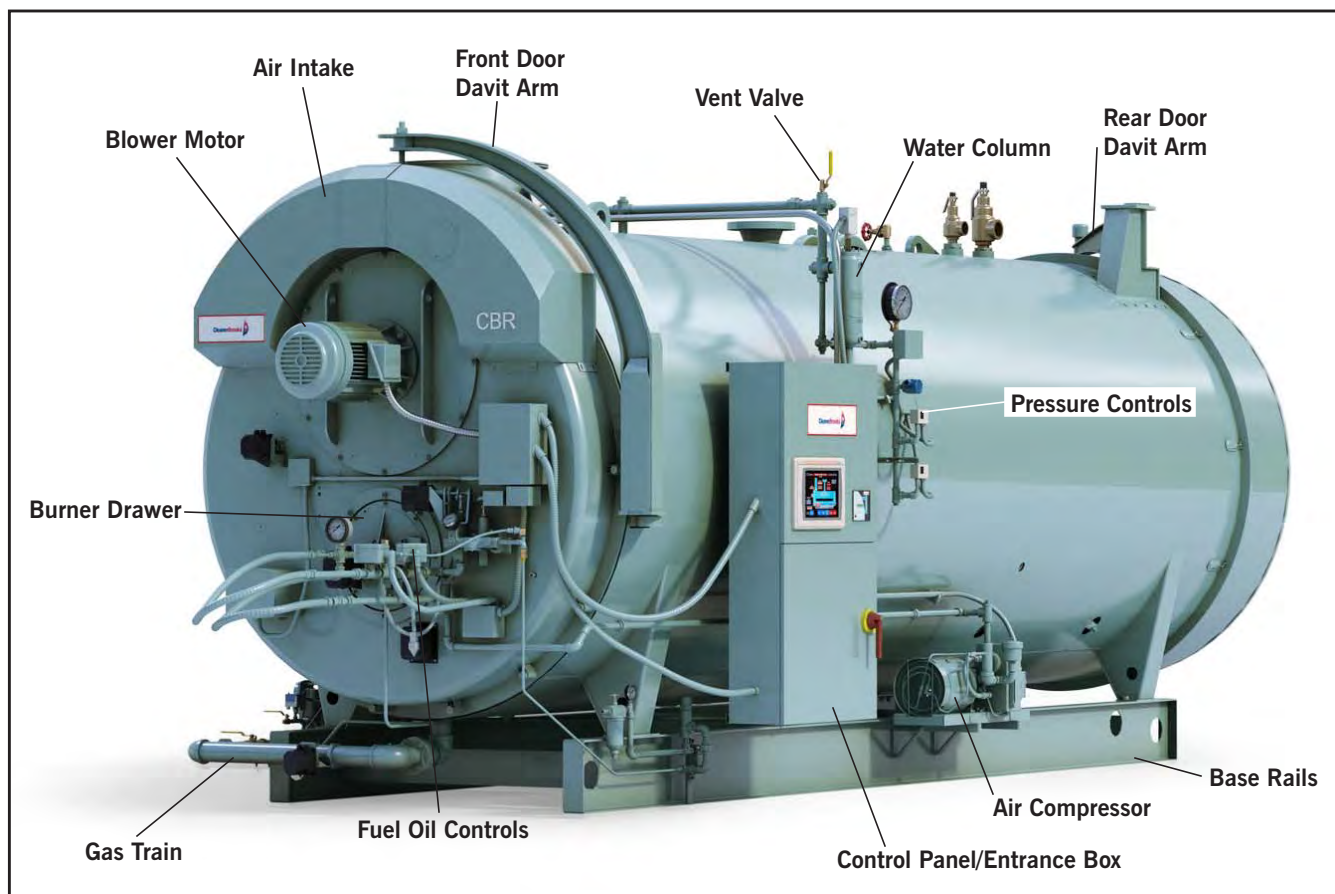

**FIGURE 1-1. Typical Steam Boiler - Light oil or Gas Fired**

The nature of the facility's operation will dictate whether a steam or hot water boiler should be used.

The Cleaver-Brooks Model CBR Boiler is available in sizes ranging from 125 through 800 boiler horsepower for the following fuels:

- Series 100 Light Oil (No. 2)
- Series 200 Light Oil (No. 2) Or Gas
- Series 400 Heavy Oil (No. 6) Or Gas
- Series 600 Heavy Oil (No. 6) Only
- Series 700 Gas Only

The LE Option reduces Nitrogen Oxide (NOx) emissions, a major precursor to ozone pollution (smog). Carbon Monoxide (CO) emissions also tend to be lower, due to increased turbulence caused by the addition of the flue gases into the combustion air stream, thereby improving combustion. The LE Option is used on Cleaver-Brooks Model CBR Firetube boilers firing either natural gas and/or light oil, and is compatible with both hot water and steam systems.



**FIGURE 1-2. Rifled Tube**

The IFGR system mixes a portion of the relatively cool flue gas from the exit of the fourth-pass tubes with the incoming combustion air to reduce the furnace flame temperature, thereby reducing NO<sub>x</sub> emissions. In this approach, the combustion air fan handles both the combustion air and the recirculated flue gases. Accordingly, this method is called Induced Flue Gas Recirculation (IFGR), because the flue gas is 'induced' into the fan inlet.

The LE Option, with its various levels of IFGR systems, can affect the selection of the combustion air fan, motor, burner, and other components. Several different system configurations are available, depending on the requirements for NO<sub>x</sub> emissions and the fuels used. All systems use similar primary components, but may have different linkage controls, IFGR damper, fan, and motor sizes. Always order genuine Cleaver-Brooks parts from your local Cleaver-Brooks authorized representative.

The boiler and related equipment installation are to be in compliance with the standards of the National Board of Fire Underwriters. Installation should also conform to state and local codes governing such equipment. Prior to installation, the proper authorities having jurisdiction are to be consulted, permits obtained, etc. All CBR boilers have options available to meet the requirements of various insurers.

**NOTE: If your boiler is equipped with a HAWK control system, refer to the appropriate controls manual.**

**NOTE: Boilers equipped to burn No. 6 oil will normally handle grades 4 and 5 equally well, with some possible modifications. References in this manual to No. 6 oil should be considered applicable to all grades of heavy oil.**

## 1.2 - The Boiler

The Model CBR boiler is a packaged firetube boiler of welded steel construction and consists of a pressure vessel, burner, burner controls, forced draft fan, damper, air pump, refractory, and appropriate boiler trim.

The horsepower rating of the boiler is indicated by the numbers following the fuel series. Thus, CBR700-600 indicates a gas-fired 600 hp boiler. The firetube construction provides some characteristics that differentiate it from other boiler types. Because of its vessel size, the firetube contains a large amount of water, allowing it to respond to load changes with minimum variation in steam pressure.

Firetube boilers are rated in boiler horsepower (BHP), which should not be confused with other horsepower measurements.

<b>! Caution</b>
<b>Waterside care is of primary importance. For specific information or assistance with your water treatment requirements, contact your Cleaver-Brooks service and parts representative. Failure to follow these instructions could result in equipment damage</b>

Hot water is commonly used in heating applications, with the boiler supplying water to the system at 180 deg F to 220 deg F. The operating pressure for hot water heating systems usually is 30 psig to 125 psig.

Steam boilers are designed for low pressure or high pressure applications. Low pressure boilers are limited to 15 psig design, and are typically used for heating applications. High pressure boilers are typically used for process loads and can have an design pressure of 75 to 350psig. Steam and hot water boilers are defined according to design pressure and operating pressure. Design pressure is the maximum pressure used in the design of the

boiler for the purpose of calculating the minimum permissible thickness or physical characteristics of the pressure vessel parts of the boiler. Typically, the safety valves are set at or below design pressure.

Operating pressure is the pressure at which the boiler normally operates. The operating pressure usually is maintained at a suitable level below the setting of the pressure relieving valve(s) to prevent their frequent opening during normal operation.

The type of service that your boiler is required to provide has an important bearing on the amount of waterside care it will require. Feedwater equipment should be checked and ready for use. Be sure that all valves, piping, boiler feed pumps, and receivers are installed in accordance with prevailing codes and practices.

Water requirements for both steam and hot water boilers are essential to boiler life and length of service. Constant attention to water requirements will pay dividends in the form of longer life, less down-time, and prevention of costly repairs.

Care taken in placing the pressure vessel into initial service is vital. The waterside of new boilers and new or remodeled steam or hot water systems may contain oil, grease or other foreign matter. A method of boiling out the vessel to remove accumulations is described in Chapter 3. The operator should be familiar with this chapter before attempting to place the unit into operation.

### 1.2.1 - Construction


Steam boilers designed for 15 psig and hot water boilers designed for 250 deg F at 160 psig or less are constructed in accordance with Section IV, Heating Boilers, of ASME Code.

Steam boilers designed for operating pressures exceeding 15 psig are constructed in accordance with Section I, Power Boilers, of the ASME Code. Hot water boilers designed for operating temperatures above 250 deg F or 160 psi are likewise built to ASME Code Section I.

### 1.2.2 - Components Common to All Boilers

1. Forced Draft Fan Motor: Drives forced draft fan directly to provide combustion air. Also referred to as a blower motor.
2. Forced Draft Fan: Provides all air, under pressure, for combustion of pilot fuel and main fuel, and for purging.
3. Modulating Motor: Operates the rotary air damper and fuel metering valves through a cam and linkage system to provide proper air/fuel ratios under all boiler load conditions.
4. Modulating Motor Transformer (located in the mod motor): Reduces control circuit voltage (115 VAC) to required voltage (24Vac) for operation of the modulating motor.
5. Forced Draft Fan Motor Starter: Energizes forced draft fan (blower) motor.
6. Ignition Transformer: Provides high voltage spark for ignition of gas pilot or light oil pilot.
7. Low Fire Switch (located in the mod motor): An internal auxiliary switch, cam actuated by the motor shaft, which must be closed to indicate that the air damper and fuel metering valve are in the low fire position before an ignition cycle can occur.
8. Atomizing Air Proving Switch: A pressure-sensitive switch actuated by air pressure from the Air Pump. Its contacts close to prove presence of atomizing air. The fuel valves cannot be energized unless this switch is satisfied.
9. Manual-Automatic Switch: When set at Automatic, subsequent operation is at the command of the modulating control, which governs the position of the modulating motor in accordance with load demand. When set at


Manual, the modulating motor, through the manual flame control, can be positioned at a desired burner firing rate. The primary purpose of the manual position is for testing and setting the air/fuel ratio through the entire firing range.

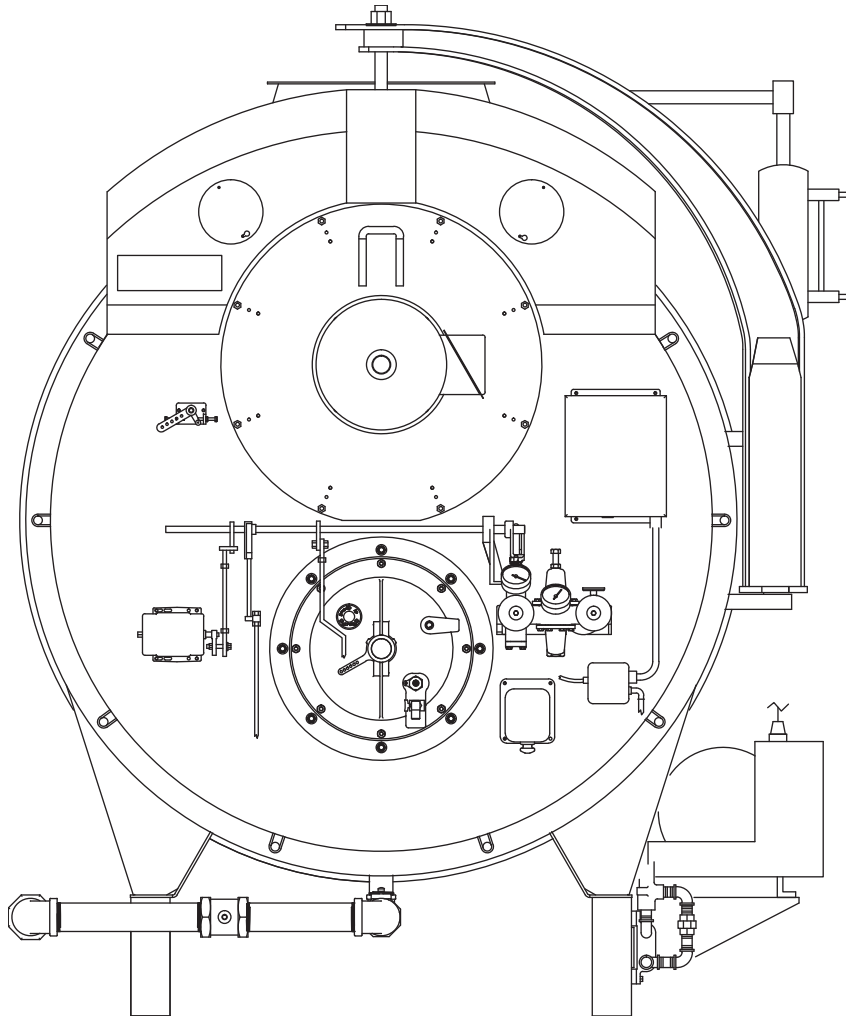

**FIGURE 1-3. Boiler front**

10. **Manual Flame Control:** A manually operated potentiometer that permits the positioning of the modulating motor to a desired burner firing rate when the manual-automatic switch is set on "manual". It is used primarily for initial or subsequent setting of fuel input throughout the firing range. It has no control over the firing rate when the manual-automatic switch is set on "automatic".
11. **Burner Switch:** A manually operated start-stop switch for directly starting and stopping operation of burner.
12. **Flame Detector (not shown):** Monitors gas or oil pilot and energizes the programmer flame relay in response to a flame signal. It continues to monitor main flame (oil or gas) after expiration of pilot providing period. A standard equipped boiler has a lead sulfide (infrared sensitive) detector.
13. **Combustion Air Proving Switch:** A pressure sensitive switch actuated by air pressure from the forced draft fan. Its contacts close to prove presence of combustion air. The fuel valves cannot be energized unless this switch is satisfied.

14. Alarm: Sounds to notify the operator of a condition requiring attention. The alarm is available as optional equipment.
15. Stack Thermometer: Indicates temperature of vented flue gases.
16. Diffuser: A circular plate, located at the furnace end of the burner drawer, that imparts a rotary swirling motion to combustion air immediately prior to its entering the flame, thus providing a thorough and efficient mixture with the fuel.

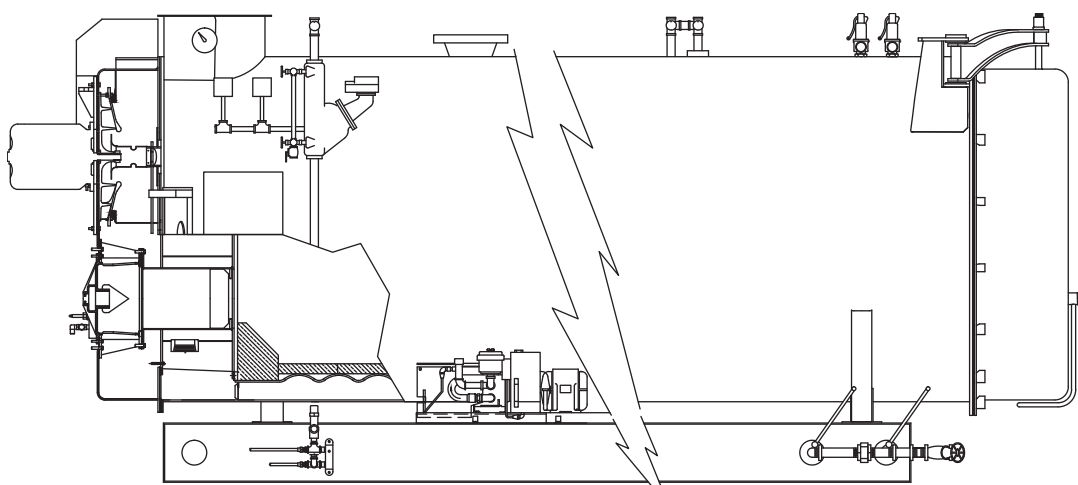

**FIGURE 1-4. Boiler side**

17. Rotary Air Damper: Provides accurate control of combustion air in proportion to fuel input for various load demands. It consists of two concentric cylinders with openings. The outer is stationary. The inner is rotated, under control of the modulating motor, to vary the effective size of the openings where they overlap.
18. Indicator Lights: Provide visual information of boiler operation as follows (indicator lights vary with controls provided):
  - Flame Failure
  - Load Demand
  - Fuel Valve (valve open)
  - Low Water
19. Program Relay and Flame Safeguard Control: Automatically programs each starting, operating and shutdown period in conjunction with operating limit and interlock devices. Includes, in a timed and proper sequence, the operation of the blower motor, ignition system, fuel valve(s), and the damper motor. The sequence includes air purge periods prior to ignition and upon burner shutdown. The flame detector portion of the control monitors both oil and gas flames and provides protection in the event of loss of a flame signal. The control recycles automatically during normal operation, or following a power interruption. It must be manually reset following a safety shutdown caused by a loss of flame. An internal checking circuit, effective on every start, prevents burner operation in the event anything causes the flame relay to hold in during this period.

### 1.2.3 - Steam Controls (All Fuels)

1. Operating Limit Pressure Control (**Figure 1-5**): Breaks a circuit to stop burner operation on a rise of boiler pressure at a selected setting. It is adjusted to stop or start the burner at a preselected pressure setting.

2. High Limit Pressure Control (**Figure 1-5**): Breaks a circuit to stop burner operation on a rise of pressure above a selected setting. It is adjusted to stop the burner at a preselected pressure above the operating limit control setting. The high limit pressure control is normally equipped with a manual reset.

3. Modulating Pressure Control (**Figure 1-5**): Senses changing boiler pressures and transmits the information to the modulating motor to change the burner firing rate when the manual-automatic switch is set on AUTOMATIC.

4. Low-Water Cutoff and Pump Control: Float-operated control responds to the water level in the boiler. It performs two distinct functions:

- Stops firing of the burner if water level lowers below the safe operating point. Energizes the low-water light in the control panel; also causes low-water alarm bell (optional equipment) to ring. Code requirements of some models require a manual reset type of low-water cutoff.
- Starts and stops the feedwater pump (if used) to maintain water at the proper operating level.

5. Water Column Assembly (**Figure 1-6**): Houses the low-water cutoff and pump control and includes the water gauge glass, gauge glass shutoff cocks.

6. Water Column Drain Valve (**Figure 1-6**): Provided so that the water column and its piping can be flushed regularly to assist in maintaining cross-connecting piping and in keeping the float bowl clean and free of sediment. A similar drain valve is furnished with auxiliary low-water cutoff for the same purpose.

7. Water Gauge Glass Drain Valve (**Figure 1-6**): Provided to flush the gauge glass.

8. Vent Valve (**Figure 1-6**): Allows the boiler to be vented during filling, and facilitates routine boiler inspection as required by ASME Code.

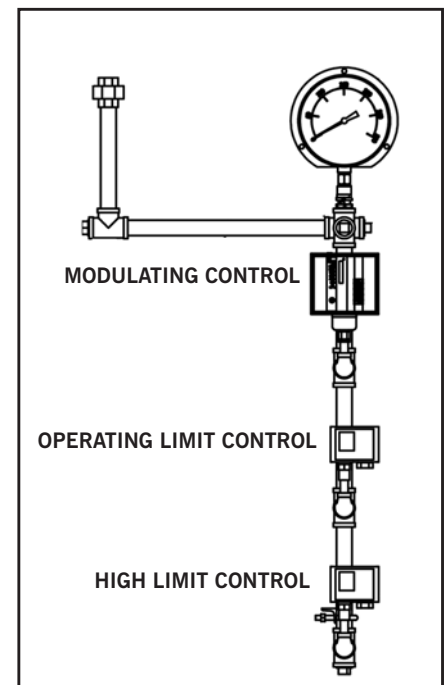


FIGURE 1-5. Pressure controls

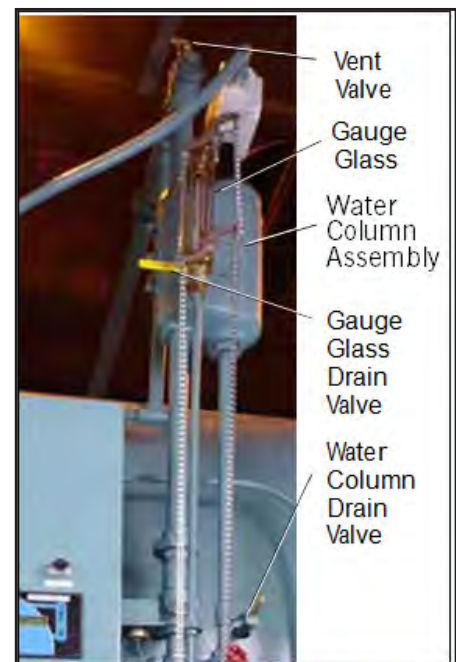


FIGURE 1-6. Water Column

9. Stack Thermometer: Indicates stack internal temperature.

10. Safety Valve(s) (**Figure 1-7**): Prevent buildup over the design pressure of the pressure vessel. The size, rating and number of valves on a boiler is determined by the ASME Boiler Code. The safety valves and the discharge piping are to be installed to conform to the ASME code requirements. The installation of a valve is of primary importance to its service life. A valve must be mounted in a vertical position so that discharge piping and code-required drains can be properly piped to prevent buildup of back pressure and accumulation of foreign material around the valve seat area. Apply only a moderate amount of pipe compound to male threads and avoid over-tightening, which can distort the seats. Use only flat-jawed wrenches on the flats provided. When installing a flange-connected valve, use a new gasket and draw the mounting bolts down evenly. Do not install or remove side outlet valves by using a pipe or wrench in the outlet. See **Figure 1-13** for recommended safety valve discharge piping.



**FIGURE 1-7. Safety Valves**

11. Auxiliary Low-water Cutoff: Breaks the circuit to stop burner operation in the event boiler water drops below the master low-water cutoff point. Manual reset type requires manual resetting in order to start the burner after a low-water condition.

**! Caution**


**Determine that the main and auxiliary low water cutoffs and pump control are level after installation and throughout the equipment's operating life. Failure to follow these instructions could result in equipment damage.**

### 1.2.4 - Hot Water Controls (All Fuels)

1. Water Temperature Gauge (**Figure 1-8**): Indicates the boiler water temperature.

2. Operating Limit Temperature Control (**Figure 1-9**): Breaks a circuit to stop burner operation on a rise of boiler temperature at a selected setting. It is adjusted to stop or start the burner at a preselected operating temperature.

3. High Limit Temperature Control (**Figure 1-9**): Breaks a circuit to stop burner operation on a rise of temperature at a selected setting. It is adjusted to stop burner at a preselected temperature above the operating control setting. The high limit temperature control normally is equipped with a manual reset.

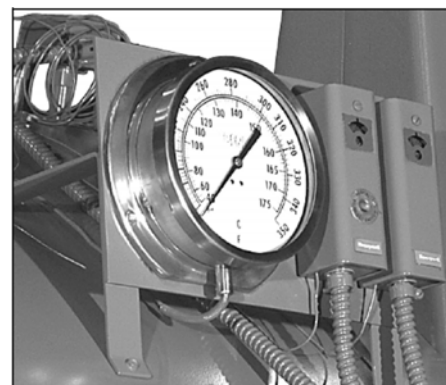

**FIGURE 1-8. Water temp. gauge**

4. Modulating Temperature Control (**Figure 1-9**): Senses changing boiler water temperature and transmits the information to the modulating motor to change the burner firing rate when the manual-automatic switch is set on automatic.

5. Low-Water Cutoff: Breaks the circuit to stop burner operation if the water level in the boiler drops below safe operating point, activating low-water light and optional alarm bell if burner is so equipped.

6. Auxiliary Low-Water Cutoff (Optional): Breaks the circuit to stop burner operation if the water level in the boiler drops below the master low-water cutoff point.

7. Safety Valve(s): Relieves the boiler of pressure higher than the design pressure or a lower pressure, if designated. Relief valves and their discharge piping are to be installed to conform to ASME Code requirements.



**FIGURE 1-9. Temperature controls**


**! Warning**

**Only properly certified personnel such as the safety valve manufacturer's certified representative can adjust or repair the boiler safety valves. Failure to follow these instructions could result in serious personal injury or death**

### 1.2.5 - IFGR Components

Flue Gas Transfer Port, IFGR Damper, and Flange Collar (**Figure 1- 10**): The flue gas transfer port is a tube that allows the flue gases to travel from the exit of the second-pass tubes to the entrance of the combustion air fan. The IFGR damper controls the volume of flue gas induced into the combustion air stream. The damper is located in the flue gas transfer port and is positioned by the control linkage.


8. IFGR Damper Linkage: The IFGR damper is positioned by the control linkage. The linkage could consist of a single arm, or it could consist of several arms driven from the jackshaft to provide modulating control.

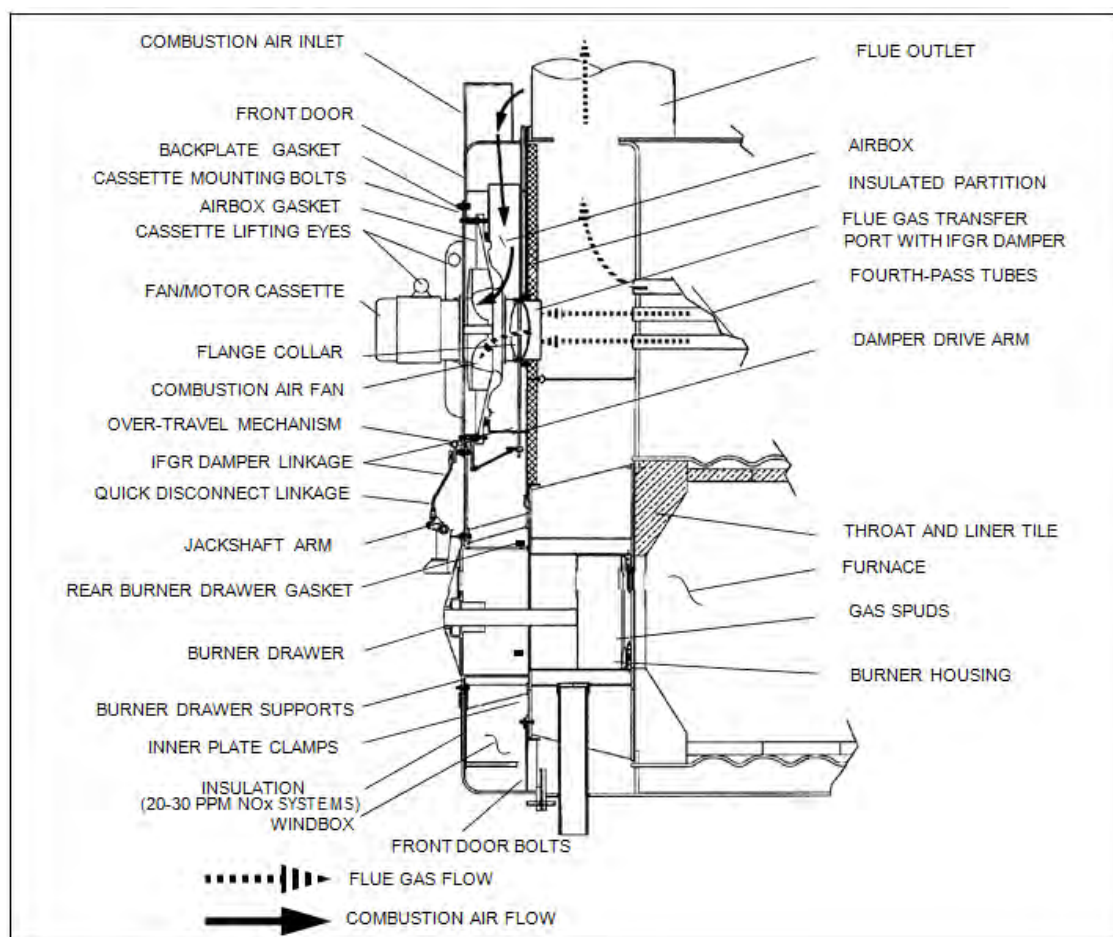

**FIGURE 1-10. Induced Flue Gas Recirculation System, General Arrangement**


9. Over-Travel Mechanism (**Figure 1-11**): The over-travel mechanism has two functions. It allows the linkage to pass through the front door, and it allows jackshaft rotation to exceed (over travel) IFGR linkage movement. A set of springs allows the linkage to stay in a fixed position while the jackshaft rotates.

10. Fuel Change-Over Linkage (**Figure 1-11**): When a boiler is equipped to fire either gas or oil (dual-fuel boilers), and the required NO<sub>x</sub> levels are below 60 ppm on natural gas, a dual linkage arrangement is used to provide the different recirculation rates required for each fuel. Two jackshaft drive arms are provided, one for oil and one for gas. The linkage is manually connected to the appropriate arm, based on the fuel being used. On dual-fuel boilers with two jackshaft drive arms, as defined above, a proximity switch is used to prove that the correct linkage connection is made. (Refer to the wiring diagram provided with the boiler.)

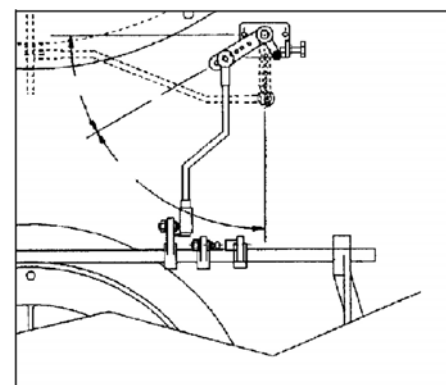

**FIGURE 1-11. Over travel and fuel change-over linkage**

Fan/Motor Cassette (**Figure 1-12**): The fan and motor assemblies are designed as a cassette so that they can be removed from the front of the boiler, without opening the front door. The front door davit arm can be used to remove the assembly.

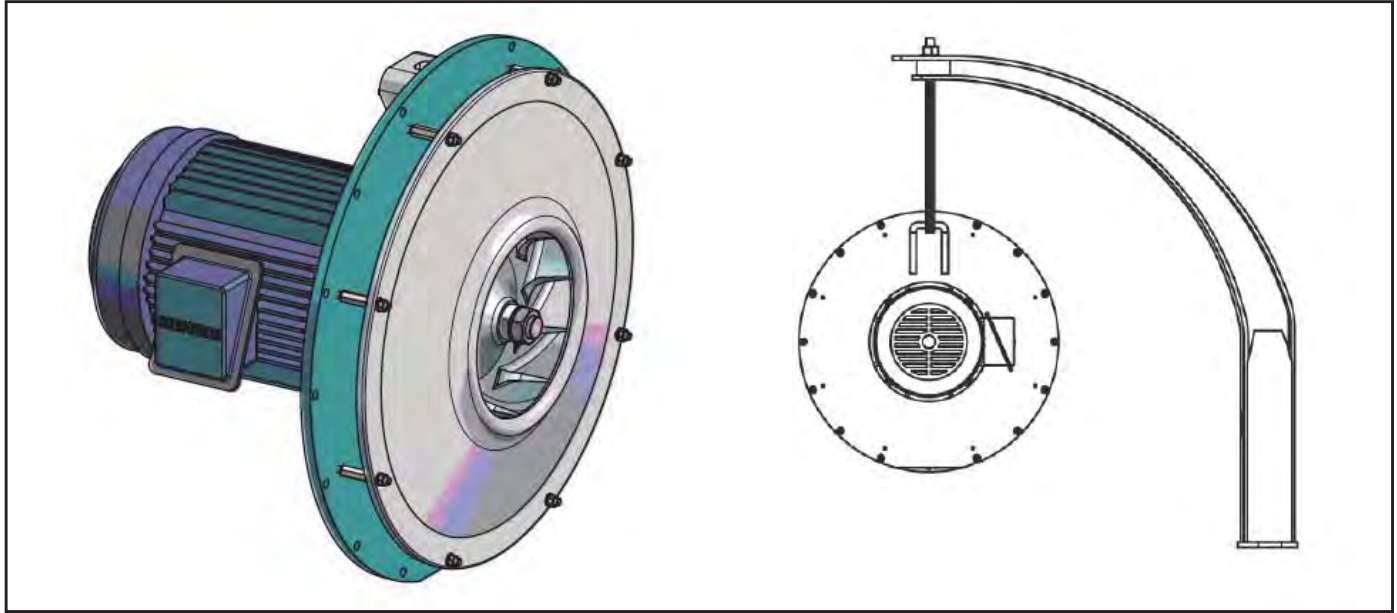

**FIGURE 1-12. Fan / Motor Cassette**

11. Burner Drawer (**Figure 1-10**): The gas spudding pattern for the IFGR system may be different than that of a non-IFGR, High-Turndown CBR Burner of the same horsepower (HP) model designation.

12. Combustion Air Inlet (**Figure 1-10**): The combustion air inlets are located at the top of the front door. Air enters from the rear of the air inlet shrouds, which reduces the sound level and captures heat from the boiler and stack flue outlet.

13. Front Door Installation: If NO<sub>x</sub> emissions are below 60 ppm, the front door is insulated inside to control temperature build up. The insulation is held in place with wire mesh.

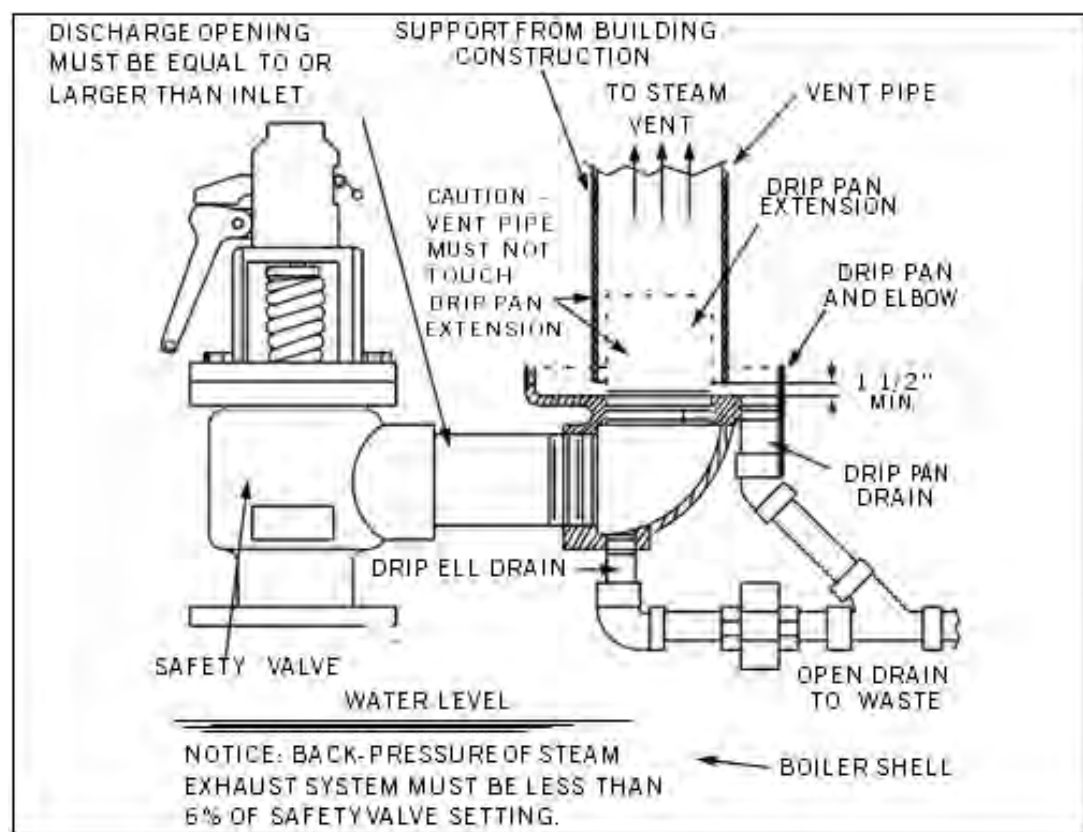


FIGURE 1-13. Recommended Steam Relief Valve Piping (not provided by Cleaver-Brooks)

---

## 2.1 - The Burner

The oil burner is of the low pressure, air atomizing (nozzle) type. The gas burner is of the non-premix orifice type. The burners are ignited by spark ignited gas pilot. The pilot is of the interrupted type and is extinguished after main flame is established.

Burners equipped to burn oil and gas (combination burners) include equipment for each fuel. Since the burner uses only one type of fuel at a time, a gas/oil selector switch is incorporated. Regardless of which fuel is used, the burner operates with full modulation (within its rated operating range). The burner returns to minimum firing position for ignition. High-pressure boilers (above 15 psi) can be wired for both low-pressure and high-pressure modulation, which enables the boiler to operate at lower pressure during off-load hours, but at a somewhat reduced steam output, dependent upon lower steam pressure and steam nozzle sizing.

The flame safeguard and program relay include a flame detector to supervise both oil and gas flames, and to shut the burner down in the event of loss of flame. The programming portion of the control provides a pre-purging period, proving of the pilot and main flame, and a period of continued blower operation to postpurge the boiler of all unburned fuel vapor.

Other safety controls shut down the burner under low-water conditions, excess steam pressure, or water temperature.

Safety interlock controls include combustion and atomizing air proving switches and, depending upon the fuel and insurance carrier requirements, controls that prove the presence of adequate fuel pressure, plus temperature proving controls when heated fuel oil is used.

The sequence of burner operation from startup through shutdown is governed by the program relay in conjunction with the operating, limit and interlock devices. The devices are wired into the circuitry to provide safe operation and protect against incorrect operating techniques.

All CBR boilers have the burner assembly attached to the front head. The entire head may be swung open for inspection and maintenance.

Combustion air is provided by a centrifugal blower located in the front head. Combustion air delivery to the burner is under the control of the damper motor. The motor also regulates the flow of fuel through a linkage sys-

tem connected to the gas butterfly valve and/or oil through a cam-operated metering valve. Fuel input and air are thus properly proportioned for most efficient combustion.


Filtered primary air for atomizing fuel oil is furnished independently of combustion air by an air compressor. The burner control circuit operates on 115 volt, single phase 60 Hz (or 50 Hz when equipped) alternating current. The forced draft fan motor is generally operated on 3-phase service at the available main power supply voltage.

Indicator lights signaling load demand, fuel valve, low water, and flame failure conditions are standard equipment.

In addition to the standard basic controls supplied, other devices may be required to meet specific requirements of an insurance carrier or local code.

Refer to the Wiring Diagram (WD) prepared by Cleaver-Brooks for your specific installation to determine the specific controls in the burner and limit control circuits.

## 2.2 - Gas Train

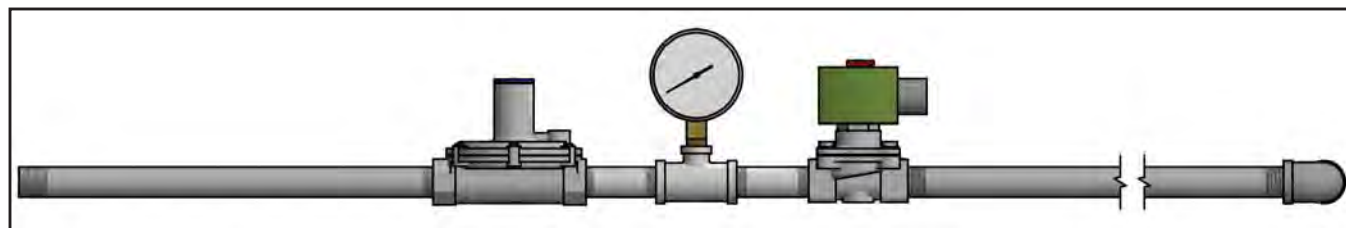

**FIGURE 2-1. Pilot gas train, standard**

Depending upon the requirements of the insurance carrier or other governing agencies, the gas flow control system, or gas train, may consist of some, or all, of the following items. Refer to the Dimension Diagram (DD) prepared by Cleaver-Brooks for your specific installation.

1. Gas Pilot Valve: A solenoid valve that opens during the ignition period to admit fuel to the pilot. It closes after main flame is established. The sequence of energizing and de-energizing is controlled by the programming relay. A second gas pilot valve may be required by insurance regulations.
2. Gas Pilot Vent Valve: When a second gas pilot valve is required, a normally open vent valve (optional equipment) is installed between them. Its purpose is to vent gas to the atmosphere, should any be present in the pilot line when the pilot valves are closed. The valve closes when the pilot valves are energized.
3. Gas Pilot Shutoff Cock: For manually opening or closing the gas supply to gas pilot valve.
4. Gas Pressure Gauge: Indicates gas pressure to pilot.
5. Gas Pressure Regulating Valve: Reduces incoming gas pressure to suit the pilot.
6. Gas Pilot Aspirator: Provides complete mixing of gas and air to the pilot.
7. Gas Pilot Adjusting Cock: Regulates the size of the gas pilot flame.
8. Gas Modulating Cam: An assembly, consisting of a quadrant, a provided for adjustment of gas input at any point in the modulating range.
9. Butterfly Gas Valve: The pivoted disc in the valve is actuated by connecting linkage from the gas modulating cam to regulate the rate of gas flow to the burner.

10. Main Gas Cock: For manually opening and closing the main fuel gas supply downstream of the main gas line pressure regulator. A second shutoff cock, downstream of the main gas valve(s), is installed to provide a means of shutting off the gas line whenever a test is made for leakage across the main gas valve.
11. Main Gas Valves: Electrically actuated shutoff valves that open simultaneously to admit gas to the burner. The downstream valve is equipped with a proof of closure switch that is connected to the pre-ignition interlock circuit.

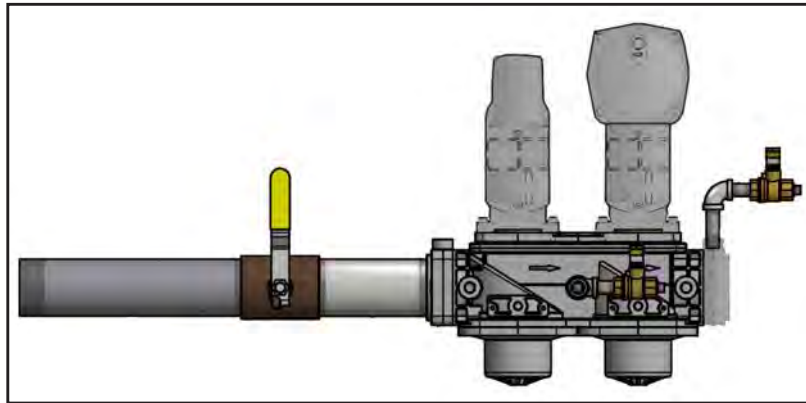


FIGURE 2-2. SSOV assembly


12. Main Gas Vent Valve (if required): A normally open solenoid valve installed between the two main gas valves to vent gas to the atmosphere should any be present in the main gas line when the gas valves are deenergized. The vent valve closes when the gas valves are energized.
13. Low Gas Pressure Switch: A pressure-actuated switch that is closed whenever main gas line pressure is above a preselected pressure. Should the pressure drop below the setting, the switch contacts open a circuit causing the main gas valve(s) to close, or prevent the burner from starting. The switch is usually equipped with a device that must be manually reset after being tripped.
14. High Gas Pressure Switch: A pressure actuated switch that is closed whenever main gas line pressure is below a preselected pressure. Should the pressure rise above the setting, the switch contacts will open a circuit causing the main gas valve(s) to close, or prevent the burner from starting. The switch is usually equipped with a device that must be manually reset after being tripped.
15. Leakage Connection: The body of the gas valve has a plugged opening that is used whenever it is necessary to conduct a test for possible leakage across the closed valve.

## 2.3 - No. 2 Oil Components

The following items are applicable to all oil fired or gas and oil fired boilers. Additional components for No. 6 oil are listed in Section 2.4.

1. Oil Drawer Switch: Opens the limit circuit if oil drawer burner gun is not latched in the forward position required for burning oil.
2. Atomizing Air Proving Switch: Pressure-actuated switch whose contacts are closed when sufficient atomizing air pressure from the air pump is present for oil firing. Oil valve(s) will not open, or will not remain open, unless switch contacts are closed.
3. Atomizing Air Pressure Gauge: Indicates the atomizing air pressure at the burner gun

4. Oil Solenoid Valve: Opens when energized through contacts in the programmer and allows fuel oil flow from the oil metering valve to the burner nozzle. A light oil fired burner uses two valves operating simultaneously.
5. Fuel Oil Controller: An assembly combining into a single unit the gauges, regulators and valves required for regulating the flow of fuel oil. All controllers have the following integral parts.
  - A - Oil Metering Valve: Valve metering stem moves to increase or decrease the orifice area to regulate the supply of fuel oil to the burner nozzle in accordance with boiler load variances. Stem movement is controlled by the modulating motor through linkage and the oil metering cam.
  - B - Oil Modulating Cam: Assembly consisting of a quadrant, a series of adjustable Allen-head screws and a contour spring provided for adjustment of oil input at any point in the modulating range.
  - C - Oil Burner Pressure Gauge: Indicates pressure of the fuel oil at the metering valve.
  - D - Oil Pressure Regulator: For adjustment of the pressure of oil at the metering valve.

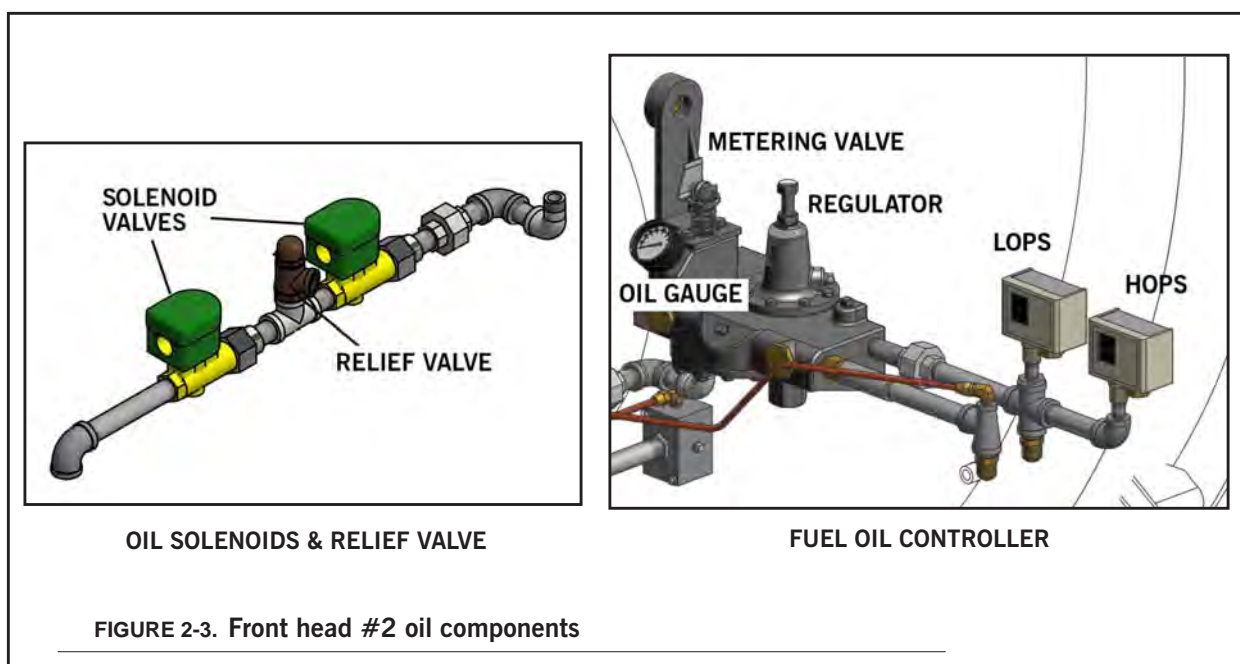

6. Oil Relief Valve: Maintains a constant oil supply pressure to the fuel oil controller by bypassing excess fuel oil.
7. Terminal Block: Provides the connection for fuel oil input and return to storage tank.
8. Fuel Oil Strainer: Prevents foreign matter from entering the burner system.

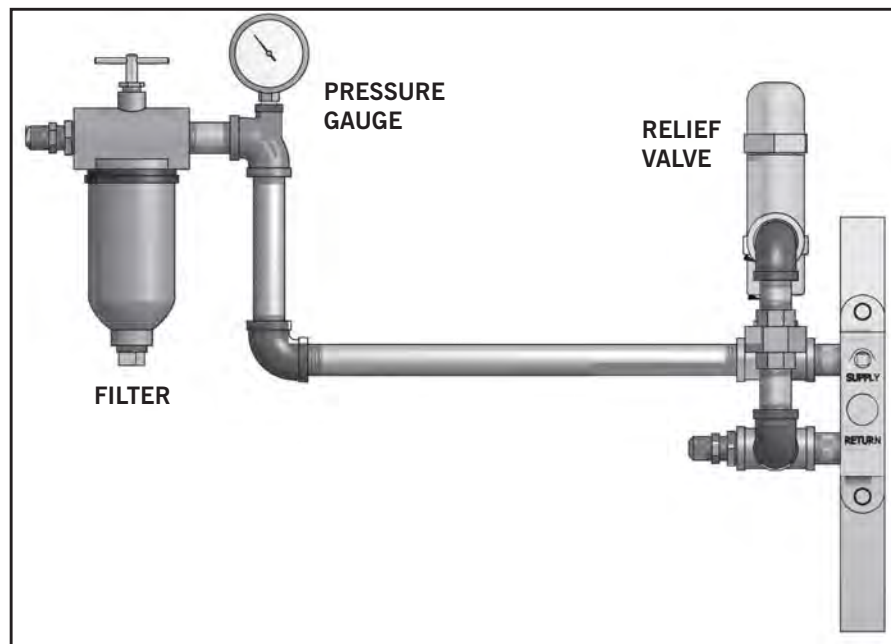


FIGURE 2-4. Oil block assembly

9. Air Pump Module Assembly: Provides the compressed air required to atomize the fuel oil for proper combustion. It is started automatically by the programmer's sequence. It includes components described A-H (below).
- A - Air Pump Motor: Drives the air pump and an air cooling fan. The motor is started and stopped simultaneously with the forced draft fan motor.
  - B - Air Pump: Provides air for atomization of the fuel oil.
  - C - Air Filter: The filter cleans the air supply prior to entering air pump.
  - D - Check Valve: Prevents lubricating oil and compressed air from surging back through the pump and air filter when the pump stops.
  - E - Air-Oil Receiver Tank: Holds a supply of oil for lubricating the air pump. The receiver tank also separates lube oil from the atomizing air before delivery to nozzle.
  - F - Lube Oil Level Sight Glass: Indicates the level of lubricating oil in the air-oil receiver tank.
  - G - Lube Oil Cooling Coil: Cools the lubricating oil before it enters the air pump. A fan driven by the air pump motor circulates cooling air over the coil.
  - H - Lube Oil Fill Pipe and Strainer: Used when adding oil to the air-oil receiver tank.


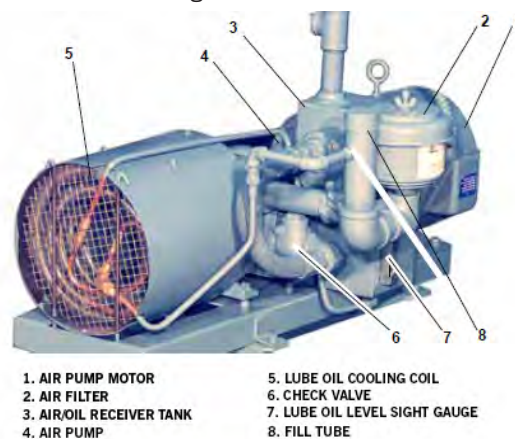


FIGURE 2-5. Air pump module

10. Low Oil Pressure Switch (Optional): Switch contacts open when the fuel oil pressure drops below selected pressure. Switch will interrupt the limit circuit upon loss of sufficient fuel oil pressure for correct combustion.
11. Fuel Oil Pump (Not Shown): Transfers fuel oil from the storage tank and delivers it under pressure to the burner system.

## 2.4 - Heavy Oil Components

The oil heater (**Figure 2-6**) is provided to heat heavy oil to the point where it can be effectively atomized and burned. Most heavy oil heaters utilize an electric heater to reduce the viscosity of the heavy oil until the point where either steam or hot water is available. Heavy oil heaters operating with hot water will have additional controls not shown.

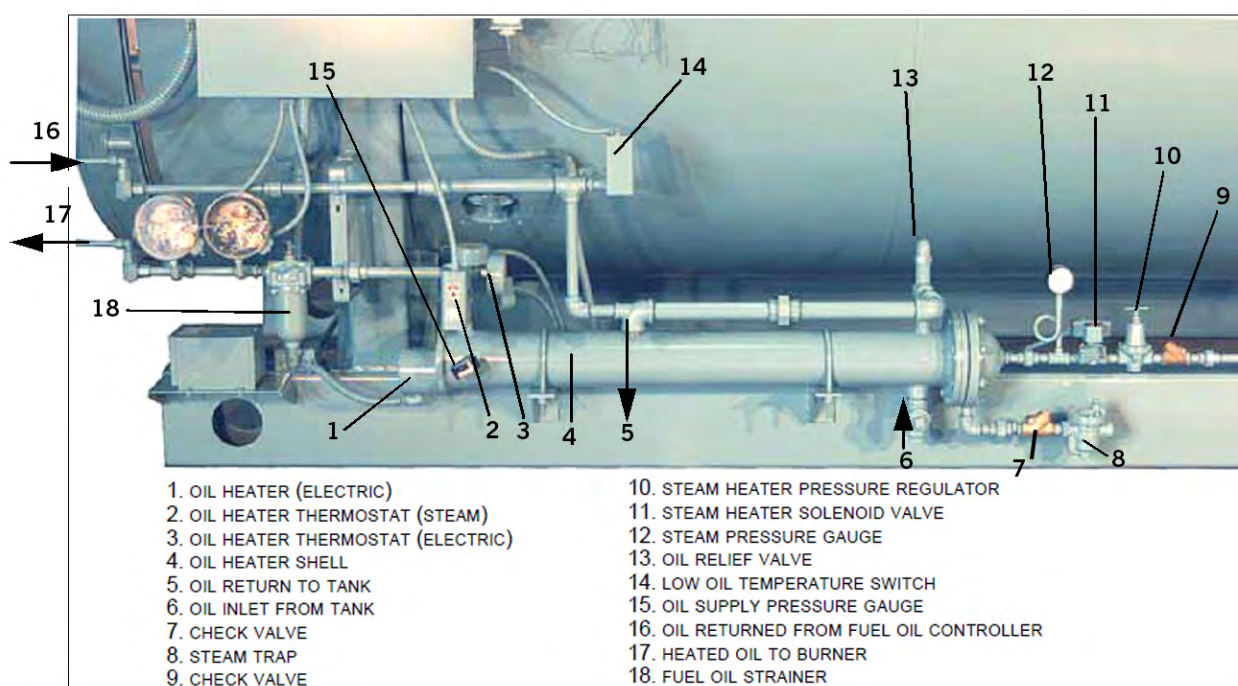

**FIGURE 2-6. Oil Heater (Steam)**

1. Oil Heater (Electric): Used for heating sufficient fuel oil for lowfire flow during cold starts before steam or hot water is available for heating. The heater must be turned off during extended boiler lay-up, or at any time the fuel oil transfer pump is stopped.
2. Electric Oil Heater Thermostat: Senses fuel oil temperature and energizes or deenergizes the electric oil heater to maintain required temperature of the fuel oil.
3. Steam Oil Heater Thermostat: Senses fuel oil temperature and controls the opening and closing of the steam heater valve to maintain the required temperature of the fuel oil.
4. Oil Heater Shell (Steam/Hot Water): Heats fuel oil through medium of steam or hot water. Electric heater is housed in the steam heater, but is housed separately on a hot water heater. Steam oil heaters on 15 psi boilers operate at boiler pressure. Steam oil heaters furnished on high pressure boilers are to be operated at less than 15 psi. Operation is accomplished with a steam pressure regulator valve.
5. Oil Return To Tank: Excess oil returned to the heavy oils supply tank.

6. Oil Inlet From Supply Tank: Heavy oil inlet from the supply tank.
7. Steam Heater Check Valve: Prevents oil contamination of the waterside of pressure vessel should any leakage occur in the oil heater.
8. Steam Trap: Drains condensate and prevents loss of steam from the steam oil heater. Condensate must be piped to a safe point of discharge.
9. Check Valve (Steam Heater Discharge): Prevents air entry during shutdown periods when cooling action may create vacuum within steam heater.
10. Steam Heater Pressure Regulator: Adjust to provide reduced (usually less than 15 psi) steam pressure to the heater to properly maintain the required fuel oil temperature. The regulator and the pressure gauge are not furnished on 15 psi units.
11. Steam Heater Solenoid Valve: A normally open solenoid valve opened by the steam oil heater thermostat to allow flow of steam to the steam heater to maintain temperature of fuel oil.
12. Steam Pressure Gauge: Indicates steam pressure entering the heater.
13. Oil Relief Valve: Allows release of excessive pressure to the return side of the oil line piped to the tank.
14. Low-Oil-Temperature Switch: Thermostatic switch that prevents burner from starting, or stops burner firing if fuel oil temperature is lower than required for oil burner operation.
15. Oil Supply Pressure Gauge: Indicates fuel oil pressure in the oil heater and supply pressure to the fuel oil controller's pressure regulator.

In addition to the components of the fuel oil controller mentioned in Section 2.3, the following are used with a heavy oil fired burner.

- High-Oil-Temperature Switch (Optional): Switch contacts open when fuel oil temperature raises above a selected temperature. Switch will interrupt the limit circuit in the event fuel oil temperature rises above the selected point.
- Hot Water Oil Heater Thermostat: Used on a hot water boiler to sense fuel oil temperature and control the starting and stopping of the booster water pump.
- Booster Water Pump: Started and stopped by the hot water thermostat to regulate the flow of hot water through the hot water oil heater to maintain temperature of fuel oil.
- Fuel Oil Thermometer: Indicates temperature of fuel oil being supplied to the fuel oil controller.
- Back Pressure Valve: For adjustment of oil pressure on the downstream side of the metering valve. Also regulates rate of return oil flow.
- Oil Return Pressure Gauge: Indicates oil pressure on the return side of the fuel oil controller.
- Manual By-Pass Valve: Provided as a time saver in establishing oil flow. When open, it permits circulation of oil through the supply and return lines. The valve **must** be closed prior to initial light off.
- Orifice Oil Control Valve: Valve may be opened prior to start-up to aid in establishing fuel oil flow through the controller. The valve must be closed prior to initial light off. Its disc has an orifice to permit a continuous circulation of hot fuel oil through the controller.
- Air Purge Valve: Solenoid valve opens simultaneously with closing of oil solenoid valve at burner shutdown, allowing compressed air to purge oil from the burner nozzle and adjacent piping. The oil is burned by the diminishing flame, which continues burning for approximately 4 seconds after the oil solenoid valve closes.
- Air Purge Orifice Nozzle: Limits purging air to proper quantity for expelling unburned oil at normal delivery rate.
- Air Purge Orifice Nozzle Filter: Filters the purging air of any particles that might plug the air purge orifice nozzle.
- Air Purge Check Valve: Valve check prevents fuel oil from entering the atomizing air line.
- Air Purge Relay: When energized, controls operation of air purge valve.

---

## 2.5 - Controls for Combination Burners Only

Gas-Oil Switch: Burners equipped to burn either oil or gas include equipment for each fuel. The selector switch engages the appropriate interlocks and controls for gas or oil operation. Chapter 4 details the required mechanical functions of each fuel system.

## 2.6 - Combustion Air

Air for combustion of fuel (often referred to as secondary air) is furnished by the forced draft fan mounted in the boiler head. In operation, air pressure is built up in the entire head and is forced through a diffuser plate for a thorough mixture with the fuel for proper combustion. The supply of secondary air to the burner is governed by automatically throttling the output of the fan by regulating the rotary air damper. The damper provides the proper amount of air for correct ratio of air to fuel for efficient combustion at all firing rates.

## 2.7 - Automatic Ignition

Oil or gas burners are ignited by an interrupted-type pilot. The pilot flame is ignited automatically by an electric spark.

The series 100 burner usually is equipped with a pilot fired with light oil fuel. All other burners are equipped with a gas burning pilot.

In the case of a combination burner, the gas pilot is used to ignite either the main gas flame or the oil flame. Either pilot serves the same function. Unless exception is taken in the text, the term pilot is used interchangeably.

At the beginning of the ignition cycle, and governed by the program relay, the pilot solenoid valve and ignition transformer are simultaneously energized.

The ignition transformer supplies high voltage current for the igniting spark. A gas pilot has a single electrode and a spark arcs between the tip of the electrode and the wall of the tube surrounding it. A light oil pilot has two electrodes and the arc is between their tips. The pilot solenoid valve and the transformer are deenergized after main flame is ignited and established.

Fuel for the gas pilot is supplied from the utility's main, or from a tank (bottle) supply. Secondary air flows into and mixes with the pilot gas stream to provide an adequate flame.

Insurance regulations may require two gas pilot solenoid valves with a normally open vent valve between them. The vent valve closes when the gas pilot valves open, and opens when the gas pilot valves shut to vent gas, should any be present in the pilot line during the deenergized period of the gas pilot valves.


Fuel for a light-oil pilot is provided from the line that supplies oil under pressure for the main flame. A solenoid actuated valve controls flow of oil to the pilot nozzle. The valve is energized simultaneously with the ignition transformer at the beginning of the ignition cycle and is deenergized after main flame is ignited and established.

## 2.8 - Atomizing Air

Air for atomizing the fuel oil (often referred to as *primary air*) is pumped by the air pump into the air-oil receiver tank and delivered under pressure through a manifold block to the oil burner nozzle. The atomizing air mixes with the fuel oil just prior to the oil leaving the nozzle. Atomizing air pressure is indicated by the air pressure gauge on the burner gun.


Air pressure from the pump also forces sufficient oil from the tank to the pump bearings to lubricate them and also to provide a seal and lubrication for the pump vanes. As a result, the air delivered to the tank contains some lube oil; however, most of it is recovered through baffles and filters in the tank before the air passes to the burner.

Some of the primary air is also used to assist the oil pressure regulators of the fuel oil controller.

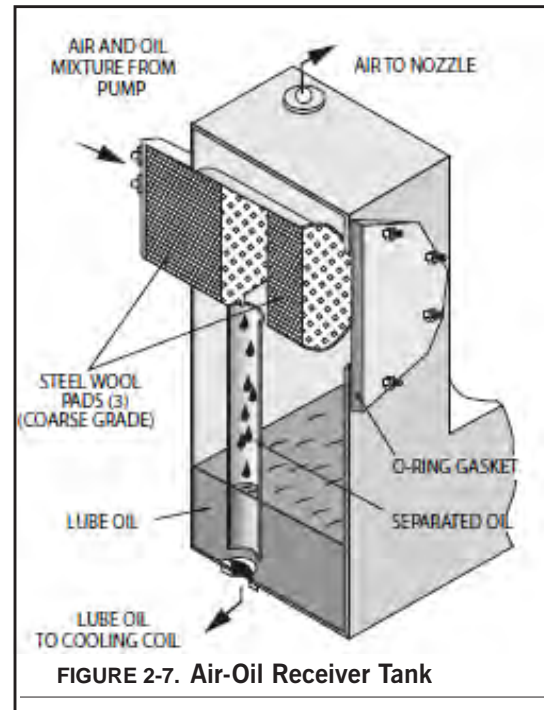

## 2.9 - Oil Fuel Flow - Light Oil

Fuel oil is delivered into the system by a supply pump which delivers part of its discharge to the oil burner. Excess oil is returned to the oil storage tank through the fuel oil relief valve and oil return line.

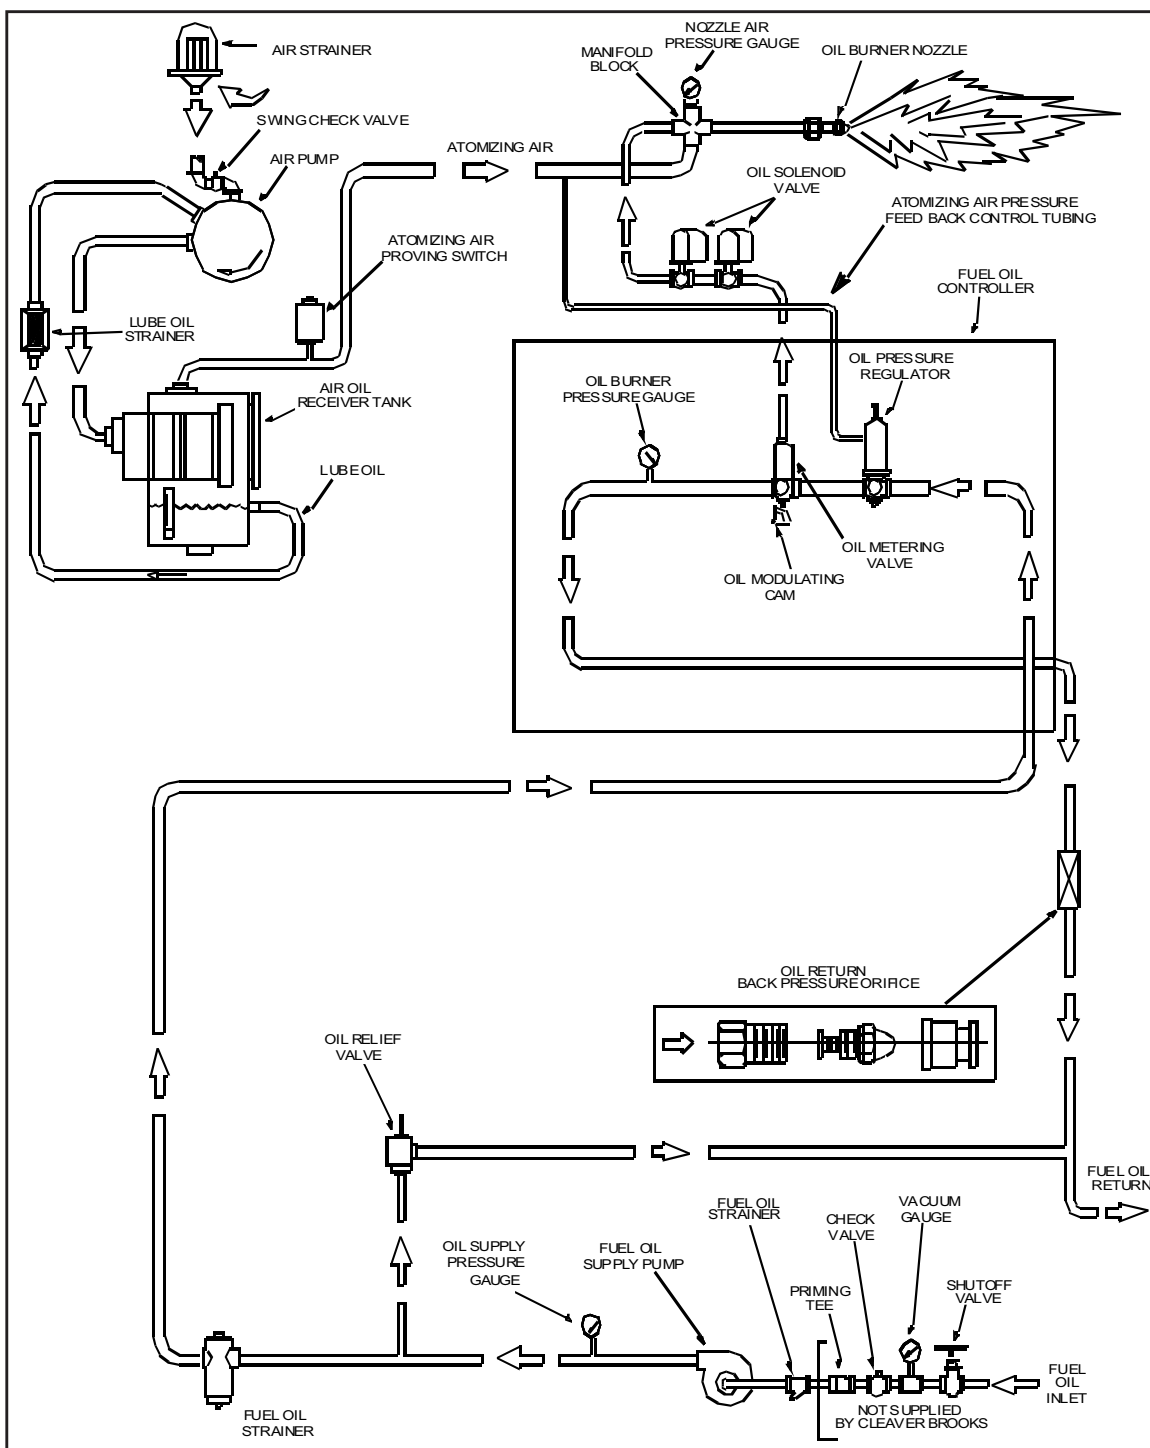

**FIGURE 2-8. Light oil flow**

Normally the pump operates only while the burner is in operation, although a positioning switch is often provided so that either continuous or automatic pump operation can be obtained.


The oil flows through a fuel oil strainer to prevent any foreign material from flowing through the control valves and nozzle. The fuel oil controller contains in a single unit, a metering valve, a regulator, and a gauge required to regulate the pressure and flow of oil to the burner. The adjustable regulator controls the pressure. To assist in the regulation, back pressure is created by an orifice nozzle located in the oil return line immediately downstream of the fuel oil controller.

The programming relay energizes or deenergizes the solenoid oil valves to permit or cut off oil flow to the burner. Two valves, operating simultaneously, are used. The valves are closed when deenergized. They cannot be opened (energized) unless the combustion air proving switch and the atomizing air proving switch are closed. The two switches are satisfied, respectively, by sufficient combustion air pressure from the forced draft fan and pressurized air from the air pump.

The oil flow to the burner is controlled by the movement of the metering stem in the oil metering valve, which varies the flow to meet load demands. The metering valve and the air damper are controlled simultaneously at all times by the modulating motor to proportion combustion air and fuel for changes in load demand.

## 2.10 - Oil Fuel Flow - Heavy Oil

Fuel oil is delivered into the system by the fuel oil supply pump which delivers part of its discharge to the oil heater. The remainder of the fuel oil returns to the oil storage tank through a fuel oil relief valve and oil return line.

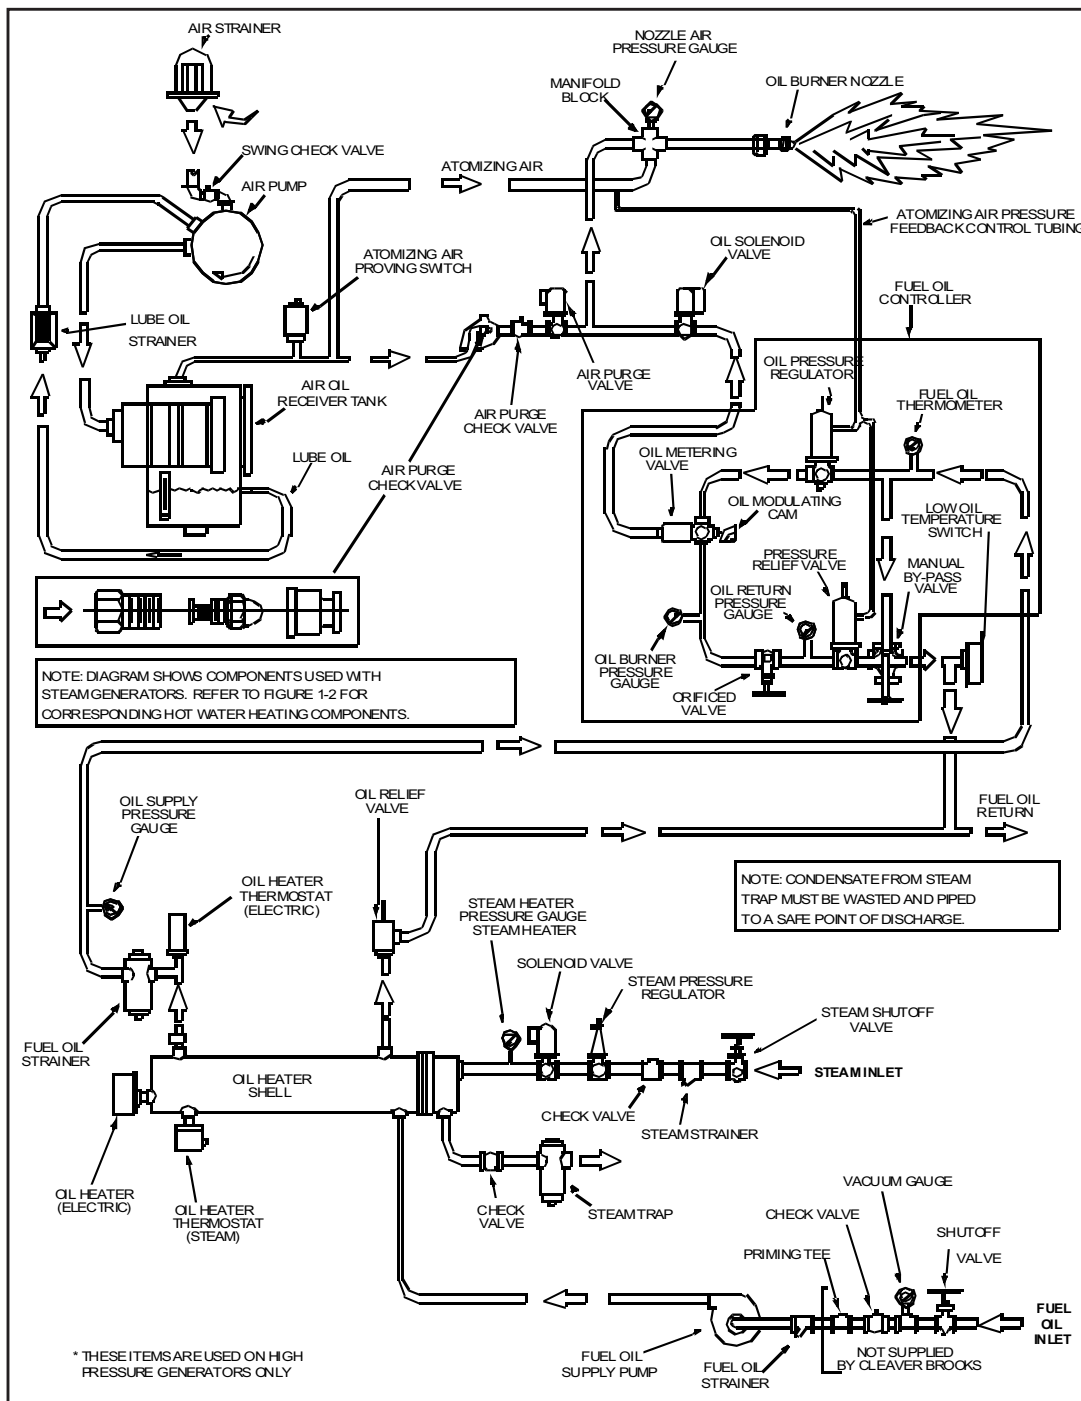

**FIGURE 2-9. Heavy oil flow (steam - electric heater)**

The combination electric and steam oil preheater is controlled by thermostats. The electric oil heater thermostat energizes the electric heater, which is provided to supply heated oil on cold starts. The steam heater thermostat controls operation of the steam solenoid valve to permit a flow of steam to the heater when steam is available.

A hot water boiler is equipped to heat the oil with hot water from the boiler, unless other preheating equipment is utilized. The electric heater, which is housed separately, is sized to provide heated oil on a cold start. The hot water thermostat controls the operation of a pump that supplies hot water to the oil heater when hot water is available. The heated oil flows through a fuel oil strainer to prevent any foreign matter from entering the control valves and nozzle.

The fuel oil controller contains, in a single unit, the necessary valves, regulators and gauges to regulate the pressure and flow of oil to the burner. The program relay energizes or deenergizes the solenoid oil valve to permit or cut off oil flow to the burner. The oil solenoid is closed when deenergized. It cannot be opened (energized) unless the combustion air proving switch, the atomizing air proving switch, and the low oil-temperature and any pressure switches are closed. They are satisfied, respectively, by sufficient combustion air pressure from the forced draft fan, pressurized air from the air pump and sufficient oil temperature and pressure.

Oil flow to the burner is controlled by the movement of the metering stem of the oil metering valve, which varies the flow to meet load demands. The metering valve and the air damper are controlled simultaneously at all times by the modulating motor to proportion combustion air and fuel for changes in load demand. Oil is purged from the burner gun upon each burner shutdown. The air purge solenoid valve opens as the fuel valve closes, diverting atomizing air through the oil line. The air assures a clean nozzle and line for subsequent restart.

## 2.11 - Gas Fuel Flow

Metered gas from the utility flows through the pressure regulator at a reduced pressure suitable to burner requirements, through the main gas shutoff cock, main gas valve(s), and modulating butterfly gas valve to the non-premix orifice-type burner. The main gas valve is of the normally closed type, and is opened (energized) in proper sequence by the programming relay.

The butterfly gas valve modulates the flow of gas from low through high fire settings. The position of the butterfly valve disc is governed by the gas modulating cam. The butterfly gas valve, and the air control damper are controlled simultaneously by the modulating motor to proportion combustion air and fuel for changes in load demand.

The gas flow rate required for rated burner input depends upon the heating value (Btu/cubic foot) of the gas supplied. The gas pressure regulator adjusts the gas pressure (flow rate) to the entrance of the gas train. The regulator is not always supplied with the burner, but may be provided by others. The main gas valves cannot be energized (opened) unless the combustion air proving switch is closed to indicate a sufficient supply of combustion air. The low gas pressure and high gas pressure switches must be closed to prove sufficient, but not excessive, gas fuel pressure.


## 2.12 - Modulated Firing

The modulating motor, through a linkage arrangement, controls the air damper and the butterfly gas valve, or the oil metering valve, to maintain a constant air/fuel ratio throughout the firing range.

During burner operation, the motor is controlled by a modulating pressure control on a steam boiler, or by a modulating temperature control on a hot water boiler. A manually operated potentiometer is provided to permit positioning of the motor at the desired burner firing rate. The potentiometer is used primarily for initial or subsequent

checking and setting of fuel input. Normal operation should be with the manual-automatic switch in the “auto-matic” position and under the control of the modulating control.

The modulating motor (commonly called a damper motor) is reversible. It has an internal limit switch that restricts shaft rotation to 90°. During normal operation the motor will move in either direction or stop at any position within the range. The motor potentiometer is electrically connected to a matching potentiometer in the modulating control. Changing steam pressure or water temperature alters the electrical resistance of the modulating controller potentiometer. The change in resistance compels an integral balancing relay to start, stop, or reverse the motor rotation. Rotation in either direction continues until the resistance ratio of the two potentiometers is equal. When the resistance ratio is equal, the motor stops in a position that allows the proper fuel and combustion air flow to meet operating demands.

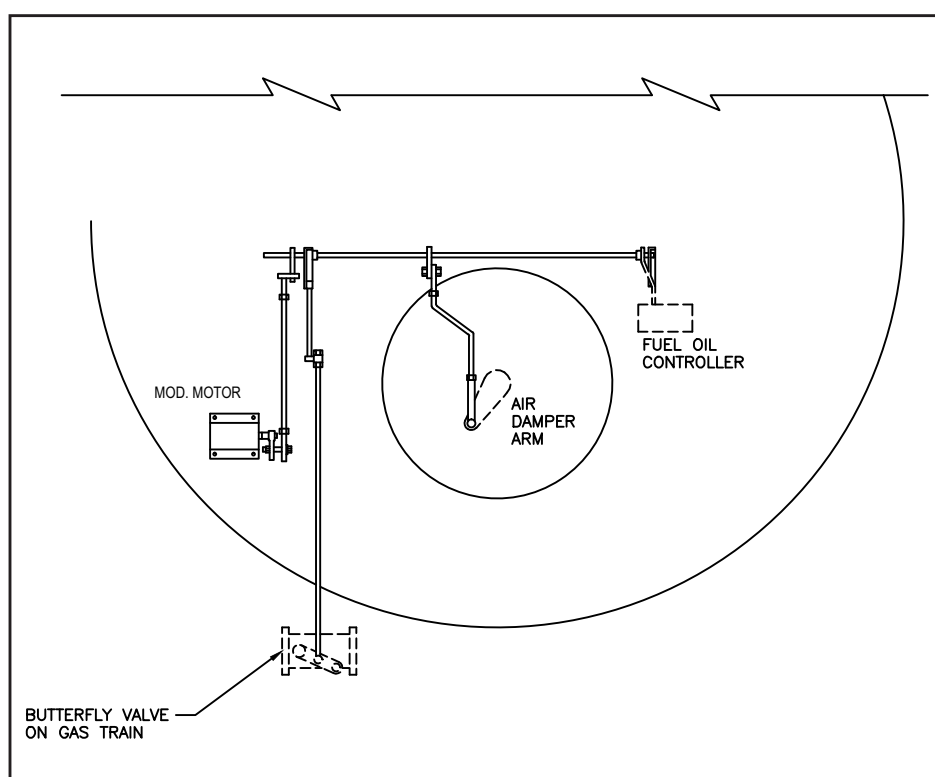

**FIGURE 2-10. Fuel Linkage Assembly**

A feature designed into the circuitry maintains the modulating motor in the low-fire position during ignition and keeps it there until the main flame is established. A low-fire switch, integral to the motor, is actuated by the rotation of the motor. The switch must be closed to establish that the damper and fuel metering valves are in the low fire position before the programmer commences into the ignition period. During this time, neither the manual flame control nor the modulating control have any control over the damper motor, regardless of their setting.

An optionally equipped boiler uses a second integral switch to establish that the motor has driven the damper to an open position during the pre-purge period. The second integral switch closes, as high fire position is approached, to complete an internal circuit in the programmer to allow continuation of the programming cycle.

---

## 3.1 - General

The operator should be familiar with Chapter 3 before attempting to place the unit into operation. Although it is of prime importance, the subject of water supply and treatment cannot adequately be covered in this manual. For specific information or assistance with your water treatment requirements, contact your Cleaver-Brooks service and parts representative.

Feedwater equipment should be checked and ready for use. Be sure that all valves, piping, boiler feed pumps, and receivers are installed in accordance with prevailing codes and practices.

Water requirements for both steam and hot water boilers are essential to boiler life and length of service. It is vital care be taken in placing the pressure vessel into initial service. The waterside of new boilers and new or remodeled steam or hot water systems may contain oil, grease or other foreign matter. A method of boiling out the vessel to remove the accumulations is described later in Chapter 3.

Boilers, as a part of a hot water system, require proper water circulation. The system must be operated as intended by its designer in order to avoid thermal shock or severe, possibly damaging, stresses from occurring to the pressure vessel.

## 3.2 - Water Requirements

### 3.2.1 - Hot Water Boiler

**Air Removal** - The hot water outlet includes a dip tube which extends 2 to 3 inches into the boiler. The dip tube reduces the possibility of air, which may be trapped at the top of the shell, from entering into the system. Oxygen or air released in the boiler will collect or be trapped at the top of the boiler shell.

The air vent tapping on the top center line of the boiler should be piped into the expansion or compression tank. Air trapped at the top of the boiler will find its way out of the boiler through the tapping.

**Minimum Water Temperature** - The minimum recommended boiler water temperature is 170 deg F. When water temperatures lower than 170 deg F are used, the combustion gases are reduced in temperature to a point where

water vapor condenses, causing corrosion in the boiler and possible breeching. Condensation is more severe on a unit that operates intermittently and which is greatly oversized for the actual load. Condensation can be minimized by maintaining boiler water temperatures above 170 deg F.

A temperature of 170 deg F is also recommended in order to provide a sufficient temperature head when No. 6 fuel oil is to be heated to the proper atomizing temperature by the boiler water in a safety type oil preheater. (The electric preheater on the boiler must provide additional heat to the oil if boiler water temperature is not maintained above 200°F.)

### Notice

**This manual only covers boilers using water. Glycol solutions have different operating requirements, circulation rates and temperatures, etc.**

**Rapid Replacement of Boiler Water** - The system layout and controls should be arranged to prevent the possibility of pumping large quantities of cold water into a hot boiler, which will cause shock or thermal stresses. Water temperature in a boiler of 200 deg F or 240 deg F cannot be completely replaced with 80 deg F water in a few minutes time without causing thermal stress. The same fact applies to periods of normal operation, as well as during initial start-up.

The circulating pumps should be interlocked with the burner so that the burner cannot operate unless the circulating pump is running in order to avoid damage to the equipment.

When individual zone circulating pumps are used, it is recommended that they be kept running-even though the heat users do not require hot water. The relief device or by-pass valve will thus allow continuous circulation through the boiler and can help prevent rapid replacement of boiler water with cold zone water.

**Continuous Flow Through the Boiler** - The system should be piped and the controls arranged to allow water circulation through the boiler under all operating conditions. The operation of three-way valves and system controls should be checked to be sure that the boiler will not be by-passed. Constant circulation through the boiler

eliminates the possibility of stratification within the unit and results in more even water temperatures to the system. A rule of thumb of 3/4 to 1 gpm per boiler horsepower can be used to determine the minimum continuous flow rate through the boiler under all operating conditions. The operator should determine that a flow of water exists through the boiler before initial firing or refiring after boiler has been drained.

**Water Circulation** - The chart in **Table 3-1** shows the maximum gpm circulation rate of boiler water in relation to full boiler output and system temperature drop.

**Multiple Boiler Installations** - When multiple boilers are used, care must be taken to ensure adequate or proportional flow through the boilers. Proportional flow can best be accomplished by use of balancing valves and gauges in the supply line from each boiler. If balancing valves or orifice plates are used, a significant pressure

drop (e.g., 3-5 psi) must be taken across the balancing device to accomplish the purpose. If care is not taken to ensure adequate or proportional flow through the boilers, wide variations in firing rates between the boilers can

result. In extreme cases, one boiler may be in the high-fire position while the other boiler or boilers may be at low fire. The net result would be that the common header water temperature to the system would not be up to the desired point.

**Note:** If the operating water temperature going to the system must be lower than 170 deg F, the operating boiler water temperature should be a minimum of 170 deg F (200 deg F if used to preheat No. 6 oil) and mixing valves should be used to avoid damage to the equipment.

**TABLE 3-1. Maximum Circulating Rate**

BOILER SIZE (BHP)	BOILER OUTPUT (1000) BTU/HR	SYSTEM TEMPERATURE DROP - DEGREES °F									
		10	20	30	40	50	60	70	80	90	100
		MAXIMUM CIRCULATING RATE - GPM									
15	500	100	50	33	25	20	17	14	12	11	10
20	670	134	67	45	33	27	22	19	17	15	13
30	1,005	200	100	67	50	40	33	29	25	22	20
40	1,340	268	134	89	67	54	45	38	33	30	27
50	1,675	335	168	112	84	67	56	48	42	37	33
60	2,010	402	201	134	101	80	67	58	50	45	40
70	2,345	470	235	157	118	94	78	67	59	52	47
80	2,680	536	268	179	134	107	90	77	67	60	54
100	3,350	670	335	223	168	134	112	96	84	75	67
125	4,185	836	418	279	209	168	140	120	105	93	84
150	5,025	1,005	503	335	251	201	168	144	126	112	100
200	6,695	1,340	670	447	335	268	224	192	168	149	134
250	8,370	1,675	838	558	419	335	280	240	210	186	167
300	10,045	2,010	1,005	670	503	402	335	287	251	223	201
350	11,720	2,350	1,175	784	587	470	392	336	294	261	235
400	13,400	2,680	1,340	895	670	535	447	383	335	298	268
500	16,740	3,350	1,675	1,120	838	670	558	479	419	372	335
600	20,080	4,020	2,010	1,340	1,005	805	670	575	502	448	402
700	23,430	4,690	2,345	1,565	1,175	940	785	670	585	520	470
800	26,780	5,360	2,680	1,785	1,340	1,075	895	765	670	595	535

**Pump Location** - It is recommended that the system circulating pumps take suction from the outlet connection on the boiler, and that they discharge to the system load. In order to put the boiler and the expansion tank on the suction side of the pump. The suction side is preferred because it decreases air entry into the system and does not impose the system head on the boiler. It is common practice to install a standby system circulating pump. The main circulating pumps are usually located adjacent to the boilers in the boiler room.

**Pump Operation** - Pumps are normally started and stopped by manual switches. It is also desirable to interlock the pump with the burner so that the burner cannot operate unless the circulating pump is running.

**Pressure** - The design of the system and usage requirements often dictate the pressure exerted upon the boiler. Some systems are pressurized with air, or with an inert gas such as nitrogen. Caution must be exercised to ensure that the proper relationship of pressure to temperature exists within the boiler so that all of the boiler's internal surfaces are fully wetted at all times. For this reason, the internal boiler pressure, as indicated on the water pressure gauge, must be held to the level shown in **Figure 3-1**.

When initially firing a newly installed boiler, or when cutting an existing boiler into an operating system, the boiler or boilers to be cut into operation **MUST** be pressurized equal to the system and/or other boilers prior to opening the header valves.

It is advisable to have a thermometer installed in the return line to indicate return water temperature. Knowing the supply water temperature, the boiler system differential can be established. With knowledge of the pumping rate, the operator can easily detect any excessive load condition and take appropriate corrective action.

Special caution must be taken to guard against any condition, or combination of conditions, that might lead to the transfer of cold water to a hot boiler or hot water to a cold boiler. It cannot be overemphasized that rapid changes in temperature within the boiler can cause damage.

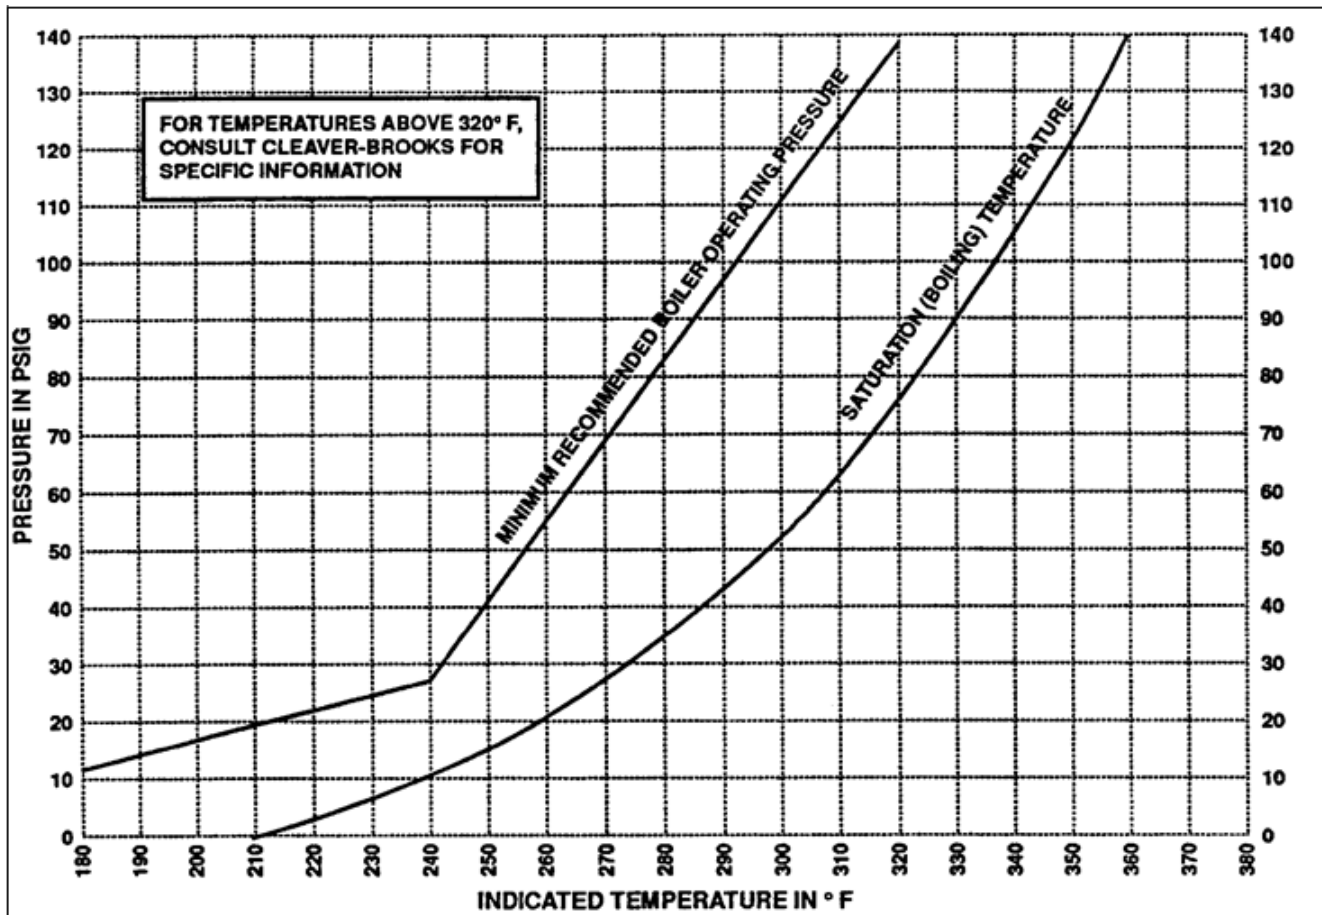


FIGURE 3-1. Internal Boiler Pressure


### 3.2.2 - Steam Boiler

**Feed Pump Operation** - BEFORE turning on the pump motor be certain that all valves in the water feed line are open to prevent possible damage to the feed pump mechanism. After opening the valves, momentarily energize

the feed pump motor to establish correct pump rotation. With the correct rotation established, close the boiler feed pump entrance switch. The pump should shut down when the water level reaches the proper level (see **Figure 3-2**).

Feedwater pumps must have adequate capacity to maintain required water level under all operating conditions. Check the feedwater pumps periodically and maintain as necessary to prevent unexpected breakdowns.

**Water Feeder (optional) Operation** - Water feeder operation is usually applicable to boilers operating at 15 psi steam or less. It is only necessary to open the water supply line valve and the water feeder discharge valve.

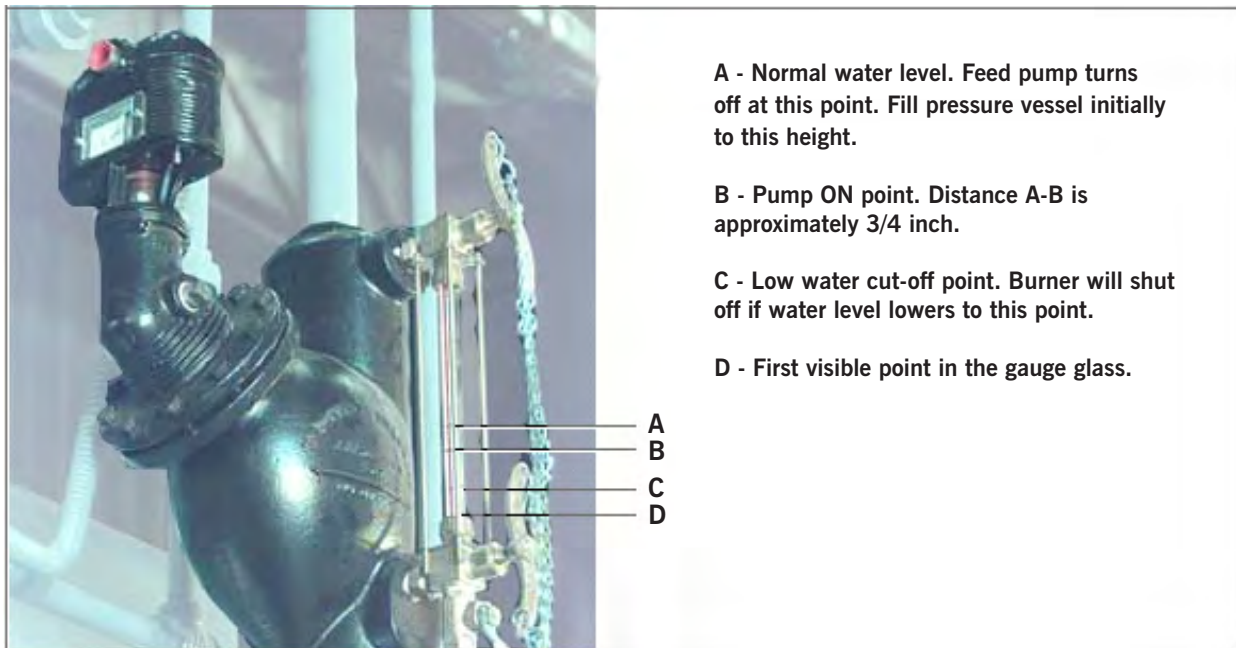

**FIGURE 3-2. Low Water Cut Off**

**Note:** Prior to operating the pump, carefully check the alignment of the flexible coupling, if one is used. A properly aligned coupling will last a long time and provide trouble-free mechanical operation.

**! Warning**

The isolation valves and the water column piping must be locked open during operation. Failure to do so may result in a low water condition. Failure to follow these instructions could result in serious personal injury or death.

### 3.3 - Water Treatment

Properly treated boiler feed water, coupled with good engineering and operating practices, lead to maximum effectiveness and long trouble-free life of pressure vessels, at the lowest operating cost. Contact your local

Cleaver-Brooks authorized representative for information on how to prevent the presence of unwanted solids and corrosive gases.

Objectives of water treatment in general are:

1. Prevent hard scale deposits or soft sludge deposits, which reduce heat transfer and can lead to overheated metal and costly downtime and repairs.
2. Eliminate corrosive gases in the supply or boiler water.
3. Prevent intercrystalline cracking or caustic embrittlement of boiler metal.
4. Prevent carryover and foaming.

Accomplishment of the above objectives generally requires proper feedwater treatment before and after introduction of the water into the boiler. The selection of pre-treatment processes depends upon the water source, its chemical characteristics, amount of makeup water needed, plant operating practices, etc. Treating methods include filtering, softening, de-mineralizing, deaerating, and preheating. After-treatment involves chemical treatment of the boiler water.

Because of the many variables involved, no single boiler compound can be considered a cure-all, nor is it advisable to experiment with homemade treating methods. For best results, follow the advice of a water treatment expert while making sure to conduct periodic analyses of the feedwater, boiler water, and condensate.

The internal or waterside surfaces of the pressure vessel should be inspected with enough frequency to determine the presence of any contamination, accumulations of foreign matter, or corrosion, and/ or pitting. If any of the conditions are detected, contact your local Cleaver-Brooks authorized representative for advice on corrective action.

A properly sized water meter should be installed in the raw water make-up line in order to accurately determine the amount of raw water admitted to the boiler (steam or hot water) and to aid in maintaining proper waterside conditions.

## 3.4 - Cleaning

### 3.4.1 - Hot Water And Steam Piping

Steam and water piping systems connected to the boiler may contain oil, grease, or foreign matter. The impurities must be removed in order to prevent damage to pressure vessel heating surfaces. On a steam system, the condensate should be wasted until tests show the elimination of undesirable impurities. During the period that condensate is wasted, attention must be given to the treatment of the raw water used as make-up so that accumulation of unwanted materials or corrosion does not occur. For more information, contact your local Cleaver-Brooks authorized representative.

On a hot water system, chemical cleaning is generally necessary and the entire system should be drained after treatment. Consult your local Cleaver-Brooks authorized representative for recommendations, cleaning compounds, and application procedures.

**Notice**

**In the event that water column isolation valves are provided or installed, it must be established that the valves are open and seated or locked in the open position. If the valves are installed, it is illegal to operate the boiler with closed or unsealed open valves.**

### 3.4.2 - Pressure Vessel

The waterside of the pressure vessel must be kept clean from grease, sludge, and foreign material. Such deposits, if present, will shorten the life of the pressure vessel, will interfere with efficient operation and functioning of control of safety devices, and quite possibly cause unnecessary and expensive re-work, repairs, and down-time.

The installation and operating conditions that the boiler will be subjected to should be considered and cleaning of the waterside of the pressure vessel should be provided during the course of initial start-up.

The pressure vessel and the steam and return lines or hot water piping represent, in effect, a closed system. Although the steam and return (condensate) lines or the hot water piping system may have been previously cleaned, it is possible that:

- Cleaning has been inadequate.
- Partial or total old system is involved.
- Conditions may prevent adequate cleaning of piping.

The pressure vessel waterside should be inspected on a periodic basis. An inspection will reveal true internal conditions and serve as a check against conditions indicated by chemical analysis of the boiler water. Inspection should be made three months after initial starting and at regular 6-, 9-, or 12-month intervals thereafter. The frequency of further periodic inspections will depend upon the internal conditions found.

If any unwanted conditions are observed, contact your local Cleaver-Brooks authorized representative for recommendations. Any sludge, mud or sediment found will need to be flushed out. If excessive mud or sludge is noticed during the blowdown the scheduling or frequency of blowdown may need to be revised. The need for periodic draining or washout will also be indicated. Any oil or grease present on the heating surfaces should be removed promptly by a boil-out with an alkaline detergent solution.

### 3.5 - Boil-out Of A New Unit

The internal surfaces of a newly installed boiler may have oil, grease or other protective coatings used in manufacturing. Such coatings must be removed because they lower the heat transfer rate and could cause overheating of a tube.

**Notice**

**Temperature of initial fill of water for hydrostatic tests, boil-out, or for normal operation should be as stated in the ASME Boiler Code.**

Your local Cleaver-Brooks authorized representative will be able to recommend a cleaning or boil-out procedure. In the event such service is unavailable or is yet unscheduled, the following information may be of assistance. There are several chemicals suitable for boil-out. One combination often used is soda ash (sodium carbonate) and caustic soda (sodium hydroxide) at the rate of 3 to 5 pounds each per 1,000 pounds of water, along with a small amount of laundry detergent added as a wetting agent is.

The suggested general procedure for cleaning a boiler is as follows:

1. Refer to **Table 3-2:** to determine water capacity. Have sufficient cleaning material on hand to complete the job.
2. When dissolving chemicals, the following procedure is suggested. Warm water should be put into a suitable container. Slowly introduce the dry chemical into the water, stirring it at all times until the chemical is completely dissolved. Add the chemical slowly and in small amounts to prevent excessive heat and turbulence.

**TABLE 3-2. Water capacity and weights**

BOILER HP	WATER – GALLONS		WATER - WEIGHT	
	NORMAL	FLOODED	NORMAL	FLOODED
125	827.3	1295.0	6900	10800
150	827.3	1295.0	6900	10800
200	995.2	1564.7	8300	13050
250	1007.2	1408.9	8400	11750
300	1079.1	1528.8	9000	12750
350	1271.0	1798.6	10600	15000
400	1390.9	2026.4	11600	16900
500	1420.9	2056.4	11850	17150
600	1690.6	2458.0	14100	20500
700	1966.4	2871.7	16400	23950
800	1966.4	2871.7	16400	23950

3. An over-flow pipe should be attached to one of the top boiler openings and routed to a safe point of discharge. A relief or safety valve tapping is usually used.
4. Water relief valves and steam safety valves must be removed before adding the boil-out solution so that neither it nor the grease which it may carry will contaminate the valves. Use care in removing and reinstalling the valves.

**! Warning**

**Use of a suitable face mask, goggles, rubber gloves, and protective garments is strongly recommended when handling or mixing caustic chemicals. Do not permit the dry material or the concentrated solution to come in contact with skin or clothing. Failure to follow these instructions could result in serious personal injury or death**

5. All valves in the piping leading to or from the system must be closed to prevent the cleaning solution from getting into the system.

6. (Fill the pressure vessel with clean water until the top of the tubes are covered. Add the cleaning solution and then fill to the top. The temperature of the water used in the initial fill should be at ambient temperature.
7. The boiler should then be fired intermittently at a low rate sufficient to hold solution just at the boiling point. Boil the water for at least five hours. Do not produce steam pressure. (Allow a small amount of fresh water to enter the boiler to create a slight overflow that will carry off surface impurities.
8. Continue the boil and overflow process until the water clears. Shut the burner down.
9. Let the boiler cool to 120 deg F or less.
10. Remove handhole plates and wash the waterside surfaces thoroughly using a high pressure water stream.
11. After closing the handholes and reinstalling the safety or relief valves, fill the boiler and fire it until the water is heated to at least 180 deg F to drive off any dissolved gases, which might otherwise corrode the metal.

The above procedure may be omitted in the case of a unit previously used or known to be internally clean. However, consideration must be given to the possibility of contaminating materials entering the boiler from the system.

On a steam system, the condensate should be wasted until tests show the elimination of undesirable impurities. During the period that condensate is wasted, be sure make-up water is treated to prevent an accumulation of unwanted materials or corrosion.

On a hot water system, chemical cleaning is generally necessary and the entire system should be drained after treatment. Consult your local Cleaver-Brooks authorized representative for recommendations, cleaning compounds, and application procedures.

## 3.6 - Washing Out

### 3.6.1 - Hot Water Boiler

In theory, a hot water system and boiler that has been initially cleaned, filled with raw water (and water treated), and with no make-up water added, will require no further cleaning or treatment. However, since the system (new or old) can allow entrance of air and unnoticed or undetected leakage of water, introductions of raw water make-up or air may lead to pitting, corrosion and formation of sludge, sediment, scale, etc., on the pressure vessel waterside. If the operator is absolutely certain that the system is tight, then an annual waterside inspection may be sufficient. However, if there is any doubt, the pressure vessel waterside should be inspected no later than three months after initially placing the boiler into operation, and periodically thereafter as indicated by conditions observed during inspections.

<b>! Warning</b>
<b>Be sure to drain the hot water to a safe point of discharge to avoid scalding. Failure to follow these instructions could result in serious personal injury or death</b>

### 3.6.2 - Steam Boiler

No later than three months after initially placing the boiler into operation and starting service, and thereafter as conditions warrant, the pressure vessel should be drained after being properly cooled to

near ambient temperature. Handhole covers should be removed and waterside surfaces should be inspected for corrosion, pitting, or formation of deposits.

### Flushing of Pressure Vessel Interior

Upon completion of the inspection, the pressure vessel interior should be flushed out, as required, with a high pressure hose. If deposits are not fully removed by flushing, a consultation may be required with your local Cleaver-Brooks authorized representative. In extreme cases, it may be necessary to resort to acid cleaning. Professional advice is recommended if acid cleaning is required. The inspections will indicate the effectiveness of the feedwater treatment. The effectiveness of treatment, the water conditions, and the amount of fresh water make-up required are all factors to be considered in establishing frequency of future pressure vessel washouts. Contact your local Cleaver-brooks authorized representative for more information.

## 3.7 - Blowdown Steam Boiler

Boiler water blowdown is the removal of some of the concentrated water from the pressure vessel and its replacement with feedwater so that the lowering of the concentration of solids in the boiler water occurs. Solids are brought in by the feedwater even though the water is treated prior to use through external processes that are designed to remove unwanted substances which contribute to scale and deposit formations. However, none of the processes can remove all substances. Regardless of their high efficiency, some solids will be present in the boiler feedwater. Solids become less soluble in the high temperature of the boiler water and tend to accumulate on heating surfaces. Therefore blowdown and internal chemical treatment are required to prevent the solids from forming harmful scale and sludge.

Scale has a low heat transfer value and acts as an insulation barrier. Scale retards heat transfer, which not only results in lower operating efficiency, and consequently higher fuel consumption, but more importantly, can cause overheating of boiler metal. Over heating of boiler metal can result in tube failures or other pressure vessel metal

damage and lead to boiler down-time and costly repairs. Scale is caused primarily by calcium and magnesium salts, silica and oil. Any calcium and magnesium salts in the boiler water are generally precipitated by the use of sodium phosphate, along with organic materials, to maintain the precipitates or sludge in a fluid form. Solids such as sodium salts and suspended dirt do not readily form scale. But as the boiler water boils off as relatively pure steam, the remaining water is thickened with the solids. If the concentration is permitted to accumulate, foaming and priming will occur and the sludge can cause harmful deposits that bring about overheating of the metal. The lowering or removal of the concentration requires the use of boiler water blowdown.

### 3.7.1 - Types of Blowdown

There are two principal types of blowdown: intermittent manual blowdown, and continuous blowdown.

**Intermittent Manual Blowdown** - Manual or sludge blowdown is necessary for the operation of the boiler regardless of whether or not continuous blowdown is employed.

The blowdown tappings are located at the bottom or lowest part of the boiler in order to lower the dissolved solids in the pressure vessel water, and to remove a portion of the sludge that accumulates in the lower part of the vessel.

Equipment generally consists of a quick opening valve and a shutoff valve. The valves and necessary piping are not normally furnished with the boiler, but supplied by others. All piping must be to a safe point of discharge. Piping must be properly supported and free to expand.

**Continuous Blowdown** - Continuous blowdown is used in conjunction with a surface blowoff tapping (furnished on units 60" diameter and larger) and is the continuous removal of concentrated water. The surface blow-off opening, when furnished, is on the top center line of the pressure vessel. It is provided with an internal collecting pipe terminating slightly below the working water level for the purpose of skimming surface sediment, oil or other impurities from the surface of the pressure vessel water.

A controlled-orifice valve is used to allow a continual, yet controlled, flow of concentrated water. Periodic adjustments are made to the valve setting to increase or decrease the amount of blowdown in accordance with the test analysis.

The flow control valve and piping are generally provided by others.

All piping must be to a safe point of discharge.

**Frequency of Manual Blowdown** - When continuous blowdown is utilized, manual blowdown is primarily used to remove suspended solids or sludge. The continuous blowdown removes sediment and oil from the surface of the water along with a prescribed amount of dissolved solids.

When surface or continuous blowdown is not utilized, manual blowdown is used to control the dissolved or suspended solids in addition to the sludge. In practice, the valve(s) of the bottom blowdown are opened periodically in accordance with an operating schedule and/or chemical control tests. From the standpoint of control, economy and results, frequent short blows are preferred to infrequent lengthy blows. The length and frequency of the blowdown is particularly important when the suspended solids content of the water is high. With the use of frequent short blows a more uniform concentration of the pressure vessel water is maintained.

In cases where the feedwater is exceptionally pure, or where there is a high percentage of return condensate, blowdown may be employed less frequently since less sludge accumulates in the pressure vessel. When dissolved and/or suspended solids approach or exceed predetermined limits, manual blowdown to lower the concentrations is required.

It is generally recommended that a steam boiler be blown down at least once in every eight-hour period, but frequency may vary depending upon water and operating conditions. The blowdown amounts and schedule should be recommended by your local Cleaver-Brooks authorized representative. A hot water boiler does not normally include openings for surface blowdown and bottom blowdown since blowdowns are seldom practiced. The need remains to be alert to system water losses and corresponding amount of raw water make-up. A water meter is recommended for water make-up lines.

**Manual Blowdown Procedure** - Blowdown is most effective at a point in time when the generation of steam is at the lowest rate and feedwater input is also low, thus providing a minimum dilution of the boiler water with low concentration feedwater.

Be sure the blow-off piping and tank, if used, are in proper operating condition. Discharge vents should be clear of obstruction, and the waste should be piped to a point of safe discharge. Most blow-off lines are provided with two valves, generally a quick opening valve nearest the boiler and a slow opening globe type valve downstream.

Valves will vary depending upon pressure involved and make or manufacturer. If seatless valves are installed, follow the manufacturer's recommendations. If a quick opening valve and globe type of slow opening valve are in combination, the former is normally opened first and closed last with blow down accomplished with the globe or slow opening valve. When opening the second or downstream valve, crack it slightly to allow the lines to warm, then continue opening slowly.

The length of each blow should be determined by actual water analysis. Lowering the water in the gauge glass approximately 1/2" is often acceptable as a guide to adequate blow. However, lowering the water 1/2" should not be interpreted as a rule since water analysis procedures should prevail. If the glass cannot be viewed by the party operating the valve, another operator should watch the glass and direct the valve operator. Close the downstream (slow opening) valve first and as fast as possible. Then close the valve next to the boiler. Slightly crack the downstream valve and then close it tightly.

Under no circumstances should a blow-off valve be left open; the operator should never leave until the blowdown operation is completed and the valves are closed.

### 3.8 - Periodic Inspection

Insurance regulations or local laws will require a periodic inspection of the pressure vessel by an authorized inspector. Sufficient notice is generally given to permit removal of the boiler from service and preparation for inspection.

When shutting down the boiler, the load should be reduced gradually and the pressure vessel cooled at a rate that avoids damaging temperature differential that can cause harmful stresses.

Vessels should not normally be drained until all pressure is relieved - again to prevent uneven contraction and temperature differentials that can cause expanded tubes to leak. Draining the unit too quickly may cause the baking of deposits that may be present on the heating surfaces. Some heat, however, may be desirable to dry out the interior of the boiler.

If the internal inspection is being made at the request of an authorized inspector, it is well to ask the inspector observe the conditions prior to cleaning or flushing of waterside surfaces. Be certain that a supply of manhole and handhole gaskets is available, along with any other gaskets or items needed to place the unit back into operation after inspection.

Have available information on the boiler design, dimensions, generating capacity, operating pressure or temperature, time in service, defects found previously, and any repairs or modifications. Also have available for reference records of previous inspections. Be prepared to perform any testing required by the inspector including a hydrostatic test.

After proper cooling and draining of the vessel, flush out the waterside with a high pressure water hose. Remove any scale or deposits from the waterside surfaces and check for internal or external corrosion and leakage.

The fireside surface should also be thoroughly cleaned so that metal surfaces, welds, joints, tube ends, fittings and any previous repairs can be readily checked.

Be sure that steam valves, and valves to expansion tank (hot water), feedwater valves, blow-off valves, all fuel valves, valves to expansion tank, and electrical switches are shut off prior to opening handholes, manhole and front or rear doors. Adequately vent the pressure vessel prior to entry.

Clean out the low-water cutoff piping, the water level controls and cross-connecting pipes. Replace the water gauge glass and clean out the water cocks. Also check and clean the drain and the blowdown valves and piping.

Check all water and steam piping and valves for leaks, wear, corrosion, and other damage. Replace or repair as required.

**! Caution**

**Do not pump the lever action valve open and closed, as water hammer is apt to break the valve bodies or pipe fittings. Failure to follow these instructions could cause damage to the equipment.**

**! Warning**

**To avoid the hazard of electrical shock, we recommend the use of a low voltage flashlight during an internal inspection. Preferably, inspectors should work in pairs. Failure to follow these instructions could result in serious personal injury or death**

### 3.9 - Preparation for Extended Lay-up

Many boilers used for heating or seasonal loads or for stand-by service may have extended periods of non-use. Special attention must be given to idle boilers so that neither waterside nor fireside surfaces are allowed to deteriorate from corrosion.

Too many conditions exist to lay down definite rules. There are two methods of storage: wet or dry. Your local Cleaver-Brooks authorized representative can recommend the better method depending upon circumstances in the particular installation. Whichever method is used, common sense dictates a periodic recheck of fireside and waterside conditions during lay-up to allow variations from the above methods for special area or job-site conditions.

Swing open the boiler head at the stack end of the unit to prevent flow of warm, moist air through the boiler tubes.

Although pollution control regulations may continue to limit the permissible sulfur content of fuel oils, care must be taken to avoid corrosion problems that sulfur can cause, especially in a boiler that is seasonally shut town. Dormant periods, and even frequent shutdowns, expose the fireside surfaces to condensation below the dew point during cooling. Moisture and any sulfur residue can form an acid solution. Under certain conditions, and especially in areas with high humidity, the corrosive effect of the acid will be serious enough to eat through or severely damage boiler tubes or other metal heating surfaces during the time that a boiler is out of service. The condition does not generally occur during normal firing operation, because the high temperature of operation vaporizes any condensation. However, proper boiler operation must be maintained, especially with a hot water boiler, to prevent the flue gases from falling below the dew point.

At the start of lay-up, thoroughly clean the fireside by removing any soot or other products of combustion from the tubes, tube sheets and other fireside surfaces. Brushing will generally suffice. Sweep away or vacuum any accumulation. The fireside surfaces may be flushed with water. However, all moisture must be eliminated after

flushing and the surface dried by blowing air or applying some form of heat. It is good practice to protect the cleaned surfaces by coating them with an anti-corrosive material to prevent rust.

To prevent condensation from forming in the control cabinet, keep the control circuit energized. For extended lay-up periods, especially where high humidity or large swings in ambient temperature occur, the control should be removed and stored in a dry atmosphere.

Dry storage is generally employed when the boiler will be out of service for a significant period of time, or where freezing temperatures may exist. In the dry storage method the boiler must be thoroughly dried because any moisture would cause corrosion.

Both fireside and waterside surfaces must be cleaned of all scale, deposits, soot, etc. Steps must be taken to eliminate moisture by placing moisture-absorbing materials such as quick lime (at 2 pounds for 3 cubic feet of volume) or silica gel (at 5 pounds for 30 cubic feet of volume) on trays inside the vessel. Fireside surfaces may be coated with an anti-corrosive material, or grease or tar paint.

Refractories should be brushed clean and wash-coated. All openings to the pressure vessel, such as manhole and handholes, should be shut tightly.

Feedwater and steam valves should be closed. Damper and vents should be closed to prevent air from reaching fireside surfaces. Periodic inspection should be made and absorption materials renewed.

Wet storage is generally used for a boiler held in stand-by condition or in cases where dry storage is not practical. The possibility of freezing temperatures must be considered. Care must again be taken to protect metal surfaces. Variables preclude definite recommendations. However, it is suggested that the pressure vessel be drained, thoroughly cleaned internally, and re-filled to overflowing with treated water. If deaerated water is not available, the unit should be fired to boil the water for a short period of time.

Additional chemicals may be suggested by your local Cleaver-Brooks authorized representative to minimize corrosion. Internal water pressure should be maintained at greater than atmospheric pressure. Nitrogen is often used to pressurize the vessel. Fireside surfaces must be thoroughly cleaned and refractory should be wash-coated.

---

## 4.1 - General

Chapter 4 outlines the electrical sequencing of various controls through the pre-purge, ignition, run, and shut-down cycles of the burner.

The program relay (flame safeguard) establishes the sequence of operation and directs the operation of all other controls and components to provide an overall operating sequence.

The burner and control system are in starting condition when the following conditions exist:

- Boiler water is up to the correct level, closing the low water cutoff switch.
- The low-water light (panel) is off.
- The operating limit pressure control (steam boiler) or the operating limit temperature control (hot water boiler) and high limit pressure or temperature control are below their cutoff setting.
- All applicable limits are correct for burner operation.
- The load demand light glows.
- All entrance switches are closed and power is present at the line terminals of:
  - Blower motor starter
  - Air compressor motor starter (if provided)
  - Oil heater relay (if provided)
  - Oil pump motor starter (if provided).

The sequences do not attempt to correlate the action of the fuel supply system or feedwater system except for the interlock controls that directly relate to the action of the program relay. Chapters 6 and 7 contain operating instructions and specific information on setting and adjusting the controls.

## 4.2 - Circuit and Interlock Controls

The burner control circuit is a two-wire system designed for 115 Vac, 60 Hz, single-phase power. The electrical portion of the boiler is made up of individual circuits with controls that are wired in a manner designed to provide a safe workable system. The program relay provides connection points for the interconnection of the various circuits.

The controls used vary depending upon the fuel (oil or gas) and the specific requirements of applicable regulatory bodies. Refer to the boiler wiring diagram to determine the actual controls provided. The circuits and controls normally used in the circuits follow and are referred to in the following sequence of operation.

**Notice - The make or model of the program relay provided will vary depending upon job specifications. Please refer to the Wiring Diagram (WD) prepared by Cleaver-Brooks for your specific installation.**

#### **Limit Circuit:**

- Burner switch (BS)
- Operating limit control (OLC) - pressure or temperature
- High limit control (HLC) - pressure or temperature
- Low-water cutoff (LWCO)
- Gas-oil selector switch (GOS) - (Combination burner only)
- Oil drawer switch (ODS)-Oil burner
- Low oil temperature switch (LOTS) - (Nos. 5 and 6 oil only)
- Low gas pressures switch (LGPS)
- High gas pressure switch (HGPS)
- LE Proximity switch interlock
- Fuel valve interlock circuit
- Main gas valve auxiliary switch (MGVAS)
- Oil valve auxiliary switch (OVAS)

#### **Blower Motor Starter Circuit**

- Blower motor starter (BMS)
- Air compressor motor starter (ACMS) (if provided)
- Air purge valve (APV) (Nos. 5 or 6 oil only)

#### **Running Interlock Circuit**

- Blower motor starter interlock (BMSI)
- Combustion air proving switch (CAPS)
- Atomizing air proving switch (AAPS) (if provided)

#### **Low Fire Proving Circuit**

- Low fire switch (LFS)

#### **Pilot Ignition Circuit**

- Gas pilot valve (GPV)
- Ignition transformer (IT)
- Gas pilot vent valve (GPVV) (if provided)

#### **Flame Detector Circuit**

- Flame detector (FD)

#### **Main fuel valve circuit**

- Main gas valve (MGV)
- Main gas vent valve (MGVV) (if provided)

- Oil valve (OV)
- Main fuel valve light (FVL)

#### **Firing Rate Circuit**

- Damper motor transformer (DMT)
- Modulating damper motor (MDM)
- Manual-automatic switch (MAS)
- Manual flame control (MFC)
- Modulating control (MC)

#### **High Fire Proving Circuit**

- High fire switch (HFS)

#### **Running Interlock and Limit Circuit**

- Low oil pressure switch (LOPS)
- High oil pressure switch (HOPS)
- High oil temperature switch (HOTS)
- Auxiliary low-water cutoff (ALWCO)

Certain circumstances may require additional interlock devices not listed above.

### **4.3 - Sequence of Operation - Oil or Gas**

On a combination fuel unit, the gas/oil switch must be set for the proper fuel.

The following sequence occurs with power present at the program relay (PR) input terminals and with all other operating conditions satisfied.

**Pre-Purge Cycle** - When the burner switch (BS) is turned ON and controls wired in the Limit and Fuel Valve Interlock circuits are closed and no flame signal is present, the Blower Motor Start Circuit is powered, energizing the blower motor starter (BMS). The load demand light (LDL) turns on. When firing oil, the air compressor motor starter (ACMS) (if provided) is also powered. Air purge valve (APV) (Nos. 5 and 6 oil only) remains de-energized.

At the same time, the program relay signals the modulating damper motor (MDM) to open the air damper. The damper begins to open and drives to its full open or high fire position. Opening the damper motor allows a flow of purging air through the boiler prior to the ignition cycle.

On certain boilers the circuitry will include a high fire switch (HFS). The purpose of the switch is to prove that the modulating damper motor (MDM) has driven the damper to the open position during the pre-purge cycle. In this instance, the High Fire Proving Circuit is utilized. The controls wired into the Running Interlock Circuit must be closed within 10 seconds after the start sequence. In the event any of the controls are not closed at this time, or if they subsequently open, the program relay will go into a safety shutdown.

At the completion of the high fire purge period, the program relay signals the modulating damper motor (MDM) to drive the air damper to its low fire position. To assure that the system is in low fire position prior to ignition, the

low fire switch (LFS) must be closed to complete the low fire proving circuit. The sequence will stop and hold until the modulating damper motor (MDM) has returned to the low fire position and the contacts of the low fire switch (LFS) are closed. Once the low fire switch is closed, the sequence is allowed to continue.

**Ignition Cycle** - The ignition transformer (IT) and gas pilot valve (GPV) are energized from the appropriate pilot ignition terminal.

The pilot flame must be established and proven by the flame detector (FD) within a 10 second period in order for the ignition cycle to continue. If for any reason this does not happen, the system will shut down and safety lock-out will occur.

With a proven pilot, the main fuel valve(s) (OV or MGCV) is energized and the main fuel valve light (FVL) in the panel is lighted. The main flame is ignited and the trial period for proving the main flame begins. It lasts 10 seconds for light oil and natural gas, and 15 seconds for heavy oil. At the end of the proving period, if the flame detector still detects main flame, the ignition transformer and pilot valve are de-energized and pilot flame is extinguished.

**Run Cycle** - With main flame established, the program relay releases the modulating damper motor (MDM) from its low fire position to control by either the manual flame control (MFC) or the modulating control (MC), depending upon the position of the manual-automatic switch (MAS). This allows operation in ranges above low fire.

With the manual-automatic switch (MAS) set at automatic, subsequent modulated firing will be at the command of the modulating control (MC), which governs the position of the modulating damper motor (MDM). The air damper and fuel valves are actuated by the motor through a linkage and cam assembly to provide modulated firing rates.

**Notice:** The ignition trial cannot be started if flame or a flame simulating condition is sensed during the pre-purge period. A safety shutdown will occur if flame is sensed at this time.

**Notice:** An oil-fired burner may be equipped with an oil pilot rather than a gas pilot. The ignition sequences of both are identical.

Depending upon the requirements of the regulatory body, insurer or fuel being burned, either the 10 or 15 second pilot ignition terminal may be used. Both provide the same function but differ in time interval allowed for proving main flame ignition. Refer to the boiler wiring diagram.

<b>! Caution</b>
If the main flame does not light, or stay lit, the fuel valve will close. The safety switch will trip to lock out the control. Refer to flame loss sequence (section D) for description of action.

<b>! Warning</b>
The cause for loss of flame or any other unusual condition should be investigated and corrected before attempting to restart. Failure to follow these instructions could result in serious personal injury or death.

The burner starting cycle is now complete. The (LDL) and (FVL) lights on the panel remain lit. Demand firing continues as required by load conditions.

**Burner Shutdown/Post Purge** - The burner will fire until steam pressure or water temperature in excess of demand is generated. With modulated firing, the modulating damper motor (MDM) should return to the low fire position before the operating limit control (OLC) opens. When the limit control circuit is opened, the following sequence occurs:

The main fuel valve circuit is de-energized, causing the main fuel valve (MGV) or (OV) to close. The flame is extinguished. The control panel lights (LDL) and (FVL) are turned off. The blower motor continues to run to force air through the boiler for the post purge period.

On a No. 6 oil burner, the air purge valve (APV) is powered from the blower motor start circuit via the contacts of the air purge relay (APR) to provide an air purge of the oil nozzle. The damper motor returns to the low fire position if it is not already in that position.

The blower motor start circuit is de-energized at the end of the post purge cycle and the shutdown cycle is complete.

The program relay is now ready for subsequent recycling, and when steam pressure or water temperature drops to close the contacts of the operating control, the burner again goes through its normal starting and operating cycle.

## 4.4 - Flame Loss Sequence

The program relay will recycle automatically each time the operating control closes, or after a power failure. It will lockout following a safety shutdown caused by failure to ignite the pilot, or the main flame, or by loss of flame. Lockout will also occur if flame or flame simulating condition occurs during the prepurge period. The control will prevent start-up or ignition if limit circuit controls or fuel valve interlocks are open. The control will lock out upon any abnormal condition affecting air supervisory controls wired in the running interlock circuit.

### 1. No pilot flame

The pilot flame must be ignited and proven within a 10-second period after the ignition cycle begins. If not proven within this period, the main fuel valve circuit will not be powered and the fuel valve(s) will not be energized. The ignition circuit is immediately de-energized and the pilot valve closes, the reset switch lights and lockout occurs immediately. The blower motor will continue to operate. The flame failure light and the alarm bell (optional) are energized 10 seconds later. The blower motor will be de-energized. The lockout switch must be manually reset before operation can be resumed.

### 2. Pilot but no main flame

When the pilot flame is proven, the main fuel valve circuit is energized. Depending upon the length of the trial-for-ignition period, the pilot flame will be extinguished 10 or 15 seconds later. The flame detecting circuit will respond to de-energize the main fuel valve circuit within 2 to 4 seconds to stop the flow of

fuel. The reset switch lights and lockout occurs immediately. The blower motor will continue to operate. The flame failure light and alarm bell (optional) are energized 10 seconds later. The blower motor will be de-energized. The lockout switch must be manually reset before operation can be resumed.

### 3. Loss of flame

If a flame outage occurs during normal operation and/or the flame is no longer sensed by the detector, the flame relay will trip within 2 to 4 seconds to de-energize the fuel valve circuit and shut off the fuel flow. The reset switch lights and lockout occurs immediately. The blower motor continues operation. The flame failure light and alarm bell (optional) are energized 10 seconds later.

The blower motor will be de-energized. The lockout switch must be manually reset before operation can be resumed.

If the burner will not start, or upon a safety lockout, refer to the troubleshooting section for assistance in pinpointing problems that may not be readily apparent. The program relay has the capability to self-diagnose and to display a code or message that indicates the failure condition. Refer to the control bulletin for specifics and suggested remedies.

Familiarity with the program relay and other controls in the system can be obtained by studying the contents of the bulletin and this manual. Knowledge of the system and its controls will make troubleshooting much easier. Costly down time or delays can be prevented by systematic checks of the actual operation against the normal sequence to determine the stage at which performance deviates from normal. Following a routine may possibly eliminate overlooking an obvious condition, often one that is relatively simple to correct.

Remember, a safety device, for the most part, is doing its job when it shuts down or refuses to operate. Never attempt to circumvent any of the safety features. Preventive maintenance and scheduled inspection of all components should be followed. Periodic checking of the relay is recommended to see that a safety lockout will occur under conditions of failure to ignite either pilot or main flame, or from loss of flame.

**Note:** Normal operation of the burner should be with the switch in the automatic position and under the direction of the modulating control. The manual position is provided for initial adjustment of the burner over the entire firing range. When a shutdown occurs while operating in the manual position at other than low fire, the damper will not be in a closed position, thus allowing more air than desired to flow through the boiler. Excess air flow subjects the pressure vessel metal and refractory to undesirable conditions. The effectiveness of nozzle purging is lost on a No. 6 oil burner.

#### **! Caution**

**The lockout switch must be manually reset following a safety shutdown. The cause for loss of flame or any unusual condition should be investigated and corrected before attempting to restart. Failure to follow these instructions could cause damage to the equipment.**

# *Starting and Operating Instructions*

---

## 5.1 - General Preparation for Start-up, All Fuels

Instructions in this chapter are all based upon the installation being complete and all electrical, fuel, water and vent stack connections made.

The operator should be thoroughly familiar with the burner, boiler, and all controls and components before proceeding.

Verify supply of fuel and proper voltage. Check for blown fuses, open circuit breakers, dropped out overloads, etc. Check reset of all starters and controls having manual reset features. Check the lockout switch on the programmer and reset if necessary. The boiler should be filled with water to the proper operating level using water of ambient temperature. Be sure that treated feedwater is available. In heating applications, the entire system should be filled and vented. Refer to Chapter 3 for water requirements. On a steam boiler, open the test valve to vent air displaced during filling. Leave the test valve open until the escape of steam is noted after the burner is operating. Check all linkage for full and free movement of the damper and metering valves and cams. The check can be done by loosening the linkage at the damper motor connecting arm and manipulating the linkage by hand.

Check for rotation of all motors by momentarily closing the motor starter or relay. The blower impeller rotation is counter-clockwise when viewed from the front of the boiler. The air pump rotation is clockwise when viewed from its drive end. Before operating the boiler feed pump or oil supply pump, be sure all valves in the line are open or properly positioned.

For safety reasons, perform a final pre-startup inspection, especially checking for any loose or incomplete piping or wiring or any other situations that might present a hazard.

### **Notice**

**If your boiler is equipped with a HAWK boiler management control system, refer to the controls manual for additional startup information.**

 **Warning**

The warning icon consists of a black triangle with a white exclamation mark inside.

**It is recommended that the starting instructions be read completely until they are thoroughly understood, before attempting to operate the boiler, rather than performing each operation as it is read for the first time. Failure to follow these instructions could result in serious personal injury or death**

 **Warning**

**Prior to firing a boiler, be sure that discharge piping from safety valves or relief valves, and discharge piping from all blowdown and drain valves, is piped to a SAFE point of discharge, so that emission of hot water or steam cannot possibly cause injury. Failure to follow these instructions could result in serious personal injury or death.**

The pressure vessel support legs are welded to mounting skids in front and secured by bolts at the rear of the pressure vessel. The bolts are tightened for shipment. When the boiler is installed, and prior to initial firing, the bolts securing the rear legs to the skid must be loosened to allow for expansion and contraction caused by differences in temperature between pressure vessel and skids and to avoid damage to the equipment.

## 5.2 - Control Settings - Steam and Hot Water

Inspect the operating limit control for proper setting.

1. The pressure control of a steam boiler should be set slightly above the highest desired steam pressure, but at least 10% lower than the setting of the safety valve.
2. The temperature control on a hot water boiler should be set slightly above the highest desired water temperature and within the limits of the pressure vessel. Inspect the high limit control for proper setting.
3. On a high pressure steam boiler, the control should be set approximately 10 psig above the operating limit pressure control setting, if feasible, or midway between the operating limit pressure and the safety valve setting. The setting on a low pressure steam boiler may be 2 or 3 psig above the operating limit setting, but must not exceed the safety valve setting.
4. On a hot water boiler, the high limit temperature control should be 5-10 deg F above the operating limit temperature control setting but within the limits of the design pressure of the pressure vessel.

Inspect the modulating control for proper setting. The control must be set and adjusted so that the modulating motor returns to low fire position before the operating limit control opens. It is further desirable to have its low point setting somewhat below the cut-in setting of the limit control so that the burner operates in low fire position for a brief period on each start rather than immediately driving to a high fire position.

Inspect the low-water cutoff and pump control as well as the auxiliary low-water cutoff (if equipped with this optional device). Check for freedom of float movement. Float movement can be verified by observing the level of water in the gauge glass when the water supply has been cut off either by the stopping of the feed pump or by the closing of a valve, and the restarting of the pump or opening of the valve when water is drained from the pressure vessel. The importance of proper functioning of low-water controls cannot be over-emphasized. Be sure that the control and the piping is level. The settings of controls relating to fuel, either oil or gas, are covered in subsequent sections.

In the event the boiler is equipped with optional control devices not listed here, be certain to ascertain that their settings are correct. If additional information is required, see your local Cleaver-Brooks authorized representative or contact Cleaver-Brooks.

On initial start-up or whenever the boiler is placed into operation from a “cold” start, the manual-automatic selector switch should be set at MANUAL and the manual flame control set at CLOSE. After the boiler is in operation and thoroughly warmed, the selector switch should be turned to AUTOMATIC, so that the burner firing rate may be controlled by the modulating control in accordance with load demands.

Close all power entrance switches (supplied by others).

Notice
<p>The settings of all the above controls may require some readjustment after the boiler is started and running for a short period. The scale settings on the controls are relatively accurate, but are principally for use as guides. Final adjustment should be based on and agree with the reading of the steam pressure gauge or the water temperature thermometer.</p>

### 5.3 - Gas Pilot


The gas pilot should be checked for satisfactory performance prior to initial firing. Follow the pilot flame adjustment instructions given in Chapter 6.

On initial starting attempts, several efforts might be required to fully bleed the pilot line. While checking pilot adjustment, observe whether the pilot flame is extinguished promptly when the burner switch is opened. A lingering flame indicates a leaking gas pilot valve, which is a condition requiring correction before proceeding.

### 5.4 - Atomizing Air

The supply and pressure of the atomizing air on an oil-fired burner should be checked. Before starting, inspect the oil pump lube oil level. Add oil if necessary to bring the level to the mid-point or slightly higher of the sight glass. Use SAE 20 detergent oil of a grade mentioned in Chapter 8 and fill in accordance with instructions given there.

Check the oil level of the air intake strainer.

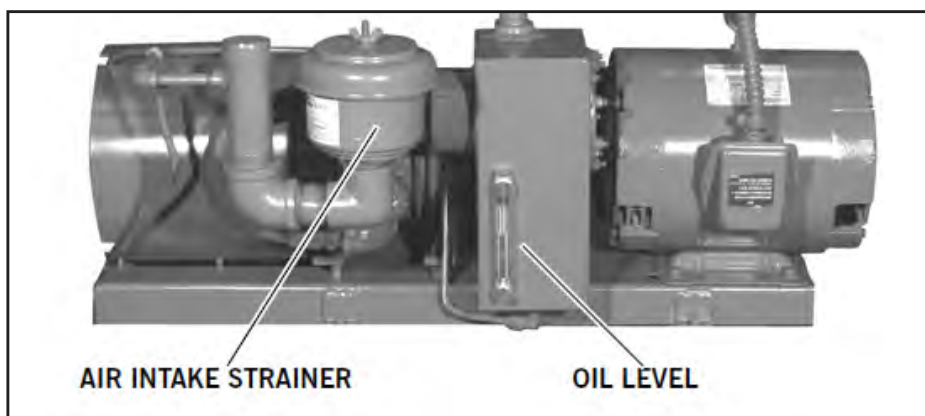

To verify air flow and pressure, place the burner run/test switch on the program relay to the test position. If the burner is a combination fuel burner, be sure that the gas/oil selector switch is set to OIL.

Turn the burner switch on. The burner will cycle to the low fire prepurge position and stop there. Observe the reading on the air pressure gauge. With no oil flow, the pressure should be a minimum of 7 psi. If there is no pressure, determine the cause and correct it before proceeding. Check for obstructions in the air inlet line, incorrect rotation (air pump rotation is clockwise), or a loose oil nozzle or other leaks. If the pressure is much higher without any oil flow, check for obstruction in the discharge line or at the oil nozzle. The air pressure will increase when an oil flow exists. At low firing rate, the air pressure may rise to 12 psi or more. After air flow has been verified, turn the burner switch off and return the run/test switch to the run position.

**Notice**


**Abnormally high pressure indicated on the nozzle air pressure gauge is an indication that the burner nozzle has become clogged. In the event of clogging, check the nozzle and clean as necessary.**

**Notice**


**The air pressure should not exceed 35 psi at high fire. Greater air pressure causes excessive wear of the air pump, increases lube oil usage, and can overload the motor, thus causing damage to the equipment.**

## 5.5 - Firing Preparations for No. 2 Oil (Series 100-200)

Prior to initial firing, oil flow and pressure, as well as atomizing air pressure, should be established and verified. The schematic flow diagram (Chapter 2) indicates the flow of fuel and atomizing air. If the burner is a combination fuel model, be certain that the main gas shutoff cock is closed and set the gas/oil selector switch to OIL. Insert the burner drawer gun into its most forward position and latch it in place.

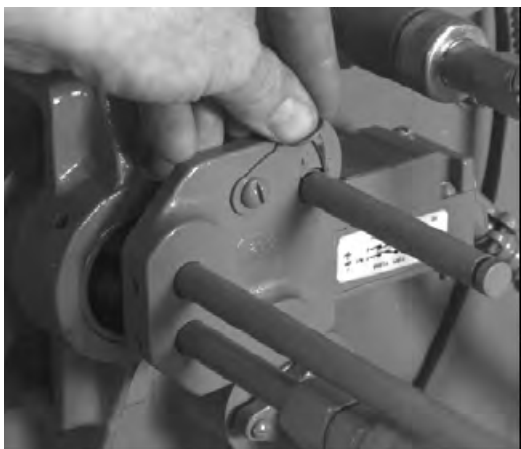

**FIGURE 5-1. Oil Gun Latch**

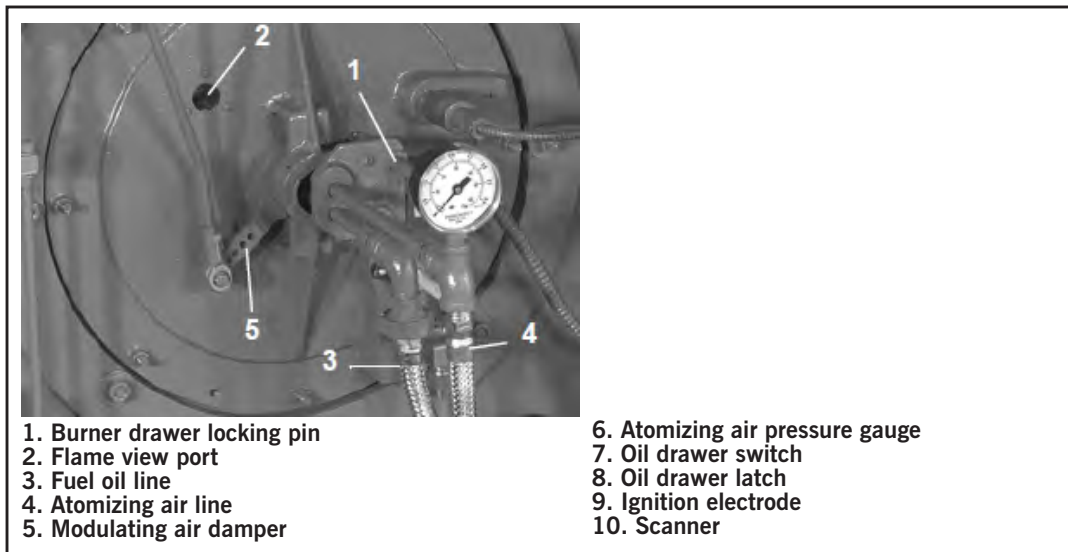

**FIGURE 5-2. Burner drawer w/ oil gun positioned for oil firing**

**Oil Flow** - Open all valves in the oil suction and oil return lines. If the oil supply tank is located above the level of the pump and flow to the pump is by gravity, then it will usually be necessary to vent the suction line to allow oil to fill the line. Venting the suction line can generally be accomplished by cracking a union fitting, or by opening the cap of the oil strainer using care to prevent spillage of oil. Tighten the fitting or the cap as soon as oil flow appears.

If the oil supply tank is below the level of the oil pump, it is **MANDATORY** that the suction line to the pump be completely filled with oil prior to starting the pump to avoid the possibility of damage to the pump gears. Non-lubricating fluids such as kerosene should not be used for priming. Prior to priming the suction line and the initial start, check to make certain that all plugs, connections, etc., have been securely tightened to prevent leaks.

If the fuel oil supply originates from a pressurized loop, it is assumed that the pressure of the loop will be at a minimum of 75 psi. Under these conditions, the relief valve at the terminal block should be adjusted to the point where it becomes inoperative (or removed and openings plugged). To render inoperative, turn the adjusting screw in as far as possible.

A standardly equipped boiler has a selector switch incorporated in the oil pump motor starter. Momentarily energize the starter to check for proper pump rotation. With the rotation verified, operate the pump to determine that oil circulation exists. Observe the oil burner pressure gauge for indication that flow is established. If no pressure shows on the gauge after a few moments, stop the oil pump and re-prime.

If the supply tank is lower than the pump, it is possible that the initial priming of the suction line, followed by operation of the pump, will not establish oil flow. This might be caused by obstruction in the suction line, excessive lift, inadequate priming, suction line leaks, etc. If oil flow is not readily established, avoid prolonged operation of the pump to minimize risk of damage to internal parts of the pump. If oil flow is not established after a second or third priming attempt, a full investigation is required to determine the cause.

A vacuum (or a compound pressure-vacuum) gauge should be installed at the suction port of the pump and its reading observed and recorded for future guidance. If a vacuum condition exists, the reading will reveal the tight-

ness of the system. It is advisable to maintain the vacuum reading at less than 10" WC. A vacuum in excess of 10" WC may allow oil to vaporize, causing cavitation, loss of prime, and unstable firing condition.

**Oil Pressure** - Oil supply pressure is regulated by adjusting the pressure relief valve at the oil terminal block. A pressure gauge should be installed in the terminal block and the relief valve adjusted to obtain a minimum reading of 75 psi when the burner is firing at maximum rate.

When oil is supplied from a pressurized loop to a multiple boiler installation, the relief valve in the loop should be properly adjusted to provide this reading. In this circumstance, the relief valve at the terminal block should be adjusted to the point when it will be inoperative (or removed and openings plugged). To render inoperative, turn the adjusting screw in as far as possible.

Adjustment may also be required to the regulator on the fuel oil controller. The pressure regulating valve is equipped with tubing that directs and adds atomizing air pressure to the adjustable spring pressure. Since the air pump is not running at this time, only tentative adjustment can be made. Without the air supply, adjust the fuel oil pressure regulator so that the oil burner gauge registers approximately 35 psi.

The pressure gauge will indicate a higher reading when the flame is present and will increase as the firing rate increases. After the burner is firing and when the air pump is running, final adjustment can be made at the fuel oil controller. Final regulation of oil flow to the nozzle can be done later, if necessary, by adjusting the metering cam screws as outlined in Chapter 6.

**Starting** - When all the conditions covered above and in Sections 5-1 through 5-4 are assured, the burner is ready for firing.

## 5.6 - Firing Preparation for No. 6 Oil (Series 400-600)

Prior to initial firing, oil flow, pressure and temperature should be established and verified. Atomizing air pressure should also be established as outlined in Section D. The schematic flow diagram (Chapter 2, Figure 2-24) indicates the flow of fuel and atomizing air.

If the boiler is a combination fuel model, be certain that the main gas shutoff cock is closed and set the gas/oil selector switch to OIL. Insert the burner drawer gun into its most forward position and latch it in place.

**Oil Flow** - Open all valves in the oil suction and oil return lines. Open the by-pass valve on the fuel oil controller until oil flow is established. Normally, the orifice valve is left in a closed position. However, on cold starts, it may be opened for brief periods to aid in establishing oil flow. The by-pass and orifice valves must be returned to their closed positions as soon as oil flow is established as indicated by a reading on the oil supply pressure gauge. Do not attempt to set pressures while valves are open.

Momentarily energize the fuel oil pump starter to check for proper pump rotation. With the rotation verified, prime the suction line strainer with oil and turn the fuel oil pump switch to the ON position. Check the oil supply pressure gauge for indication that oil flow is established. If no pressure shows on the gauge after a few moments, stop the oil pump and re-prime. Heavy oil in the storage tank must be at a temperature to provide oil viscosity to permit flow through the oil pump and suction line. If oil flow is not established after several attempts, the conditions preventing oil flow must be determined and corrected to avoid damage to the pump's internal mechanism.

A vacuum gauge should be installed in the oil suction line and its reading observed and recorded for future guidance.

**Oil Pressure** - Oil pressure is regulated at several points. The first is at the relief valve at the oil heater. The relief valve should be set so that at maximum firing rate a minimum reading of 75 psi is obtained on the oil supply pressure gauge.

The other pressure adjustments are to the regulators on the fuel oil controller. Both the pressure regulating and the back pressure relief valves are equipped with tubing that directs and adds atomizing air pressure to the adjustable spring pressure. Since the air pump is not running at this time, only tentative adjustments can be made. Without the air supply, adjust the fuel oil pressure regulator so that the burner oil gauge registers approximately 35 psi. Adjust the back pressure relief valve so that its gauge reads about 10 psi less than the burner gauge.

After the burner is firing, further adjustments can be made, if necessary, to the valves.

The pressure gauges will indicate higher readings when a flame is present. The pressure will increase as the firing rate increases. The pressure reading on the two gauges on the controller will, despite the fluctuation, retain a nearly constant difference of 10 psi.

Final regulation of oil flow to the nozzle can be done, if necessary, by adjusting the metering cam screws as outlined in Chapter 6.

**Oil Temperature** - After determining that the heater shell is filled and that fuel oil circulation exists, turn the oil heater switch to ON. Adjust the electric oil heater thermostat to maintain oil temperature at approximately 200 deg F. The electric heater on burners equipped for No. 6 fuel oil is sized so that it is capable of supplying heated oil at a rate no greater than that required for low fire operation and is primarily supplied for convenience on cold starts. Heating coils utilizing either steam or hot water are supplied to provide sufficient heat so that higher rates of firing can be accomplished once steam pressure or hot water is available. In normal operation, the thermostat governing the electric heating element is kept at a lower setting than the thermostat governing admission of steam to the heater, or of hot water circulation, so that heating is not performed electrically except when steam or hot water is not available.

Set the steam thermostat or the hot water thermostat to maintain an oil temperature of 220-230 deg F. The electric heater will be turned off automatically as soon as steam or hot water provides heat.

Close the manual by-pass valve after the temperature rise on the fuel oil controller thermometer is noted. Be certain that hot oil is moving through the controller. The orifice gate valve must also be closed. If the temperature drops, open the orifice gate valve until a rise is noted, then close it.

Once the correct setting of the heater thermostats has been established, set the low oil temperature switch at the point approximately 30 deg F lower than the normal burning temperature. If the system is equipped with a high oil temperature switch, it should be set to open at 20 -30 deg F higher than normal burning temperature.

**Starting** - When all the conditions covered above and in Sections 5-1 through 5-4 are assured, the burner is ready for firing.

## 5.7 - Firing Preparations for Gas (Series 200-400-700)

### ! Caution

Before turning on the electric oil heater switch, be certain that the heater shell is filled with fuel oil and the flow is established. Failure to follow these instructions could result in equipment damage.

### Notice

The temperatures listed are tentative. The composition of the necessitating a higher or lower preheating temperature. The viscosity of the oil at the nozzle should be less than 300 SSU and The actual temperature of the oil at the burner should be determined by flame appearance and good combustion based on a stack analysis.

Prior to initial starting, check the linkage attached to the gas butterfly valve to assure that movement is free from binding. Verify the presence and availability of gas. On a new installation, representatives of the gas utility should be present when gas first flows into the system to supervise purging of the new gas line, unless they have already done so.

- Determine that the pilot is operating properly.
- Determine that sufficient pressure exists at the entrance to the gas train by installing a test gauge downstream of the regulator.
- The gas pressure regulator must be adjusted to the proper pressure level. Since the regulator is generally supplied by others, adjustment should proceed according to instructions supplied by its manufacturer.

It is necessary for the operator to know the burner requirements in gas quantity and pressure. The information can generally be found on the Dimension Diagram (DD) supplied by Cleaver-Brooks for the specific installation. Should the information not be readily available, consult the Cleaver-Brooks Service Department giving the boiler serial number. Chapter 6 contains additional information along with standard gas flow and pressure requirements.

- If the burner is a combination fuel model, set the gas/oil switch to GAS. Withdraw the oil burner gun and latch it in its rearward position.
- On initial start-up, it is recommended that the main gas shutoff cock remains closed until the programmer has cycled through prepurge and pilot sequences. When the fuel light on the control panel comes on, observe the action of the motorized gas valve stem to determine that it opens when energized. As soon as it is confirmed, turn the burner switch OFF and let programmer finish its cycle. Check that the gas valve has closed. Again, turn the burner ON. When the fuel valve light glows, slowly open the main gas cock. Main flame should ignite unless there is air present in the line. If the flame is not established within about 5 seconds, turn the burner switch OFF and allow the programmer to recycle normally for a new lighting trial. Several efforts may be necessary to bleed air from the line.

The burner and control system are designed to provide a prepurge period of fan operation prior to establishing ignition spark and pilot flame. Do not attempt to alter the system or to take any action that might circumvent the feature.

Once the main flame is established, turn the burner switch to the OFF position and observe that the flame is extinguished promptly. The flame may continue to burn for a second or two after normal shutdown due to the gas remaining downstream from the fuel valve. If the flame continues to burn for a longer period or during blower motor spindown, it could indicate a main gas valve leak. Immediately turn the burner switch off and close the main gas cock. Investigate and correct the cause of the valve leakage before relighting the burner. *The main gas*

*valve should provide a tight seal, provided nothing prevents tight closure. Foreign material may be present in either the new or renovated gas lines unless adequate care is taken in cleaning and purging.*

 **Warning**

**Do not repeat unsuccessful lightoff attempts without rechecking the burner and pilot adjustments. Failure to follow these instructions could result in serious personal injury or death**

When the conditions covered above and in Sections 5-1 through 5-4 are assured, the burner is ready for firing.

## 5.8 - IFGR Setup

It is recommended that the final installed settings as noted on **Figure 5-13**, **Figure 5-14** and **Figure 5-15** be recorded for future reference. The settings should be marked on the linkage as well.

Normally, once the system has been set and adjusted, the settings should not be changed unless conditions (including boiler settings) change. In that case, it will be necessary to contact your local Cleaver-Brooks authorized representative for assistance.

After the IFGR system is initially set up, it will start up with the boiler as an integrated boiler system. After shut down periods in which maintenance and /or adjustments have been performed on the fuel cams, fuel and air linkages, or IFGR control linkages, the recommended approach to start-up is as follows:

1. Set all boiler components to their initial settings as discussed in the appropriate chapters of this Operation and Maintenance manual.
2. Check fan impeller and motor rotation. Correct rotation is counter-clockwise when viewed from the front of the boiler.
3. Verify that all the IFGR components are set to the settings recorded on the Start Up report or in **Figure 5-13**, **Figure 5-14** and **Figure 5-15** (as noted by the Cleaver-Brooks authorized representative during original set up). Be sure that all linkages are secure.
4. Start and warm the boiler as described in this Operation and Maintenance manual.
5. Adjust the boiler components as described in this Operation and Maintenance manual to achieve proper boiler operation. Refer to Chapter 8, Figure 8-8 for instructions on cassette removal and installation.

**Notice**

**The burner and control system are designed to provide a prepurge period of fan operation prior to establishing ignition spark and pilot flame. Do not attempt to alter the system or to take any action that might circumvent this feature.**

**Notice**

**Initial IFGR linkage settings and adjustments must be established by a Cleaver- Brooks authorized representative. Set up of the LE Option requires simultaneous consideration of air-to-fuel ratios and NO<sub>x</sub> levels. This can only be accomplished with proper combustion emissions monitoring equipment with NO<sub>x</sub>, O<sub>2</sub>, CO, and smoke spot measuring capability.**

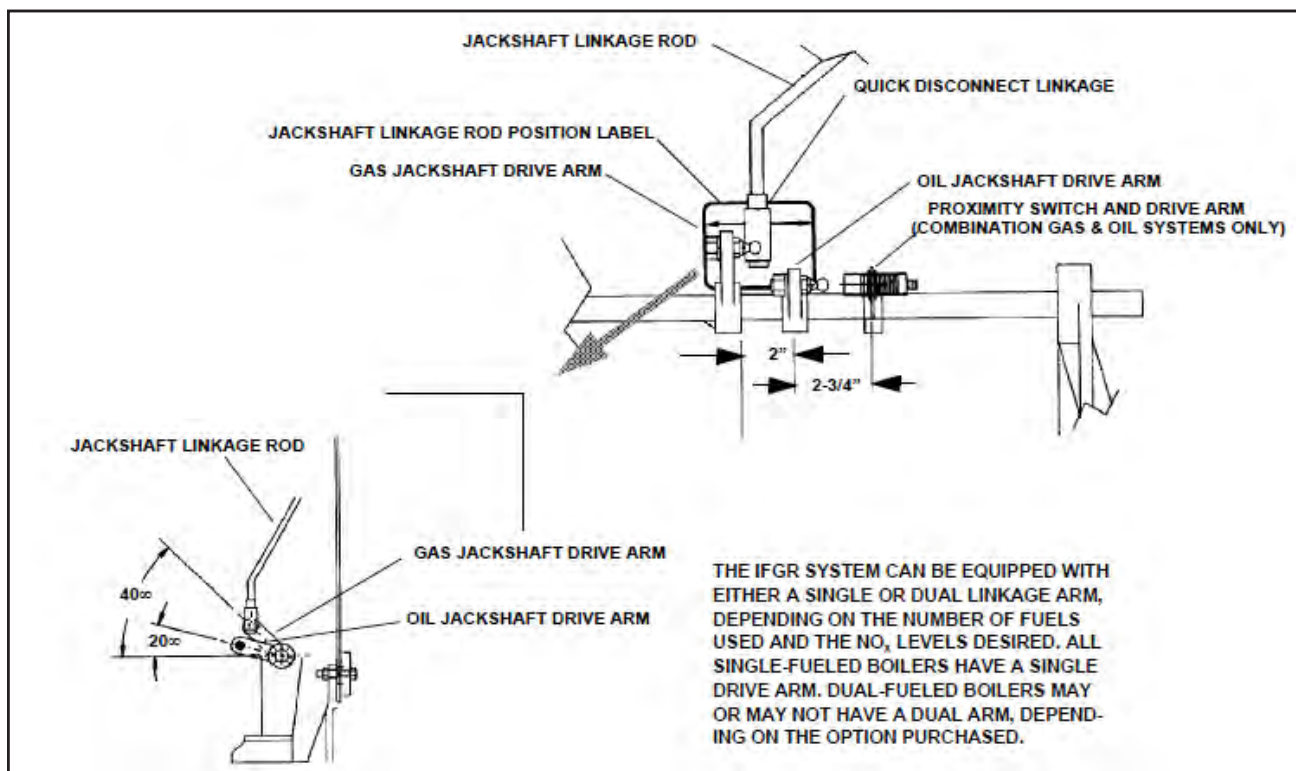


FIGURE 5-3. Jackshaft Linkage Settings

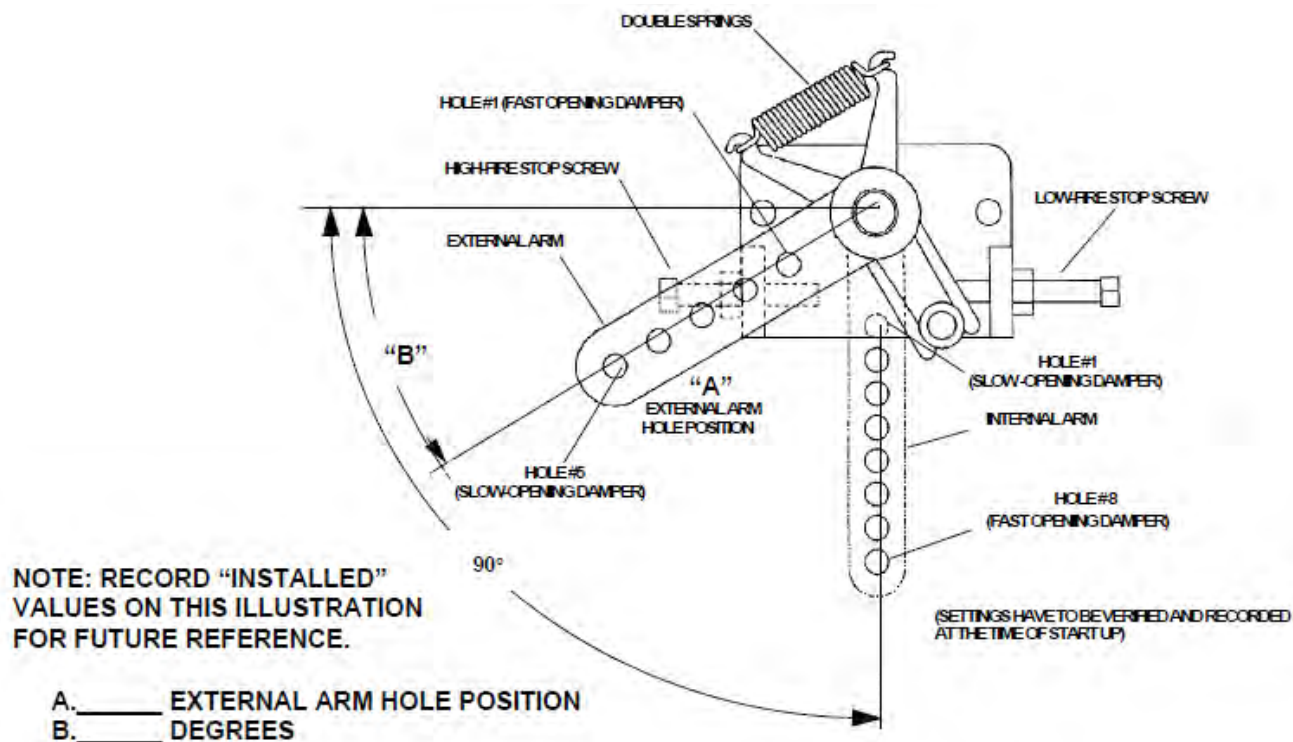


FIGURE 5-4. Overtravel Linkage Settings

## 5.9 - Start-up, Operating and Shutdown - All Fuels

Depending upon the fuel being burned, the applicable previous sections in Chapter 5 should be reviewed for preliminary instructions.

When firing with oil, be certain that the burner gun is in its most forward position and latched in place. When firing with gas, the burner gun should be properly withdrawn and latched in place. The fuel selector switch should be, accordingly, set to either oil or gas.

Set the manual-automatic switch to MANUAL and turn the manual flame control to CLOSE. Turn burner switch to ON. The load demand light should glow. The low-water level light should remain out, indicating a safe water level in the boiler. The programmer is now sequencing. See Chapter 4 for sequence details.

On ignition failure, the flame failure light will glow and the blower will purge the boiler of unburned fuel vapors before stopping. After ignition failure, wait a few moments before re-setting the lockout switch.

After main flame ignition, the burner should be set on manual control at its low fire setting (that is, with manual flame control at CLOSE) until the boiler is properly warmed. Close the steam header.

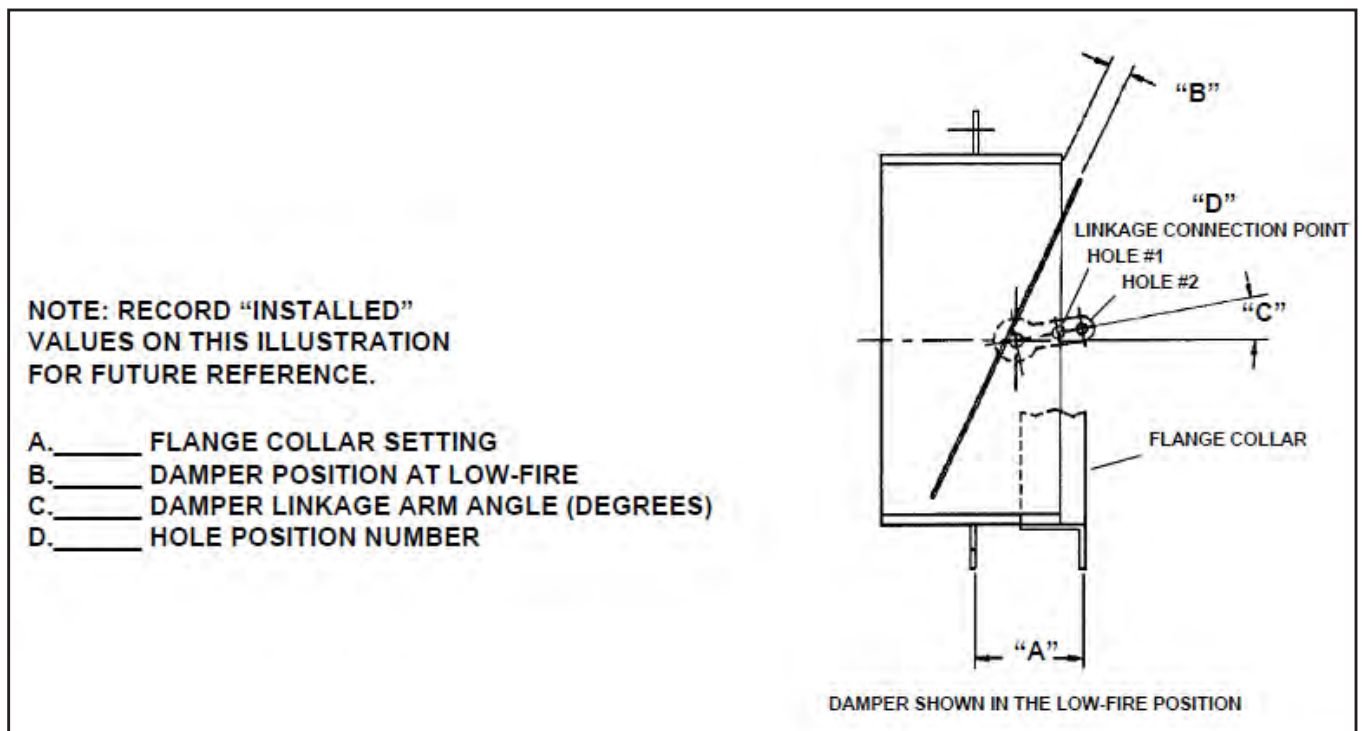


FIGURE 5-5. Figure 5-15 Flange Collar and Damper Settings (Top View)

**Notice** - On an initial starting attempt, several efforts might be required to accomplish bleeding of fuel lines, main or pilot. If ignition does not then occur, do not repeat unsuccessful attempts without rechecking the burner and pilot adjustment.

In the case of a steam boiler, CLOSE THE TEST VALVE when the steam begins to appear.

A hot water boiler must have a continuous flow of system water through the vessel during the warm-up period. The entire water content of the system and boiler must be warmed prior to increasing fuel input.

If the flame at low fire provides insufficient heat to reach normal operating pressure or temperature after 30 minutes, gradually increase the firing rate by turning the manual flame control in one point increments to no higher than the third cam screw. Operate at the increased fuel input rate for a period of time until an increase is noted in pressure or temperature.

After the boiler is thoroughly warmed, turn the manual flame control to high fire. At this point a combustion analysis should be made, with instruments, and fuel flow regulated as required. Refer to the adjustment procedures in Chapter 6. After making the high-fire adjustment, manually decrease the firing rate, stopping at each cam screw to analyze combustion gases, and adjust as required. To properly perform the testing and adjusting, it is necessary that the burner be allowed to fire at a maximum rate long enough to achieve desired results.

**Operating** - Normal operation of the burner should be with the switch in the automatic position and under the direction of the modulating control. The manual position is provided for initial adjustment of the burner over the entire firing range. When a shutdown occurs while operating in the manual position at other than low fire, the damper will not be in a closed position, thus allowing more air than desired to flow through the boiler. The hot flame to cool air cycling subjects the pressure vessel metal and refractory to undesirable conditions.

With the switch set at AUTO, the burner will operate on a modulating basis according to the load demand. The burner will continue to operate with modulated firing until the operating limit pressure or temperature is reached, unless:

1. The burner is manually turned OFF.
2. The low-water condition is detected by low-water level control.
3. The electrical or fuel supply is interrupted.
4. The combustion air pressure or atomizing air pressure drops below minimum level.

**Note:** There can be other reasons for shutdown such as motor overload, flame outages, tripped circuit breakers, blown fuses, or through other interlock devices in the circuitry.

When the burner is shut down normally, by either the operating limit control or by manually switching the burner off, the load demand light will turn off.

Shutdown through conditions causing safety or interlock controls to open will actuate the flame failure light (and alarm if so equipped) and the load demand light will remain lit. The cause of this type of shutdown will have to be located, investigated, and corrected before operation can be resumed. Refer to the trouble-shooting section in Chapter 7.

**Shutdown** - When the operating limit control setting is reached to open the circuit or if the burner switch is turned OFF, the following sequence occurs. The fuel valve is de-energized and the flame is extinguished. The timer begins operation and the blower motor continues running to force air through the furnace in the post-purge period.

At the end of the programmed post-purge period, the blower motor is turned off. The air pump motor of an oil-fired burner is also turned off. The timer has returned to its original starting position and stops. The unit is ready to re-start.

 **Warning**

**It is advisable to check for tight shut-off of fuel valves. Despite precautions and strainers, foreign material in either new or renovated fuel lines may lodge under a valve seat and prevent tight closure. The situation is especially true in new installations. Promptly correct any conditions causing leakage. Failure to follow these instructions could result in serious personal injury or death**

## 5.10 - Control Operational Checks

Proper operation of the various controls should be verified and tested when the boiler is initially placed into service, or whenever a control is replaced. Periodic checks should be made thereafter in accordance with a planned maintenance program.

The operating limit control may be checked by allowing steam pressure or water temperature to increase until the burner shuts down. Depending upon the load, it may be necessary to manually increase the firing rate to raise steam pressure to the burner shut off point. If the load is heavy, the header valve can be closed or throttled until the pressure increases. Observe the steam gauge to check the cut off pressure as the operating limit control shuts the burner down. Slowly open the header valve to release steam pressure and check the cut-in setting as the burner restarts. Check the modulating control for the desired operating pressure range. See Chapter 6 for instructions on the adjustment of controls.

The water temperature on a hot water boiler that may be operating at less than full load may be raised by manually increasing the firing rate until the burner shuts down through the action of the operating limit control. Observe the thermometer to verify the desired settings at the point of cut-out and again when the burner restarts. Return the manual automatic switch to AUTOMATIC and check the modulating control for the desired temperature range. See Chapter 6 for instructions on the adjustment of the controls.

Check the proper operation and setting of the low-water cutoff (and pump operating control, if used). Proper operation of the flame failure device should be checked at startup and at least once a week thereafter. Refer to Chapter 8 for information on flame safety checks. Check the program relay's annunciation for any system failure. Observe the promptness of ignition of the pilot flame and the main flame.

Check for tight shut-off of all fuel valves. Despite precautions and strainers, foreign material may lodge under a valve seat and prevent tight closure. Promptly correct any conditions that cause leakage.

Refer to the adjustment procedures and maintenance instructions given in Chapters 6 and 8.



---

## 6.1 - General

Each Cleaver-Brooks boiler is tested for correct operation before shipment from the factory. However, variable conditions such as burning characteristics of the fuel and operating load conditions may require further adjustment after installation to assure maximum operating efficiency and economy.

A combustion efficiency analysis made during the initial start-up will help to determine what additional adjustments are required in a particular installation.

Prior to placing the boiler into service, a complete inspection should be made of all controls, connecting piping, wiring, and all fastenings such as nuts, bolts and setscrews to be sure that no damage has occurred, or that adjustments have not changed during shipment and installation.

The adjustment procedures in Chapter 6 apply to standard components furnished on steam or hot water boilers fired with gas and/or the various grades of oil.

### **HIGH TURNDOWN BURNER**

In order to reduce stress on boiler components and to improve boiler operating efficiency, burners have been designed for enhanced fuel turndown capabilities. A High Turndown Burner (HTB) is installed on boilers equipped to fire light oil (Series 100), or gas (Series 700), or both (Series 200). Air and fuel inlets, the diffuser, and the air damper control linkage have been modified for these burners.

Contact your local Cleaver-Brooks authorized representative or the Cleaver-Brooks Service Department for recommendations covering special controls that are not included in Chapter 6.

## 6.2 - Linkage - Modulating Motor and Air Damper

The linkage consists of various arms, connecting rods, and swivel ball joints that transmit motion from the modulating motor to the metering cam(s), to the rotary air damper, and to the gas butterfly valve, if used.

When properly adjusted, a coordinated movement of the damper and metering cams within the limits of the modulating motor travel is attained to provide proper fuel-air ratios through the firing range.

In linkage adjustments there are several important factors that must serve as guides.

1. The modulating motor must be able to complete its full travel range.
2. Initial adjustment should be made with the motor in full closed position, that is with the shaft on the power end of the motor in its most counterclockwise position.
3. The closer the connector is to the drive shaft, the less the arm will travel; the closer the connector is to the driven shaft, the farther that arm will travel.
4. Over-travel linkage, where used, should not be required in order to extend its spring to the fullest stretch.

**Notice**

If your boiler is equipped with a Cleaver-Brooks HAWK boiler management control system, refer to the appropriate manuals when necessary for specific information regarding procedures described in this section.


**Notice**

Observe that proper air damper linkage and fuel metering adjustment procedures are followed for standard (Series 400 or 600) or HTB (Series 100, 200, or 700) burners to avoid damage to the equipment. The burner series is identified on the boiler data plate affixed to the front head of the boiler

**! Caution**


**Do not restrict the full travel of the modulating motor. Failure to follow these instructions could result in equipment damage.**

With the modulating motor in the low fire position, the arm on its shaft should be at an angle of 45 deg below the horizontal. The driven arm on the jack shaft should also be 45 deg below horizontal. Secure both arms and fit the connecting linkage rod in place between them. Refer to **Figure 6-1**.

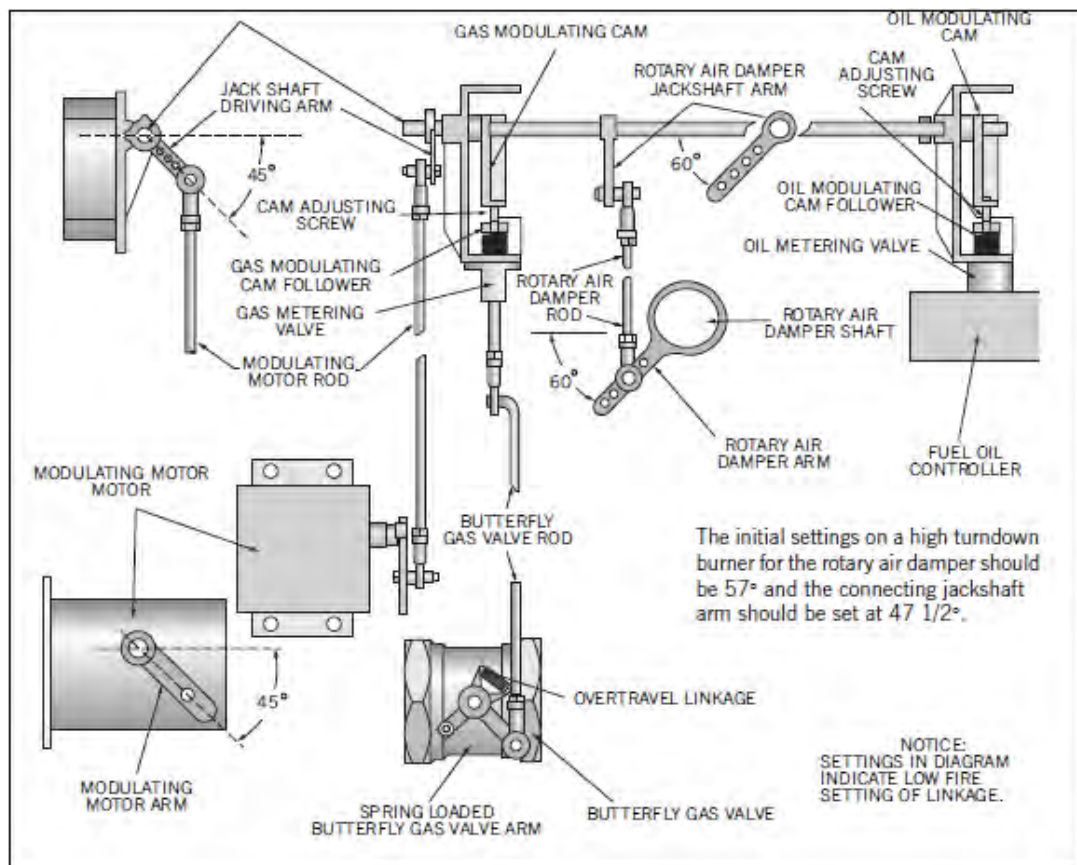

**FIGURE 6-1. Linkage assembly - combination burner**

Position the oil and/or gas modulating cams on the jackshaft so that the cam follower assembly is between the first and second cam adjusting screws (under the first adjusting screw for High Turndown Burners). In this position, fuel delivery is at low fire rate. Tighten the set screws to secure the cams on the jackshaft. Refer to **Figure 6-2**. The stop screw in the rotary air damper limits damper travel at both closed (low fire) and fully opened (high fire) positions. The screw is provided so that it is possible to tell, even with the burner in place, whether the damper rotor is in fully opened or closed position. Rotating the clockwise to the stop screw closes the damper. Rotating the damper counterclockwise to the stop screw opens the damper. Normally, the rate of flow of air through the damper with the rotor in low fire position is about one-third of maximum for a standard burner or one-sixth for a HTB.

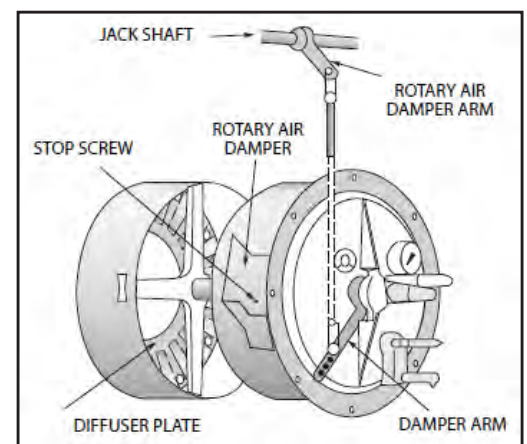

**FIGURE 6-2. Rotary air damper**

The amount of angular movement controlling the rate of air flow is determined by the location of the ends of the rotary air damper rod in both the jack shaft arm and the air damper arm. When the air damper is in low fire position, the jackshaft arm should be at 45 deg (47-1/2° for HTB) and the rotary air damper arm should be at an angle of approximately 60° below the horizontal (**Figure 6-1**). This

will ensure that the angular movement of the damper starts slowly, increasing in rate as the high fire position is approached.

Prior to initially firing a boiler it is advisable to check for free movement of the linkage. The damper motor must be allowed to complete its full stroke and the damper must move freely from low to high fire position.

## 6.3 - Modulating Motor

The modulating motor has a 90° shaft rotation. The motor manufacturer also provides a 160 deg stroke model for other applications. If a replacement is obtained from someone other than a Cleaver-Brooks Service or Parts representative, it may have an incorrect stroke. To prevent damage, determine the 90 deg stroke prior to installing a replacement. The stroke may be determined by powering the motor and connecting terminals R-B to actually determine the stroke as motor drives to an open position.

## 6.4 - Modulating Motor Switches - Low Fire and High Fire

The modulating motor contains either one or two internal switches depending upon application. The microswitches are actuated by adjustable cams attached to the motor shaft. Factory replacement motors have the cams preset. The low fire start switch is set to make the red and yellow leads at approximately 8 deg on motor closing. The high fire purge air proving switch (located in the modulating motor) is set to make red and blue tracer leads at approximately 60 deg on the motor opening. Normally the settings are left as is, but job conditions may require readjustment. If the cams require adjustment or resetting, follow the instructions in the manufacturer's technical manual.

## 6.5 - Burner Operating Controls

The standard boiler operating control package consists of three separate controls, the High Limit Control, Operating Limit Control and the Modulating control.

<b>Notice</b>
<b>Adjustments to the boiler operating controls should be made by an authorized Brooks Service Technician.</b>

The High Limit Control senses the hot water temperature or steam pressure. It is used as a safety limit to turn the burner off in the event the operating limit control fails. The high limit control should be set sufficiently above the operating limit control to avoid nuisance shutdowns.

The Operating Limit Control senses temperature or pressure and automatically turns the burner on to initiate the start up sequence when required and turns the burner off to initiate the shutdown sequence when the demand is satisfied. The control must be set to initiate startup only at the low fire position.

The Modulating Control senses changes in the hot water temperature or steam pressure and signals the modulating motor to control the flow of fuel and air to the burner. With either steam or hot water boilers, the modulating control must be set to ensure the burner is at its minimum low fire position before the operating limit control either starts or stops the burner.

When adjusting or setting controls, first be sure all control devices are securely mounted and level. With the temperature sensing control, make sure the sensing bulb is properly bottomed in its well and is secured against movement. Be sure the connecting tubing is not kinked.


The dial settings are generally accurate; although it is not unusual to have a slight variation between a scale setting and an actual pressure gauge or thermometer reading. Always adjust control setting to agree with pressure gauge or thermometer readings.

Accurate instrument readings are required. When necessary use auxiliary test equipment to set controls. Burner controls correctly set to match load demands will provide operational advantages and achieve the following desirable objectives:

- The burner will be operating in low fire position prior to shut down.
- The burner will operate at low fire for a brief period on each start during normal operation.

Eliminates frequent burner on-off cycling.

Separate and independent controls affect modulated firing and burner on-off cycling. **Figure 6-3** depicts a typical setting relationship of the operating limit control, modulating control and the high limit control.

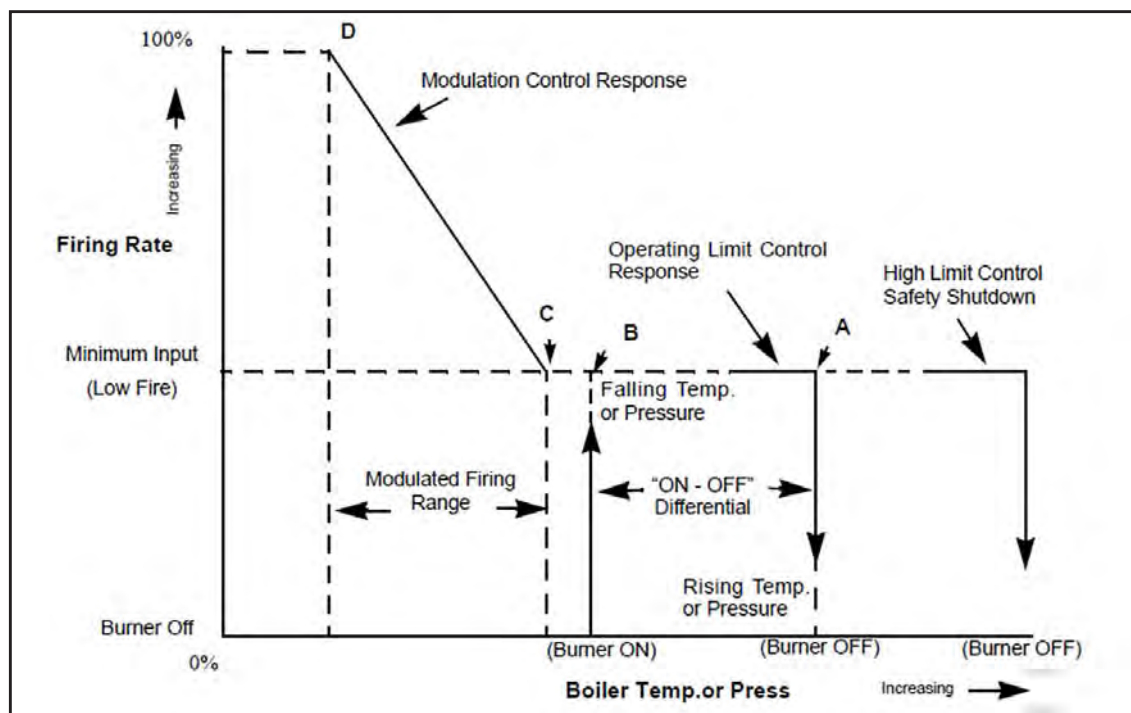

**FIGURE 6-3. Firing Graph**

The burner will be ON whenever the pressure or temperature is less than point **B** and OFF whenever pressure or temperature is greater than point **A**. The distance between points **A** and **B** represents the ON-OFF differential of the operating limit control.

In normal operation, the burner will shut down whenever the pressure or temperature rises above setting **A**. At that point the switch in the operating limit control will open. As the pressure or temperature drops back to **B**, the operating limit control closes and the burner will restart. The modulating control will signal the modulating motor to be in a low fire position. If the load demands exceed the low fire input potential, the modulating control will increase the firing rate proportionately as pressure or temperature falls toward point **D**. The modulating motor will stop at any intermediate point between **C** and **D** whenever the fuel input balances the load requirement.

As the load requirement changes, the firing rate will change accordingly. Thus, it is referred to as **modulated firing**. Point **D** represents the maximum firing rate of the burner, or high fire. In the event pressure or temperature drops while the burner is firing at high fire, it indicates that the load exceeds the capacity of the boiler.

The firing graph shows that point **B** and point **C** do not coincide. Extreme load conditions could require the points be closely matched. When set as shown, with a time lag between **B** and **C**, the burner will be in a low fire position upon a restart and will fire at that rate for a short period of time before falling pressure or temperature requires an increase in the firing rate. If points **B** and **C** overlap when restart occurs, the burner would drive to a higher firing position immediately after the main flame was proven.

When firing a cold boiler, it is recommended that the burner be kept at low fire, under manual flame control, until normal operating pressure or temperature is reached. If the burner is not under manual control on a cold start, it will immediately move toward high fire as soon as the program control releases the circuit that holds the burner in low fire. The modulating control will be calling for high fire and the burner will move to that position as rapidly as the damper motor can complete its travel.

Do not operate the boiler in excess of 90% of the safety valve relief setting. The closer the operating pressure is to the safety valve relief pressure, the greater the possibility of valve leakage. Continued leakage, however slight, will cause erosion and necessitate early safety valve replacement. The control settings on a hot water boiler must be within the temperature limits of the boiler.

Ideally, the boiler operating controls should be set under actual load conditions. Especially under new construction conditions, the boiler is initially started and set to operate under less than full load requirements. As soon as possible thereafter, the controls should be reset to provide maximum utilization of the modulating firing system. To accomplish maximum utilization, and assuming that air/ fuel combustion ratios have been set, make the required adjustments to the controls to bring the boiler pressure or temperature up to meet the load requirements.

To properly set the modulating control, carefully adjust it under load conditions, until the load is maintained with the burner firing at a steady rate. The firing rate at that point may be full high fire or slightly less, depending upon the relationship of the boiler size to the load.

When the modulating control is set and the burner is in full high fire, the scale setting of the modulating pressure control on a steam boiler will indicate the low point of the modulating range. The scale setting of the modulating temperature control on a hot water boiler will have a reading that indicates the midpoint of the modulating range.

The operating limit control should now be adjusted and the differential established. In an installation that does not require a very close control of steam pressure or water temperature the adjustable differential (**Figure 6-3 A to B**) should be set as wide as conditions permit, since a wide setting will provide less frequent burner cycling.

**Notice**

**On-Off cycling in excess of 8 cycles per hour will shorten the life of the combustion air motor and cause excessive wear on switch gear and pilot electrodes.**

**Notice**

**It is not recommended that the boiler controls be set so as to overlap the modulating control range and operating control range.**

**Notice**

**Rapid heat input can subject the pressure vessel metal and refractory to undesirable conditions.**

The high limit control provides a safety factor to shut the burner off in the event the operating limit control should fail. The setting of the control should be sufficiently above the operating limit control to avoid nuisance shut-downs. The setting, however, must be within the limits of the safety valve settings and should not exceed 90% of off the burner.

In the setting of the controls, consideration must be given to the time required for a burner restart. Each start, requires a prepurge period, plus the fixed time required for proving the pilot and main flame. In addition, approximately one-half minute is required for the damper motor to travel from low to high fire. The time lag may allow pressure or temperature to drop below desirable limits.

**! Caution**

**To prevent burner shutdown at other than low-fire setting, adjust the modulating control to modulate to low fire BEFORE the operating limit pressure control shuts off the burner. Failure to follow these instructions could result in damage to the equipment**

### 6.5.1 - Modulating Pressure Control (Steam)

Turn the adjusting screw until the indicator is opposite the low point of the desired modulating range. Modulated firing will range between the low point and a higher point equal to the modulating range of the particular control. In 0-15 psi controls the range is 1/ 2 lb; in 5-150 psi controls the range is 5 lbs; in 10-300 psi controls the range is 12 lbs.

### 6.5.2 - Operating Limit Pressure Control (Steam)

Set the cut-out (burner-off) pressure on the main scale using the large adjusting screw. Set the differential on the short scale by turning the small adjusting screw until the indicator points to the desired difference between cut-out and cut-in pressures. The cut-in (burner-on) pressure is the cut-out pressure MINUS the differential. The cut-out pressure should not exceed 90% of the safety valve setting.

### 6.5.3 - High Limit Pressure Control (Steam)

Set cut-out (burner off) pressure on the main scale using the adjusting screw. The control will break a circuit when pressure reaches this point. The setting should be sufficiently above the operating limit pressure control to avoid shutdowns, and preferably not exceed 90% of safety valve setting. The control requires manual resetting after tripping on a pressure increase. To reset, allow pressure to return to normal and then press the reset button.

---

#### 6.5.4 - Modulating Temperature Control (Hot Water)

Turn the knob on the front of the case until the pointer indicates the desired setpoint temperature. The desired set point is the center point of a proportional range. The control has a 3 to 30 deg differential and may be adjusted to vary the temperature range within which modulating action is desired. With the cover off, turn the adjustment wheel until pointer indicates desired range.

#### 6.5.5 - Operating Limit Temperature Control (Hot Water)

Set cut-out (burner off) temperature on the scale by inserting a screwdriver through the cover opening to engage the slotted head adjusting screw. The cut-in (burner on) temperature is the cut-out temperature MINUS the differential. The differential is adjusted from 5 to 30 deg F.

#### 6.5.6 - High Limit Temperature Control (Hot Water)

Set the cut-out (burner off) temperature on scale using the adjusting screw. The control will break the circuit and lock out on a rise in water temperature above the setting. The setting should be sufficiently above the operating limit temperature to avoid unnecessary shutdowns. On a 30 psig hot water boiler, the setting is not to exceed 240 deg F. The control requires manual resetting after tripping on a temperature increase. To reset, allow the water then press the manual reset button.

### 6.6 - Low Water Cutoff Devices (Steam and Hot Water)

No adjustment is required since LWCO controls are preset by the original manufacturer. However, if the water level is not maintained as shown in Chapter 3, Figure 3-2, inspect the devices immediately and replace as required.

### 6.7 - Combustion Air Proving Switch

Air pressure against the diaphragm actuates the switch which, when made, completes a circuit to prove the presence of combustion air. Since the pressure of the combustion air is at its minimum value when the damper is full open, the switch should be adjusted under that situation. It should be set slightly below the minimum pressure, but not too close to that point to cause nuisance shutdowns.

The run/test switch on the program relay should be set to TEST. Turn the burner switch on. The blower will start (provided that all limit circuits are completed) and the programmer will remain in the low-fire (damper closed) portion of the prepurge.

To have the modulating damper motor drive to high fire (damper open), remove the cover from the motor and remove the wire from terminal W. Slowly turn down the air switch adjusting screw until it breaks the circuit. Here the programmer will lock out and must be manually reset before it can be restarted. Add a half turn or so to the adjusting screw to remake its circuit.

Recycle the program relay to be sure that normal operation is obtained. Replace the wire on terminal W and reinstall the cover. Return the test switch to the RUN position.

## 6.8 - Atomizing Air Proving Switch

The air pressure against the diaphragm actuates the switch which, when closed, completes a circuit to prove the presence of atomizing air. Since the pressure of the atomizing air is at its minimum value when there is no fuel present at the nozzle, adjustment of the switch should be done while the unit is running but not firing. The control should be set slightly below the minimum pressure, but not too close to that point to cause nuisance shut-downs.

The control adjustment may be made during the prepurge period of operation by stopping the programmer during the prepurge period through the use of the TEST switch. Refer to the control instruction bulletin for details.

The adjustment screw of the atomizing air proving switch can then be adjusted until it breaks the circuit. Here, the programmer will lock out and must be manually reset before it can be restarted. Turn the adjusting screw up a half turn or so to remake the circuit. Since the adjustment of the air switch may be made either during the damper closed or damper open position of prepurge, it is also possible to make the adjustment with the relay stopped in the damper open position in a similar manner to the adjustment of the combustion air proving switch described in Section M. After making the adjustment, recycle the control to be sure that normal operation is obtained. The TEST switch must be set to RUN position.

## 6.9 - Gas Pilot Flame Adjustment

The size of the gas pilot flame is regulated by adjusting the gas flow through the pilot gas regulator and the adjusting cock. The flame must be sufficient to ignite the main flame and to be seen by the flame detector. But an extremely large flame is not required. An overly rich flame can cause sooting or carbon buildup on the flame detector. Too small a flame can cause ignition problems. Although it is possible to visibly adjust the size of the pilot flame, it is preferable to obtain a microamp or voltage reading of the flame signal.

<b>Notice - On an oil fired boiler, the atomizing air proving switch (AAPS) must also be closed.</b>
--

<b>Notice - On a combination fuel fired burner, the fuel selector switch could be set at GAS to eliminate the atomizing air proving switch from the circuitry.</b>
--

The correct voltage or microamp readings can be found in the information supplied with the flame safeguard system.

The program relay used may be of the type that provides message information that includes a constant flame signal of dc voltage. In this case a separate DC voltmeter is not required.

To Measure and Adjust Pilot:

1. When making a pilot adjustment, turn the manual-automatic switch to MANUAL and the manual flame control to CLOSE. Open both the pilot cutoff cock and the pilot adjusting cock. The main gas cock should remain closed. The regulator in the pilot line, if provided, is to reduce the gas pressure to suit the pilot's requirement of between 5 to 10" WC. Regulator adjustment is not critical; however, with a lower pressure the final adjustment of the pilot flame with adjusting cock is less sensitive.
2. Connect the micro-ammeter as outlined earlier.
3. Turn the burner switch on. Let the burner go through the normal prepurge cycle. When the ignition trial period is signaled, set the test switch to the TEST position to stop the sequence.

4. If the pilot flame is not established within 10 seconds, turn off the burner switch. Repeat the lighting attempt.
5. When the pilot flame is established, and with the pilot adjusting cock wide open, remove the flame detector from the burner plate. The pilot flame can then be observed through this opening.
6. To make the final adjustment, slowly close the gas pilot adjusting cock until the flame can no longer be seen through the sight tube. Then slowly open the cock until a flame providing full sight tube coverage is observed. The adjustment must be accomplished within the time limit of the safety switch or approximately 30 seconds after the detector is removed. If the control shuts down, manually reset it. Replace the detector and repeat the process from step 5.
7. When a suitable flame as indicated in paragraph 6 is obtained, replace the detector. Observe the reading on the microammeter. The reading should be between 2-1/4 and 5 microamps when using a lead sulfide detector and a standard amplifier. See the flame signal table in the manufacturer's bulletin for values of other combinations. The flame signal indicated on the annunciator type relay should not be less than 10 VDC, and may be as high as 20 VDC or greater. The reading must be steady. If the reading fluctuates, recheck the adjustment. Be sure that the flame detector is properly seated and that the lens is clean.
8. Return the test switch to the RUN position.
9. If main flame has not been previously established, proceed to do so in accordance with instructions elsewhere in the manual.
10. The reading of the main flame signal should also be checked. Observe the flame signal for pilot alone, pilot and main burner flame together and the main burner flame at high, low, and intermediate firing rate positions. Readings should be steady and in the range indicated in paragraph 7. If there are any deviations, refer to the trouble shooting section in the technical bulletin.

**Notice** - On an initial starting attempt, portions of the fuel lines may be empty and require bleeding time. It is better to accomplish this with repeated short lighting trial periods with intervening purge periods than to risk prolonged fuel introduction. If the pilot does not light after several attempts, check all components of the pilot system

**! Warning**

**Wear a protective shield or suitable glasses and keep eyes away from the sight tube opening. Never remove the flame detector while the main burner is firing. Failure to follow these instructions could result in serious personal injury or death.**

**! Warning**

**When checking the pilot flame, be aware the electrode is energized. Failure to follow these instructions could result in serious personal injury or death.**

## 6.10 - Gas Pressure and Flow Information

Because of variables in both the properties of gas and the supply system, it will be necessary to regulate the pressure of the gas to a level that produces a steady, dependable flame that yields highest combustion efficiency at rated performance yet prevents overfiring. Once the optimum pressure has been established, it should be holding the pressure at this level. Occasional modification in fuel composition or pressure by the supplier may, at times, require readjustment to return the burner to peak efficiency.

**TABLE 6-1. Minimum required gas pressure at entrance to Standard, FM and XL-GAPS gas trains (downstream of gas pressure regulator)**

BOILER HP	STD Pipe Size (Inches)	Pressure Required ("WC)
125	2-1/2	9
150	2-1/2	11.5
200	2-1/2	16.5
250	3	28
300	3	39
350	3	52
400	4	24
500	4	38
600	4	48
700	4	64
800	4	85

### Required Inlet Pressure

The gas supplied must provide not only the quantity of gas demanded by the unit, but must also be at a pressure high enough to overcome the pressure-loss due to the frictional resistance imposed by the burner system and the control valves.

The pressure required at the entrance to the burner gas train for rated boiler output is termed 'net regulated pressure'. The gas pressure regulator must be adjusted to achieve the pressure to assure full input.

The pressure requirement varies with boiler size, altitude, and type of gas train. Refer to **Table 6-1** for pressure requirements. The pressures listed are based on 1000 Btu/cu-ft natural gas at elevations up to 700 feet above sea level. For installation at higher altitudes, multiply the selected pressure by the proper factor from **Table 6-2**.

**TABLE 6-2. Pressure / Altitude Correction Factor**

FEET ABOVE SEA LEVEL	CORRECTION FACTOR
1000	1.04
2000	1.07
2500	1.09
3000	1.11
4000	1.16
5000	1.21
6000	1.25
7000	1.30
8000	1.35
9000	1.40

## Gas Flow

The volume of gas flow is measured in terms of cubic feet and is determined by a meter reading. The gas flow rate required for maximum boiler output depends on the heating value (Btu/cu-ft) of the gas supplied and boiler efficiency. The supplying utility can provide the information.

$$\text{INPUT} = \frac{\text{OUTPUT} \times 100\%}{\text{EFFICIENCY}}$$

$$\text{GAS FLOW} = \frac{\text{INPUT}}{\text{GAS BTU/Ft}^3}$$

$$= \frac{\text{OUTPUT} \times 100}{\text{EFFICIENCY} \times \text{GAS BTU/Ft}^3}$$

## Pressure Correction Factor

The flow rate outlined above is based on a *base* pressure, which is usually atmospheric or 14.7 psia.

Meters generally measure gas in cubic feet at *line* or supply pressure. The pressure at which each cubic foot is measured and the correction factor for the pressure must be known in order to convert the quantity indicated by the meter into the quantity which would be measured at base pressure.

To express the volume obtained from an actual meter reading into cubic feet at base pressure, it is necessary to multiply the meter index reading by the proper pressure factor obtained from **Table 6-3**. Conversely: To determine what the meter index reading should be in order to provide the volume of gas required for input, divide the desired flow rate by the proper pressure correction factor. This answer indicates the number of cubic feet at line pressure which must pass through the meter to deliver the equivalent number of cubic feet at base pressure.

As an example:

Assume that a 600 horsepower boiler is installed at 2,000 feet above sea level; is equipped with a standard gas train and a high turndown burner; and that 1,000 Btu natural gas is available. Pressure and flow requirements can be determined as follows:

## Pressure

Correction for the 2,000 feet altitude must be made since altitude has a bearing on the net regulated gas pressure. The standard gas train requires 38.5" WC gas pressure at sea level (**Table 6-1**). **Table 6-2** indicates a correction factor of 1.07 for 2,000 feet. Multiplying the results in a calculated net regulated gas requirement of

**TABLE 6-3. Pressure Correction Factor**

REGULATOR INLET PRESSURE (PSIG)	PRESSURE FACTOR
1	1.05
2	1.11
3	1.18
4	1.25
5	1.32
6	1.39
7	1.45
8	1.53
9	1.59
10	1.66
11	1.72
12	1.81
13	1.86
14	1.93
15	2.00

approximately 40.1" WC. This is the initial pressure to which the regulator should be adjusted. Slight additional adjustment can be made later, if necessary, to obtain the gas input needed for burner rating.

### Flow

Since the gas flow rate is based on standard conditions of flow, correction must be made for the supply pressure through the meter of 3 psig. Determine the flow rate by dividing the Btu content of the gas into the burner input (**Table 6-4**) and adjust this value by applying the correction factor for 3 psig (**Table 6-3**).

Btu/hr Input = CFH (Cubic feet/hour)

Btu/cu-ft

OR

25,100,000 = 25,100 CFH (At 14.7 lb-atmospheric base 1,000 pressure)

THEN

25.100 = 21,271 CFH

1.18

This is the CFH (at line pressure) that must pass through the meter so that the equivalent full input requirement of 25,100 CFH (at base pressure) will be delivered.

**TABLE 6-4. High Turndown Burner Required Input**

BOILER HP	HIGH FIRE INPUT BTU/hr	LOW FIRE INPUT BTU/hr
125	5,230,000	1,307,500
150	6,276,000	1,569,000
200	8,368,000	2,092,000
250	10,460,000	1,046,000
300	12,552,000	1,255,200
350	14,644,000	1,464,400
400	16,750,000	1,675,000
500	20,925,000	2,092,500
600	25,100,000	2,510,000
700	29,300,000	2,930,000
800	33,500,000	3,350,000

**Notice - The information given in this section is for all practical purposes sufficient to set and adjust controls for gas input. Your gas supplier can, if necessary, furnish exact correction factors that take into consideration BTU content, exact base pressure, specific gravity, temperature, etc., of the gas used.**

### Checking Gas Flow


Your gas supplier can generally furnish a gas meter flow chart from which gas flow can be determined. After a short observation period, the information aids in adjusting the regulator to increase or decrease flow as required to obtain the rating. Final adjustment of the gas fuel is carried out by means of the adjusting screws in the gas modulating cam, while performing a combustion efficiency analysis.

## 6.11 - Gas Fuel Consumption Adjustment

After operating for a sufficient period of time to assure a warm boiler, adjustments should be made to obtain efficient combustion. Burner efficiency is measured by the amount or percentage of O<sub>2</sub> present in the flue gas. O<sub>2</sub>

readings determine the total amount or excess air in the combustion process, above the point of stoichiometric combustion or perfect combustion. Stoichiometric combustion is a term used to describe a condition when there is the exact amount, molecule for molecule, of air for the fuel attempting to be burned. This can be accomplished under laboratory conditions, however it is not practical to attempt to meet this condition in a boiler. Stoichiometric combustion however, is the reference point used when setting fuel/air ratios in a boiler.

There must always be excess air in the combustion process to account for changes in boiler room temperature and atmospheric conditions, and to ensure the combustion is on the proper side of the combustion curve (See **Figure 6-8**).

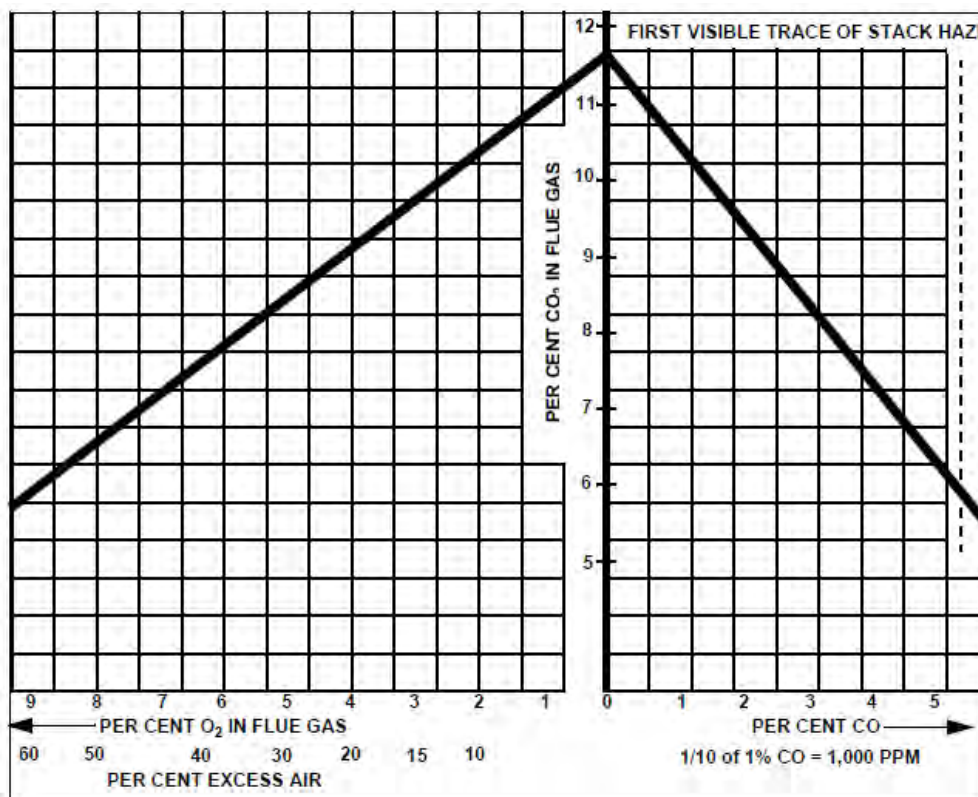

**FIGURE 6-4. Flue gas analysis for natural gas**

Proper setting of the air/fuel ratios at all rates of firing must be established by the use of a combustion or flue gas analyzer. The appearance or color of the gas flame is not an indication of its efficiency, because an efficient gas flame will vary from transparent blue to translucent yellow. Most flue gas analyzers in use today measure the content, by percentage of oxygen (O<sub>2</sub>) and carbon monoxide (CO) either by percent or parts per million (ppm). Carbon dioxide (CO<sub>2</sub>) is not normally measured with today's flue gas analyzers, but may be displayed via a calculation.

The O<sub>2</sub> levels through the entire firing range of the burner, low fire to high fire should be tested. The burner manufacturer's recommendations on turndown should also be followed and the turndown range of the burner should not be exceeded.

It is important to understand what the readings shown on an instrument refer to when setting combustion in a boiler. To assist with this understanding **Figure 6-4** shows the relationship between O<sub>2</sub> levels (excess air) and the products of combustion for a typical flue gas analysis (natural gas).

One of the products of combustion is CO<sub>2</sub> (Carbon Dioxide). This is shown in percentage.


Another product of combustion is CO (carbon monoxide) and is shown in both percentage and parts per million (ppm). The maximum CO level standardly allowed is less than 400 ppm. However, this may change subject to local regulations.

The percent O<sub>2</sub> recorded on an instrument equates to percent excess air, I.E. 3% O<sub>2</sub> is approximately 15% excess air and 4% O<sub>2</sub> is approximately 20% excess air. The exact percentage of excess air is a mathematical calculation based on an ultimate fuel analysis of the fuel being fired.

It is generally recommended that O<sub>2</sub> readings of between 3% to 4% be attained with less than 400 ppm CO, at high fire. Using information from Section P of Chapter 6, determine the standard conditions of gas pressure and flow for the size boiler and the gas train on it. Calculate the actual pressure and flow through the use of correction factors that compensate for incoming gas pressure and altitude.

Basically, gas adjustments are made with a gas pressure regulator, which controls the pressure and with the butterfly gas valve (**Figure 6-5**) which directly controls the rate of flow. In initially setting the linkage, back off the low fire stop screw on the butterfly valve so that the valve is closed. Then run the screw out to touch the arm, and give it two complete turns. Adjust the connecting rod so that the override tension is released and so that the arm is now just touching the stop screw. Tighten the locknuts on all ball joints.

The low fire setting should be regarded as tentative until the proper gas pressure for high fire operation is established. To reach the high fire rate, turn the manual flame control switch toward *OPEN* in minor increments while monitoring combustion for overly rich or lean conditions. At high fire, the gas butterfly valve should be open as wide as indicated by the slot on the end of the shaft. Set and lock the high fire stop screw so that it is just touching the valve arm. Determine the actual gas flow from a meter reading. (See section P of Chapter 6.) With the butterfly valve open and with regulated gas pressure set at the calculated pressure, the actual flow rate should

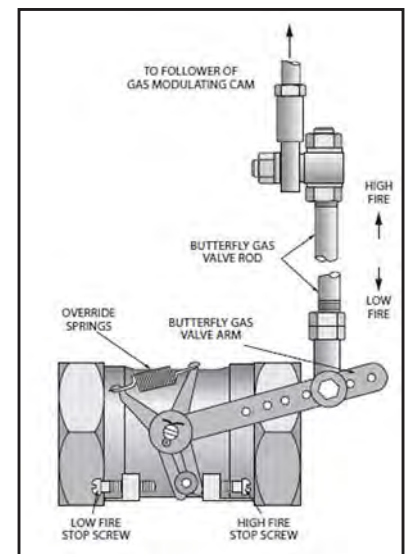

**FIGURE 6-5. Gas butterfly valve**

be close to the required input. If corrections are necessary, increase or decrease the gas pressure by adjusting the gas pressure regulator, following the manufacturer's directions for regulator adjustment.

When proper gas flow is obtained, take a flue gas reading. The O<sub>2</sub> should be between 3% and 4% at high fire.

If the fuel input is correct, but the O<sub>2</sub> values do not fall within this range, the air damper travel may need to be adjusted. Adjustment of the air damper linkage is described in Chapter 6.

With the high-fire air/fuel ratio established, the gas pressure regulator needs no further adjusting. After being certain that the air control damper and its linkage are correctly adjusted to provide the proper amount of secondary air, and after adjusting the gas pressure regulator, final adjustment can be made, if necessary, to the gas modulating cam to obtain a constant air/fuel ratio throughout the entire firing range. Since the input of combustion air is ordinarily fixed at any given point in the modulating cycle, the flue gas reading is determined by varying the input of gas fuel at that setting. The adjustment is made to the metering cam by means of adjusting screws, which are turned outward (counterclockwise from the hex-socket end) to increase the flow of fuel, and inward

(clockwise from the hex-socket end) to decrease it. Flow rate is highest when the cam follower assembly is closest to jackshaft. See **Figure 6-6**.

Through the manual flame control switch, position the cam so that the adjusting screw adjacent to the end or high fire screw contacts the cam follower. Perform a combustion analysis at this point. If an adjustment is necessary, turn the adjustment screw accordingly to increase or decrease fuel flow. Take a combustion reading to verify input. Repeat as necessary until the desired flow is obtained. Repeat the process, stopping at each adjusting screw, until the low fire adjusting screw is reached.

### Standard Burner Low Fire Adjustment

The fuel input should be adjusted using the low fire cam screw, to approximately 25% of that at high fire. At low fire the O<sub>2</sub> flue gas reading should be between 6-7%.

It may be necessary to readjust the setting of the low fire stop screw to obtain the proper air/fuel ratio at the low fire rate. To ensure that the low fire position of the gas butterfly valve is always the same, allow one turn of the stop screw for overtravel.

If the air damper needs to be adjusted in order to provide the correct low fire air/fuel ratio, combustion must be rechecked at higher firing rates and adjusted as required.

If all cam screws are properly adjusted, none will deviate from the general overall contour of the cam face.


**Notice - Do not use any lubricant on the adjusting setscrews. The set screws have a nylon locking insert intended to provide locking torque and resistance to loosening and a lubricant could damage equipment.**

### High Turndown Burner Low Fire Adjustment

The fuel input should be adjusted using the low fire cam screw, to approximately 10% of that at high fire. At low fire the O<sub>2</sub> flue gas reading should be between 9.5-11%.

It may be necessary to readjust the setting of the low fire stop screw in order to obtain the proper air/fuel ratio at low fire. To ensure that the low fire position of the gas butterfly valve is always the same, allow a half turn of the stop screw for overtravel.

If the air damper must be reset to meet the low fire air/fuel requirements, combustion at higher firing rates must be rechecked. The second cam adjusting screw may need to be adjusted in order to maintain a smooth cam profile. If all screws are properly adjusted, none will deviate from the general overall contour of the cam face.

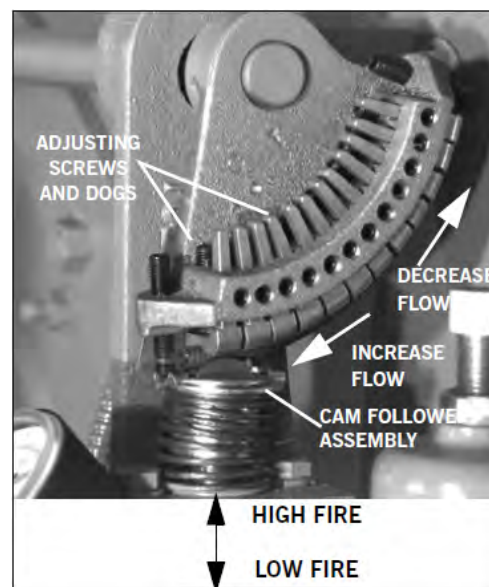

**FIGURE 6-6. Fuel modulating cam**

---

## 6.12 - Low Gas Pressure Switch

Adjust the scale setting to slightly below the normal burning pressure. The control circuit will be broken when pressure falls below this point. Since gas line distribution pressure may decrease under some conditions, shut-downs may result if the setting is too close to normal. However, regulations require that the setting may not be less than 50% of the rated pressure downstream of the regulator.

Manual resetting is necessary after a pressure drop. Press the reset lever after pressure is restored. Be sure that the switch equipped control is level.

## 6.13 - High Gas Pressure Switch

Adjust the scale setting to slightly above the normal burning pressure. The control circuit will be broken when pressure exceeds the normal operating pressure. Unnecessary shutdowns may result if the setting is too close to normal; however, regulations require that the setting may not be greater than 150% of rated pressure.

Manual resetting is necessary after a pressure rise. Press the reset lever after pressure falls. Be sure that the switch equipped control is level.

## 6.14 - Fuel Oil Pressure and Temperature - General

Variations in burning characteristics of the fuel oil may occasionally require adjustments to assure highest combustion efficiency. The handling and burning characteristics may vary from one delivery of oil to another. Therefore, it is recommended that the oil system be inspected from time to time to verify that pressures and viscosity are at the proper operating levels.

Because of variation in oils, including chemical content, source, blends, and viscosity characteristics, the temperatures and pressures listed in Chapter 5, and mentioned in the adjusting of the controls in the following paragraphs, will vary and thus may be regarded as tentative and to be changed to provide best firing conditions.

**Figure 6-7** is an oil viscosity-temperature chart. It may be used as a guide, although your oil supplier will be able to give you more exact information based on an analysis of the oil.

Review of the applicable maintenance instructions given in Chapter 8 will aid in maintaining an efficient fuel system.

When the boiler is shut down, or switched over to gas firing, the pump must operate for a sufficient period of time to cool the oil heater. Similarly, if an electric, steam, or hot water oil heater is removed for servicing, the temperature of the heater should be reduced by circulating oil until it has cooled.

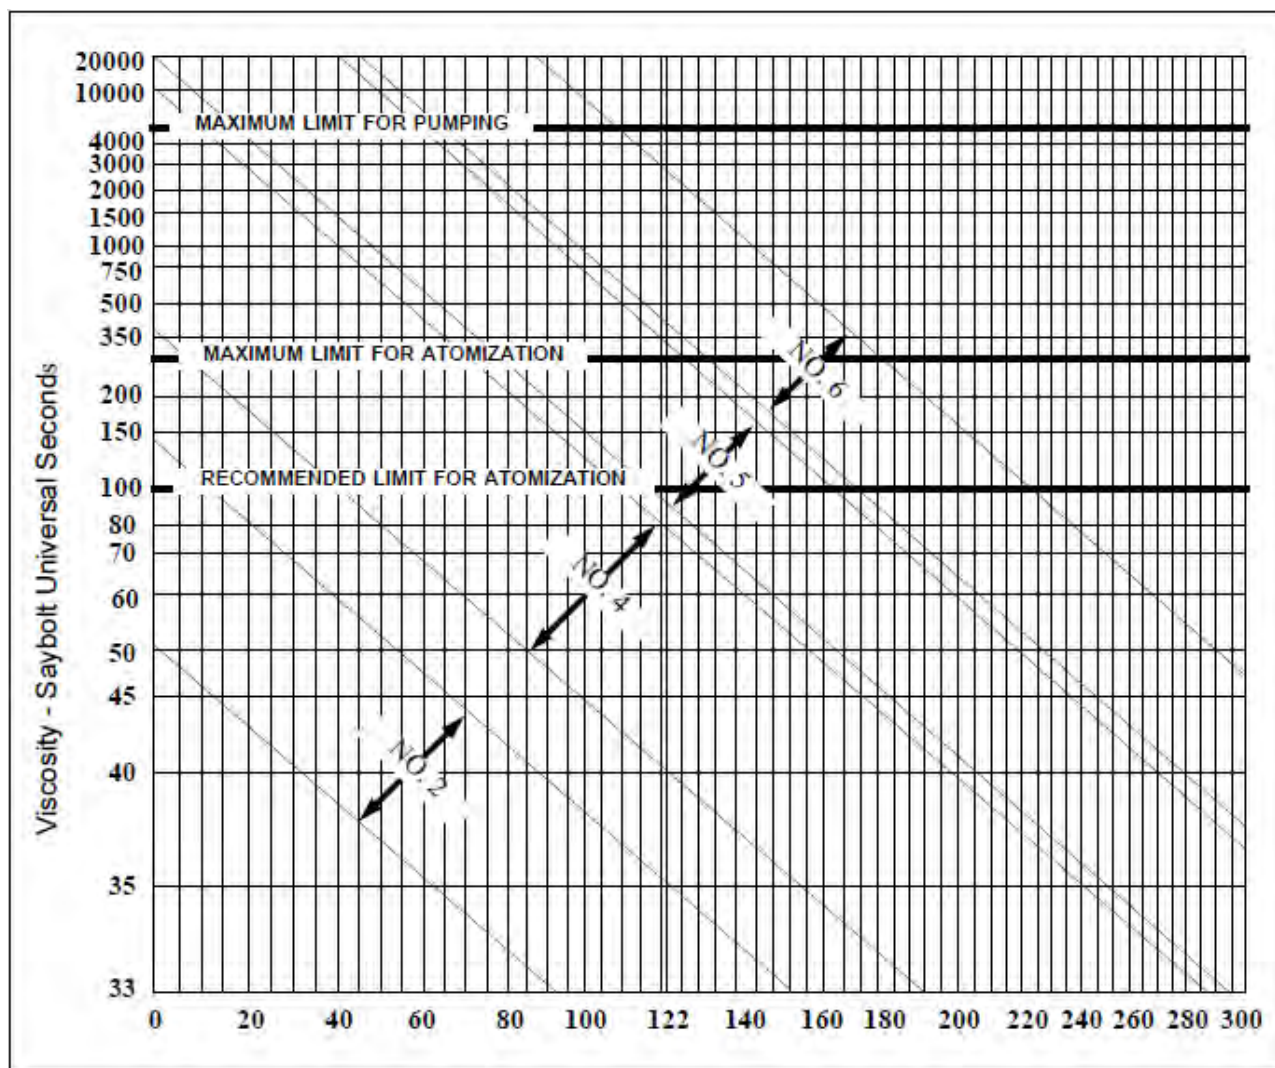


FIGURE 6-7. Oil viscosity chart

## 6.15 - Fuel Oil Combustion Adjustment

After operating for a sufficient period of time to assure a warm boiler, adjustments should be made to obtain efficient combustion.

Burner efficiency is measured by the amount or percentage of O<sub>2</sub> present in the flue gas. O<sub>2</sub> readings determine the total amount of excess air in the combustion process, above the point of stoichiometric combustion or perfect combustion. Stoichiometric combustion however, is the reference point used when setting fuel/ air ratios in a boiler.

There must always be excess air in the combustion process to account for changes in boiler room conditions and to ensure the combustion is on the proper side of the combustion curve (See **Figure 6-9**).

Proper setting of the air/fuel ratios at all rates of firing must be established by the use of a combustion gas analyzer. Efficient combustion cannot be solely judged by flame condition or color, although they may be used in making approximate settings. Combustion settings should be done so that there is a bright sharp flame with no visible haze.

**Notice - To prevent oil heater coking, the fuel oil pump must be in operation during all times that an oil heater is in service. During any time that the oil pump is not operating, the oil heating system must be electrically shut down by manually turning the oil heater switch to the OFF position.**

Most flue gas analyzers in use today measure the content, by percentage, of oxygen (O<sub>2</sub>) and in some cases, smoke. Carbon dioxide (CO<sub>2</sub>) is not normally measured with modern gas analyzers, but may be displayed as a calculation.

The O<sub>2</sub> levels through the entire firing range of the burner, low fire to high fire should be tested. The burner manufacturers recommendations on turndown should also be followed and the turndown range of the burner should not be exceeded.

It is required to set the burner to operate with a reasonable amount of excess air to compensate for minor variations in the pressure, temperature, or burning properties of oil. Fifteen to 20% excess air is considered reasonable. This would result in an O<sub>2</sub> reading of 3% to 4%, at high fire.

Final adjustment to fuel input must be made to produce a minimum of smoke. A maximum smoke spot density of a No. 2 for light oil, or a No. 4 for heavy oil is acceptable, as measured in conformance to ASTM D 2156-63T.

Through the use of the manual flame control, slowly bring the unit to high fire by stages while monitoring combustion for overly rich or lean conditions. At the high fire position, the air damper should be fully opened and the air and oil pressure readings should be on the order of the readings given in Chapter 5.

Take a flue gas analysis reading. If necessary, adjust the fuel oil controller to increase or decrease oil pressure. Adjustments to the pressure should be done before attempting to adjust the screws in the metering cam. Ideally, the cam profile spring should be as close to the cam casting as practical. It is more desirable to lower the oil pressure to reduce flow, if necessary, than to extend the adjusting screws to an extreme position in an effort to cut back flow.

After being certain that the air control damper and its linkage are operating properly, final adjustment can be made, if necessary, to the oil modulating cam to obtain a constant fuel/air ratio through the entire firing range.

Since the input of combustion air is ordinarily fixed at any given point in the modulating cycle, the flue gas reading is determined by varying the input of fuel at that setting. The adjustment is made to the metering cam by means of adjusting screws, which are turned out (counterclockwise from hex-socket end) to increase the flow of fuel and in (clockwise from hex-socket end) to decrease it. Flow rate is highest when the cam follower assembly is closest to the jackshaft.

If oil pressure, primary air pressure, and linkages are properly adjusted, the metering cam should require minimal adjustment. Using the flame control switch, position the cam so that the adjusting screw adjacent to the end, high-fire screw, contacts the cam follower. Make a combustion analysis at this point. If an adjustment is necessary, turn the adjustment screw accordingly to increase or decrease fuel flow. Take a combustion reading to verify input. Repeat as necessary until the desired flow is obtained. Continue this procedure, stopping at each adjusting screw, until the low fire position is reached.

## Standard Burner Low Fire Adjustment (Heavy Oil)

The fuel input should be adjusted with the low fire cam screw, to approximately 25% of that at high fire. At low fire the O<sub>2</sub> flue gas reading should be between 7- 8%.

## High Turndown Burner Low Fire Adjustment (Light Oil)

Fuel input at low fire should be approximately 12.5% of that at high fire. The low fire screw should be adjusted to obtain the necessary input for the fuel turndown required. At low fire the O<sub>2</sub> flue gas reading should be between 7 - 9%. The second cam adjusting screw may need to be adjusted in order to maintain a smooth cam profile.

**Notice - Do not use any lubricant on the adjusting setscrews. These have a nylon locking insert intended to provide locking torque and resistance to loosening and a lubricant could damage the equipment.**

## 6.16 - Burner Drawer Adjustment

There are relatively few adjustments that can be made to the burner; however, a check should be made to assure that all components are properly located, and that all holding screws are properly tightened.

The diffuser location on gas fired boilers is quite important. There should be 1/4" distance between the edges of the diffuser fins and gas outlet tubes (spuds). The setting of an oil fired burner is less exacting and the diffuser should be located with the skirt approximately 1-1/8" from the end of the burner tube. When the proper diffuser location is ascertained, the setting of the nozzle in relation to the diffuser should be checked. This generally is set at time of manufacture and seldom needs altering. It is most important that oil spray does not impinge upon the diffuser. The distance that the nozzle is behind the diffuser has some latitude, and individual installations may require a slight deviation. The spacing indicated is 2".

Check the setting of the ignition electrode(s) for proper gap and position (**Figure 6-8**). Be sure that the porcelain insulator is not cracked and that ignition cable connections are tight.

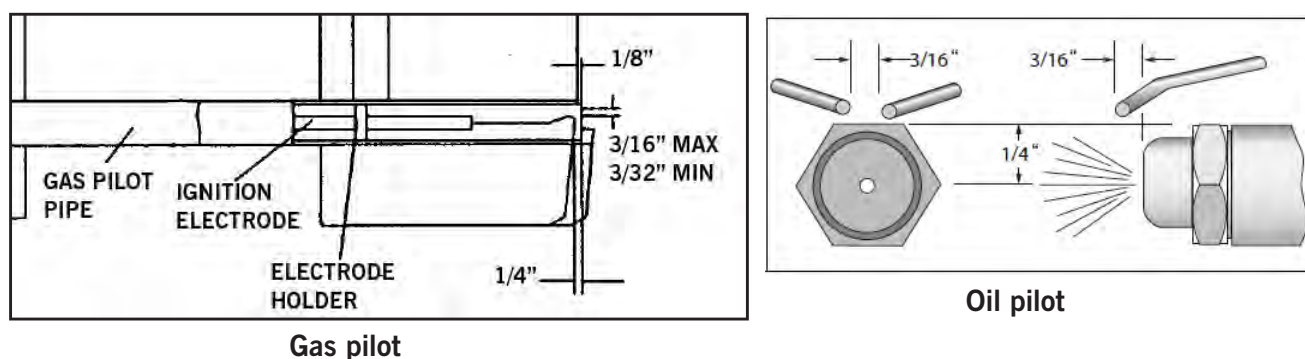



FIGURE 6-8. Ignition Electrodes

The oil nozzle tip should be seated tightly in the body with the swirler and the seating spring in place.

Check to see that the flame detector sight tube and the gas pilot tube extend through their respective openings in the diffuser face.

## 6.17 - Oil Drawer Switch

The integral contacts of the control are closed by proper positioning and latching of the oil drawer in its forward position. Adjustment of the switch must be such that its contacts open if the oil drawer is not properly positioned for oil firing. The switch is electrically removed from the circuit when a combination fuel burner is fired on gas.

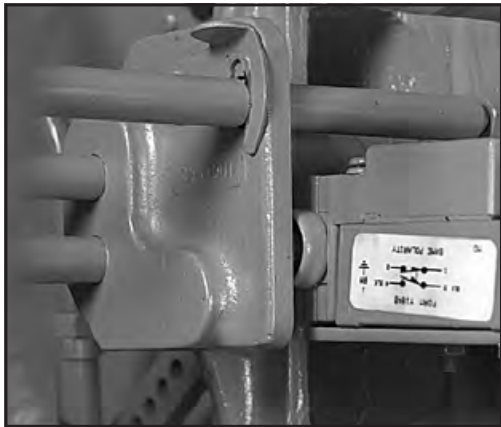

**FIGURE 6-9. Figure 6-17 Oil Gun In Place, Oil Drawer Switch Closed**



**FIGURE 6-10. Figure 6-18 Oil Gun Locked Out**

## 6.18 - Low Oil Temperature Switch

The L.O.T.S. prevents the burner from starting, or stops its operation, if the temperature of the oil is below normal operating temperature.

To adjust the control, insert a screwdriver into the center slot in the control cover and turn the dial until the fixed (center) pointer is approximately 30 deg F lower than the oil heater thermostat setting. Turn the differential adjusting screw (located above dial) until the movable indicator is approximately 5 deg F above the setting on the main scale.

On a hot water boiler, the low-oil-temperature switch is an integral part of the electric oil heater. The switch is non-adjustable and is factory set at approximately 40× F below the maximum operating temperature of the heater.

## 6.19 - High Oil Temperature Switch (Optional)

The High Oil Temperature Switch (HOTS) prevents the burner from starting, or stops its operation, if the temperature of the oil exceeds the normal operating temperature. To adjust, turn the dial until the pointer is approximately 25 deg F above the normal operating temperature. The controls generally have a set differential and will close 5 deg F below the setpoint.

## 6.20 - Low Oil Pressure Switch (Optional)

The Low Oil Pressure Switch (LOPS) prevents burner ignition, or stops its operation, when the oil pressure is below the setpoint. Adjust the control by turning the screw on top of control case to an indicated pressure 10 psi below the established primary oil pressure setting indicated on the oil supply pressure gauge. The switch will remain in a closed position as long as the oil pressure exceeds this setting. The control normally used automatically resets when pressure is restored after a drop.

## 6.21 - Electric Oil Heater Thermostat (400 and 600 Series - Steam)

The maximum temperature setting of the control is stamped on the dial. The maximum Temperature setting is attained with the adjusting knob turned to the high end of the scale. Lower settings are obtained by turning the adjusting knob clockwise using the thermometer in the fuel oil controller as a guide. The final setting of this thermostat should be at a temperature approximately 15 deg F lower than the steam heater thermostat. This eliminates the electric heater operation when the steam heater is functioning. The electric heater is sized to provide sufficient heated oil for low-fire operation on cold starts before steam is available.

## 6.22 - Steam Oil Heater Thermostat (No. 6 Oil) (400 and 600 Series - Steam)

The maximum temperature setting of the control is stamped on the dial. The maximum temperature setting is attained with the adjusting knob turned to the high end of the scale. Lower settings are obtained by turning the adjusting knob clockwise using the thermometer in the fuel oil controller as a guide. The final setting of the thermostat should provide oil at a sufficient temperature for efficient combustion based on flue gas analysis. There is no need to heat the oil in excess of the temperature.

---

## 6.23 - Hot Water Oil Heater Thermostat (400 and 600 Series)

To adjust the thermostat, insert a screwdriver into the center slot in the control cover and turn the dial until the pointer is at the desired temperature level. The control generally has a set differential, and will close 5 deg F below the setpoint.

The thermostat contacts close to energize the booster water pump, which pumps water from the boiler through the heater. On cold starts, it is normal practice to manually close the valve in the pump discharge line until the boiler water temperature exceeds the temperature of fuel oil entering the heater.

The electric oil heater on a hot water boiler burning No. 6 oil and equipped with a hot water oil heater has a built-in adjustable thermostat. The maximum temperature setting is stamped on its dial. The desired temperature can be obtained by turning the adjusting screw. The thermostat should be set at a temperature approximately 15 degrees lower than the hot water heater thermostat. Such a temperature prevents the electric heater from operation when the water heater is functioning. The electric heater is sized to provide sufficient heated oil for low-fire operation on cold starts before hot water is available.

## 6.24 - Steam Heater Pressure Regulator (400 and 600 Series - Steam)

The regulator is provided on a boiler designed to operate at pressures above 15 psi and reduces boiler steam pressure to the level necessary for proper operation of the steam oil heater. The pressure should be reduced to a point that permits sufficient temperature to heat the oil, while allowing as continuous a steam flow as possible. Pressure that is too high will result in frequent cycling of the steam solenoid valve. It is best to adjust the regulator under typical flow conditions. To do so, it is suggested that the globe valve in the steam supply line be closed so that there is no pressure on the regulator. Turn out the adjusting screw fully to relieve compression on the regulator spring, thus closing the regulator. With steam at normal pressure, open the globe valve and then set the secondary pressure by turning the adjusting screw or handle until the downstream gauge shows the desired pressure.



---

Chapter 7 assumes that the unit has been properly installed and adjusted, and that it has been running for some time. It is further assumed that the operator has become thoroughly familiar with both burner and manual by this time. The points under each heading are set down briefly as possible causes, suggestions or clues to simplify locating the source of trouble. Methods of correcting the trouble, once it has been identified, may be found elsewhere in this manual.

If the burner will not start or operate properly, the trouble shooting Chapter should be referred to for assistance in pinpointing problems that may not be readily apparent.

<b>! Warning</b>
------------------

<b>Trouble shooting should be performed only by personnel who are familiar with the equipment and who have read and understand the contents of this manual. Failure to follow these instructions could result in serious personal injury or death.</b>
--

<b>! Warning</b>
------------------

<b>Disconnect and lock out the main power supply in order to avoid the hazard of electrical shock. Failure to follow these instructions could result in serious personal injury or death.</b>
---

<b>Notice - If your boiler is equipped with a CB-HAWK boiler management control system, refer to CB-HAWK Installation, Operating and Servicing Manual No. 750-133 for specific information regarding procedures described in this section.</b>
--

The program relay has the capability to self-diagnose and to display a code or message that indicates the failure condition. Refer to the control bulletin for specifics and suggested remedies. Familiarity with the programmer and other controls in the system may be obtained by studying the contents of this manual. Knowledge of the system and its controls will make trouble shooting much easier. Costly down-time or delays can be prevented by systematic checks of actual operation against the normal sequence to determine the stage at which performance deviates from normal.

Following a routine may possibly eliminate overlooking an obvious condition, often one that is relatively simple to correct.

If no cause is apparent, check the continuity of the circuits with a voltmeter or test lamp. Each circuit can be checked and the fault isolated and corrected. Most circuitry checking can be done between appropriate terminals on the terminal boards in the control cabinet or the entrance box. Refer to the schematic wiring diagram for terminal identification.

PROBLEM	SOLUTION
<b>Burner Does Not Start</b>	1. No voltage at program relay power input terminals. A. Main disconnect switch open. B. Blown control circuit fuse. C. Loose or broken electrical connection.
	2. Program relay safety switch requires resetting.
	3. Limit circuit not completed - no voltage at end of limit circuit program relay terminal. A. Pressure or temperature above setting of operation control (load demand light will not glow). B. Water below required level. 1) Low-water light (and alarm horn) should indicate this condition. 2) Check manual reset button, if provided, on low-water control. C. Fuel pressure must be within settings of low pressure and high pressure switches. D. Oil fired unit - burner gun must be in full forward position to close oil drawer switch. E. Heavy oil fired unit - oil temperature below minimum settings.
	4. Fuel valve interlock circuit not completed. A. Fuel valve auxiliary switch not closed.
<b>No Ignition</b>	1. Lack of spark. A. Electrode grounded or porcelain cracked. B. Improper electrode setting. C. Loose terminal on ignition cable; cable shorted. D. Inoperative ignition transformer. E. Insufficient or no voltage at pilot ignition circuit terminal.
	2. Spark but no flame. A. Lack of fuel - no gas pressure, closed valve, empty tank, broken line, etc. B. Inoperative pilot solenoid. C. Insufficient or no voltage at pilot ignition circuit terminal. D. Too much air.
	3. Low fire switch open in low fire proving circuit. A. Damper motor not closed, slipped cam, defective switch. B. Damper jammed or linkage binding.
	4. Running interlock circuit not completed. A. Combustion or atomizing air proving switches defective or not properly set. B. Motor starter interlock contact not closed.
	5. Flame detector defective, sight tube obstructed, or lens dirty.

PROBLEM	SOLUTION
<b>Pilot Flame, but No Main Flame</b>	1. Insufficient pilot flame.
	2. Gas Fired Unit: A. Manual gas cock closed. B. Main gas valve inoperative. C. Gas pressure regulator inoperative.
	3. Oil fired unit. A. Oil supply cut off by obstruction, closed valve, or loss of suction. B. Supply pump inoperative. C. No fuel. D. Main oil valve inoperative. E. Check oil nozzle, gun and lines.
	4. Flame detector defective, sight tube obstructed or lens dirty.
	5. Insufficient or no voltage at main fuel valve circuit terminal.
<b>Burner Stays in Low Fire</b>	1. Pressure or temperature above modulating control setting.
	2. Manual-automatic switch in wrong position.
	3. Inoperative modulating motor (see Section F).
	4. Defective modulating control.
	5. Binding or loose linkage, cams, setscrews, etc.
<b>Shutdown Occurs During Firing</b>	1. Loss or stoppage of fuel supply.
	2. Defective fuel valve; loose electrical connection.
	3. Flame detector weak or defective.
	4. Lens dirty or sight tube obstructed.
	5. If programmer lockout switch has not tripped, check limit circuit for an opened safety control.
	6. If the programmer lockout switch has tripped: A. Check fuel lines and valves. B. Check flame detector. C. Check for open circuit in running interlock circuit. D. The flame failure light is energized by ignition failure, main flame failure, inadequate flame signal, or open control in the running interlock circuit.
	7. Improper air/fuel ratio (lean fire). A. Slipping linkage. B. Damper stuck open. C. Fluctuating fuel supply. 1) Temporary obstruction in fuel line. 2) Temporary drop in gas pressure. 3) Orifice gate valve accidentally opened (heavy oil).
	8. Interlock device inoperative or defective.

PROBLEM	SOLUTION
<b>Modulating Motor Does Not Operate</b>	1. Manual-automatic switch in wrong position.
	2. Linkage loose or jammed.
	3. Motor does not drive to open or close during pre-purge or close on burner shutdown. <ul style="list-style-type: none"> <li>A. Motor defective.</li> <li>B. Loose electrical connection.</li> <li>C. Damper motor transformer defective.</li> </ul>
	4. Motor does not operate on demand. <ul style="list-style-type: none"> <li>A. Manual/automatic switch in wrong position.</li> <li>B. Modulating control improperly set or inoperative.</li> <li>C. Motor defective.</li> <li>D. Loose electrical connection.</li> <li>E. Damper motor transformer defective.</li> </ul>

---

A well-planned maintenance program will help avoid unnecessary down-time or costly repairs, promote safety, and aid boiler inspectors. An inspection schedule with a listing of procedures should be established. It is recommended that a boiler room log or record be maintained. Recording of daily, weekly, monthly, and yearly maintenance activities provides a valuable guide and aids in obtaining economical and lengthy service from CleaverBrooks equipment. A boiler inspection schedule is shown in Table 8-5. It is important to realize that the frequency of inspection will depend on variable conditions: such as load, fuel, system requirements, boiler environment (indoor/outdoor) etc.

Good housekeeping helps maintain a professional appearing boiler room. Only trained and authorized personnel should be permitted to operate, adjust, or repair the boiler and its related equipment. The boiler room should be kept free of all material and equipment not necessary to the operation of the boiler or heating system.

Even though the boiler has electrical and mechanical devices that make it automatic or semi-automatic in operation, the devices require systematic and periodic maintenance. Any automatic feature does not relieve the operator from responsibility, but rather frees the operator from certain repetitive chores providing time to devote to upkeep and maintenance.

Alertness in recognizing an unusual noise, improper gauge reading, leaks, etc., can make the operator aware of a developing malfunction and permit prompt corrective action that may prevent extensive repairs or unexpected downtime. Any leaks - fuel, water, steam, exhaust gas - should be repaired promptly and under conditions that observe necessary safety precautions. Preventive maintenance measures, such as regularly checking the tightness of connections, locknuts, setscrews, packing glands, etc., should be included in regular maintenance activities.

## 8.1 - Periodic Inspection

Insurance regulations and local laws require periodic inspection of the pressure vessel by an authorized inspector.

Inspections are usually, though not necessarily, scheduled for periods of normal boiler down time, such as an off season. This major inspection can often be used to accomplish maintenance, replacement or repairs that cannot easily be done at other times. Inspection also serves as a good basis for establishing a schedule for annual, monthly, or other periodic maintenance programs.

While the inspection pertains primarily to the waterside and fireside surfaces of the pressure vessel, it provides the operator an excellent opportunity for detailed inspection and check of all components of the boiler including piping, valves, pumps, gaskets, refractory, etc. Comprehensive cleaning, spot painting or repainting, and the replacement of expendable items should be planned for and taken care of during this time. Any major repairs or replacements that maybe required should also, if possible, be coordinated with the period of boiler shutdown.

Replacement spare parts, if not on hand, should be ordered sufficiently prior to shutdown.

Cleaver-Brooks boilers are designed, engineered, and built to provide long life and excellent service. Good operating practices and conscientious maintenance and care will assure efficiency and economy from their operation, and will contribute to many years of performance.

A total protection plan includes a Planned Maintenance Program that covers many of the items included in this chapter.

For information regarding a total protection plan, contact your local Cleaver-Brooks authorized representative.

## 8.2 - Fireside Cleaning

Soot and non-combustibles are effective insulators, and, if allowed to accumulate, will reduce heat transfer to the water and increase fuel consumption. Soot and other deposits can be very moisture- absorbent, and may attract moisture to form corrosive acids that will deteriorate fireside metal.

Clean-out should be performed at regular and frequent intervals, depending upon load, type, and quality of fuel, internal boiler temperature, and combustion efficiency. A stack temperature thermometer can be used as a guide to clean-out intervals since an accumulation of soot deposits will raise the flue gas temperature.

Tube cleaning is accomplished by opening the front and rear doors. Tubes may be brushed from either end. All loose soot and accumulations should be removed. Any soot, or other deposits, should be removed from the furnace and tube sheets.

The flue gas outlet and stack should be inspected annually and cleaned as necessary. Commercial firms are available to perform the work. The stack should be inspected for damage and repaired as required.

The fireside should be thoroughly cleaned prior to any extended lay- up of the boiler. Depending upon circumstances, a protective coating may be required.

## 8.3 - Water Level Controls

The need to periodically check water level controls and the waterside of the pressure vessel cannot be overemphasized. Most instances of major boiler damage are the result of operating with low water, or the use of untreated (or incorrectly) treated water.

Always be sure of the boiler water level. On steam boilers, the water column should be blown down daily. Check samples of boiler water and condensate in accordance with procedures recommended by your local Cleaver-Brooks authorized representative. Refer to Chapter 3 for blowdown instructions and internal inspection procedures.

Since low-water cutoff devices are generally set by the original manufacturer, no attempt should be made to adjust these controls to alter the point of low-water cutoff or point of pump cut-in or cut-out. If a low-water device should become erratic in operation, or if its setting changes from previously established levels, contact your local Cleaver-Brooks authorized representative.

**Note:** Cleaver-Brooks genuine parts should be used to ensure proper operation. Contact your local Cleaver-Brooks representative for parts information and ordering.

### **8.3.1 - Steam Boiler**

On a steam boiler, the head mechanism of the low-water cutoff device(s) should be removed from the bowl at least semi-annually to check and clean the float ball, the internal moving parts, and the bowl or water column.

Remove the pipe plugs from the tees or crosses and make certain the cross-connecting piping is clean and free of obstructions. Controls must be mounted in a plumb position for proper performance. Determine that piping is vertically aligned after shipment and installation and throughout life of equipment.

A blowdown of the water level controls on a steam boiler should be performed daily.

### **8.3.2 - Hot Water Boiler**

It is impractical to blow down the low-water cutoff devices on a hot water boiler since the entire water content of the system would become involved. Many hot water systems are fully closed and any loss of water will require make-up and additional feedwater treatment that might not otherwise be necessary. Since the boiler and system arrangement usually make it impractical to perform daily and monthly maintenance of the low-water cutoff devices, it is essential to verify proper operation. Remove the operating mechanism from the bowl annually or more frequently, if possible, to check and clean float ball, internal moving parts, and the bowl housing. Also check the cross-connecting piping to be certain that it is clean and free of obstruction.

### **8.3.3 - Water Gauge Glass**

A broken or discolored glass should be replaced at once. Periodic replacement should be a part of the maintenance program. Always use new gaskets when replacing a glass. Use a proper size rubber packing. Do not use loose packing, which could be forced below the glass and possibly plug the valve opening.

Close the valves when replacing the glass. Slip a packing nut, a packing washer, and packing ring onto each end of the glass. Insert one end of the glass into the upper gauge valve body far enough to allow the lower end to be dropped into the lower body. Slide the packing nuts onto each valve and tighten.

It is recommended that the boiler is off and cool when the glass is replaced. However if the glass is replaced while the boiler is in service, open the blowdown and slowly bring the glass to operating temperature by opening the gauge valves slightly. After glass is warmed up, close the blowdown valve and open the gauge valves completely.

Check try-cocks and gauge cocks for freedom of operation and clean as required. It is imperative that the gauge cocks are mounted in exact alignment. If they are not, the glass will be strained and may fail prematurely.

 **Warning**

**Do not attempt to change the gauge glass while the boiler is in service. Failure to follow these instructions could result in serious personal injury or death**

## 8.4 - Electrical Controls

The operating controls should be inspected monthly. Examine tightness of electrical connections and keep the controls clean. Remove any dust that accumulates in the interior of the control using a low pressure air. Take care not to damage the mechanism.

Examine any mercury tube switches for damage or cracks. Dark scum over the normally bright surface of the mercury, may lead to erratic switching action. Be certain that controls are correctly leveled. The piping leading to the pressure control actuators should be cleaned, if necessary. Covers should be left on controls at all times.

Dust and dirt can cause excessive wear and overheating of motor starter and relay contacts. Use a burnishing tool or a hard surface paper to clean and polish contacts. Starter contacts are plated with silver and are not harmed by discoloration and slight pitting. Replacement of the contacts is necessary only if the silver has worn thin.

Thermal relay units (overloads) are of the melting-alloy type and, when tripped, the alloy must be given time to re-solidify before relay can be reset. If the overloads trip out repeatedly when the motor current is normal, replace them with new overloads. If the condition continues after replacement, it will be necessary to determine the cause of excessive current draw at the overloads.

Power supply to the boiler must be protected with dual element fuses or circuit breakers. Similar fuses should be used in branch circuits. Standard one-shot fuses are not recommended.

## 8.5 - Flame Safety Control

The microprocessor based control requires minimal maintenance because the safety and logic timings are inaccessible. There also are not any accessible contacts. Check to see that the retaining screw is securely holding the chassis to the mounting base. Also check to see that the amplifier and the program module are tightly inserted.

The relay's self-diagnostic ability includes advising when it or its plug-in modules are at fault and require replacement.

Your spare control should be stored in a dry atmosphere and wrapped in plastic. During an extended shutdown (e.g., seasonal), the active control should be removed and stored. Moisture can cause problems with control operation.

It is recommended that service be rotated between the active and a spare control to assure a working replacement is available.

Be sure the connecting contacts on the control and its base are not bent out of position.

The flame detector lens should be cleaned as often as operating conditions demand. Use a soft cloth moistened with detergent to clean the lens.

### **8.5.1 - Checking Pilot Flame Failure**

Close the gas pilot shutoff cock. Also shut off the main fuel supply. Turn the burner switch ON.

The pilot ignition circuit will be energized at the end of the pre-purge period. There should be an ignition spark, but no flame. Since there is no flame to be detected, the program relay will signal the condition. The ignition circuit will de-energize and the control will lock out on a safety shutdown. The flame failure light (and optional alarm) will be activated. The blower motor will run through the post-purge and stop.

Turn the burner switch off. Reset the safety switch. Reopen the gas pilot shutoff cock and re-establish main fuel supply.

### **8.5.2 - Checking Failure to Light Main Flame**

Leave the gas pilot shutoff cock open. Shut off the main burner fuel supply. Turn the burner switch on. The pilot will light upon completion of the pre-purge period. The main fuel valve(s) will be energized, but there should be no main flame.

The fuel valve(s) de-energize within 4 seconds after the main burner ignition trial ends. The control will lock out on a safety shutdown. The flame failure light (and optional alarm) will be activated. The blower motor will run through the post-purge and stop.

Turn the burner switch off. Reset the safety switch. Re-establish main fuel supply.

### **8.5.3 - Checking Loss of Flame**

With the burner in normal operation, shut off the main burner fuel supply to extinguish main flame.

The fuel valve(s) will be de-energized and the relay will signal the condition within 4 seconds. The control will then lock out on a safety shutdown. The flame failure light (and optional alarm) will be activated. The blower motor will run through the post-purge and stop.

Turn the burner switch off. Reset the safety switch. Re-establish main fuel supply.

The flame detector lens should be cleaned as often as operating conditions demand. Use a soft cloth moistened with detergent if necessary.

---

## 8.6 - Oil Burner Maintenance

The burner should be inspected for evidence of damage due to improperly adjusted combustion. Any soot buildup on the diffuser or the oil nozzle should be removed. The setting of the oil nozzle in relation to the diffuser and other components is important for proper firing and should be checked.

### 8.6.1 - Oil Strainers

Oil strainers should be cleaned frequently to maintain a free and full flow of fuel.

### 8.6.2 - Light Oil Strainers

The fuel oil strainer screen must be removed and cleaned at regular intervals. It is advisable to remove the screen each month and clean thoroughly by immersing it in solvent and blowing it dry with compressed air. To remove, loosen the cover cap screw, being careful not to lose the copper gasket. If necessary, tap the strainer cover gently to loosen. Check the cover gasket for damage and replace if necessary. Slip pliers into the cross on the top of the strainer and twist counter-clockwise to remove the basket. Reassemble in reverse order.

### 8.6.3 - Heavy Oil Strainers

Keep the cartridge of the oil strainer clear by regularly giving the exterior handle one complete turn in either direction. Do so this often until experience indicates cleaning frequency necessary to maintain optimum conditions of flow. If the handle turns hard, rotate the handle back and forward until it can be turned through a complete revolution. Do not force it with a wrench or other tool.

Drain the sump as often as experience indicates the necessity. Remove the sump, or the head and cartridge assembly, for thorough cleaning and inspection at frequent intervals. Exercise care not to damage the cartridge discs or the cleaner blades. Wash the cartridge in solvents. Do not attempt to disassemble the cartridge.

A safety check procedure should be established to test the complete safeguard system at least once a month, or more often. Tests should verify safety shutdown and a safety lockout upon failure to ignite the pilot, upon failure to ignite the main flame, and upon loss of flame. Each of the conditions should be checked on a scheduled basis.

The following tests should be used to test the complete safeguard system. If the sequence of events is not as described, then a problem may exist. Contact your local Cleaver-Brooks authorized representative for assistance.

### 8.6.4 - Cleaning Oil Nozzle

The design of the burner, together with the oil purge system on a heavy oil burner, make it unnecessary to clean the oil nozzle during periods of operation. A routine check and any necessary cleaning should be made during off periods or when the burner is firing on gas.

If at any time the burner flame appears “stringy” or “lazy,” it is possible that the nozzle tip or swirler has become partially clogged or worn. Any blockage within the tip will cause the air pressure gauge to increase above its normal value.

Disassemble with the power off by unlatching and withdrawing the burner gun. Insert the nozzle body into the hanger vice and use the spanner wrench to remove the tip. Carefully remove the swirler and seating spring being careful not to drop or damage any parts.

Perform any necessary cleaning with a suitable solvent. Use a soft fiber brush or pointed piece of soft wood for cleaning. Do not use wire or a sharp metallic object, which could scratch or deform the orifices as well as the precision ground surfaces of the swirler and tip. Inspect for scratches or signs of wear or erosion, which may make the nozzle unfit for further use. Take the necessary precautions in working with solvents.

The tip and swirler are a matched set, which are precision lapped at the time of assembly. The close fit of the lapped surfaces must be maintained in order to provide optimum performance. Additional lapping may be required to provide better atomization for more efficient combustion. Do not interchange parts if a spare is kept. In reassembling, be certain that the seating spring is in place and that it is holding the swirler tightly against the tip. The swirler is stationary and does not rotate, but rather imparts a swirling motion to the oil.

See that the plugged hole is at the bottom of the nozzle body when the gun is installed.

#### **8.6.5 - Cleaning Air Purge Nozzle (No. 6 Oil) and Back Pressure Orifice Nozzle (No. 2 Oil)**

The air purge nozzle and its strainer should be inspected periodically and cleaned. The nozzle consists of a tip and internal core. Clean all internal surfaces of the tip and the slotted parts of the core using a wood splinter to avoid damage from scratching. Replace the core, setting it tightly but not excessively so.

Clean the strainer screen carefully to remove any foreign matter. Use suitable solvents in cleaning. Extremely hot water at high velocity is also helpful in cleaning. Replace strainer by screwing it into the nozzle body only finger tight. Do not use an orifice of a size other than originally installed.

### **8.7 - Ignition System**

For best results, maintain the proper gap and dimensions of the ignition electrode(s). See Chapter 6 for settings.

Inspect the electrode tip for signs of pitting or combustion deposits and dress as required with a fine file. Inspect the porcelain insulator (s) for any cracks that might be present. If there are cracks, replace the electrode since they can cause grounding of the ignition voltage. Since carbon is an electrical conductor, it is necessary to keep the insulating portion of electrode(s) wiped clean if any carbon is present. Ammonia will aid in removing carbon or soot.

Check ignition cables for cracks in the insulation. Also see that all connections between the transformer and the electrodes are tight.

Periodically remove the access plug from the gas pilot aspirator and clean out any accumulated lint or other foreign material.

---

## 8.8 - Gas Burner Maintenance

The gas burner components should be inspected for evidence of damage due to improperly adjusted combustion. Combustion adjustments should be checked monthly.

Check periodically for a proper seal between the end of the burner housing and boiler refractory. Any deterioration of the seal should be corrected, as an improper or poor seal allows air leaks, which can cause overheating or burning of the burner housing.

Whenever the burner is removed, the diffuser, gas housing and gas spuds (HTB model only) should be checked for any deterioration. Verify that the diffuser skirt conforms to the bore of the burner housing so as to minimize the amount of combustion air which bypasses the diffuser. If the burner is a high turndown burner (HTB) model, check to see that the diffuser is properly located in reference to the gas spuds. There should be 1/4" between the edge of the diffuser fins and the gas spuds when the burner is installed. Check to see that the diffuser fins do not interfere with the gas ports or gas spuds in the burner housing.

Check the electrode setting for any cracks that might be present on the porcelain insulator. Replace the electrode if cracking is evident, since cracking can cause grounding of the ignition voltage. Inspect the tip of the electrode for signs of pitting, combustion deposits and wear, and dress as required with a fine file.

Periodically remove the access plug from the gas pilot aspirator and clean out any accumulated lint or other foreign material.

Check the ignition cables for cracks in the insulation. Verify that all connections between the transformer and the electrode are tight.

### 8.8.1 - Motorized Gas Valve

The motorized gas valve operating mechanism is completely immersed in oil and little maintenance is required because of the sealed design. However, proper operation should be checked on a routine periodic basis.

Keep outer parts of the valve clean, especially the stem between the operator and the valve. A nicked, scored or otherwise damaged valve stem can cause leakage. Do not remove dust covers if installed.

The packing gland is of the O-ring type. If oil is noticed around the operator base or if leakage occurs, repair by replacing any leaking O-rings and refilling the actuator with oil.

If the actuator is sluggish or fails to operate, even after the oil level is checked, replace the entire operator portion.

### 8.8.2 - Solenoid Valves

Foreign matter between the valve seat and seat disc can cause leakage. Valves are readily disassembled; however, care must be used during disassembly to be sure that internal parts are not damaged during the removal and that reassembly is in proper order.

A low hum or buzzing will normally be audible when the coil is energized. If the valve develops a loud buzzing or chattering noise, check for proper voltage and clean the plunger assembly and interior plunger tube thoroughly. Do not use any oil. Be sure that the plunger tube and solenoid are tight when reassembled. Take care not to nick, dent, or damage the plunger tube.

 **Warning**

**Be sure to turn off power to the valve in order to avoid electrical shock. Failure to follow these instructions could result in serious personal injury or death.**

Coils may be replaced without removing the valve from the line. Check coil position and make sure that any insulating washers or retaining springs are reinstalled in proper order.

### 8.8.3 - Air Control Damper, Linkage and Cam Spring

The burner air control damper should be checked for free movement as a part of the monthly inspection. With the burner off and the jackshaft damper control rod disconnected, the air control damper should rotate freely through its entire range of movement. Any resistance to movement or excessive play in the support bearing should be investigated and corrected before the burner is put back in operation.

The overall tightness of the linkage assembly should be checked monthly. If necessary, tighten the setscrews and the connections at the uniballs. Check the uniballs for wear and replace if necessary.

The linkage assembly should be tight but should not bind. If the linkage assembly is binding, determine the cause of the binding and correct as necessary.

Linkage rod end attachment points should be marked on the variable displacement linkage arms as an aid in subsequent reassembly.

Inspection of the air damper and linkage bearings should be performed on a more frequent basis if the boiler is operating in a dirty environment.

The fuel cam profile spring should be inspected monthly for wear, scoring or distortion. If any of the questionable conditions are found, the spring must be replaced immediately to avoid the possibility of breakage in service. Use care to avoid damaging the cam or spring during installation.

Lubricate occasionally with a non-gumming, dripless, high- temperature lubricant such as graphite or a silicone derivative.

**! Caution**


**Combustion should be checked and readjusted as required whenever the burner is removed or any control linkage is disturbed. Failure to follow these instructions could result in equipment damage.**

## 8.9 - Forced Draft Fan

**Figure 8-1** illustrates the forced draft fan and motor mounting in relation to the fan housing. The position of the fan housing and the clearance between it and the fan (impeller) is extremely important to the output capacity of the fan.

The following procedures for installing and adjusting are as follows:

1. Bolt the motor securely to the head.
2. Slide the fan onto the shaft, but do not tighten the setscrews.
3. Turn the spacers on the studs until they contact the headplate.
4. Place external tooth lockwashers next to the spacers and install the fan housing on the studs. Hold the fan housing in place with nuts and lockwashers. Finger tighten the nuts.
5. Slide the impeller outward until its vanes contact the fan housing. The housing must be parallel to the impeller. Adjust the spacers as necessary to align the housing with the impeller.
6. Slide the impeller toward the motor. Use a feeler gauge to obtain a clearance of .030-.050" between the impeller and the housing.
7. Secure the key and then tighten the impeller hub setscrews. Using a selected vane, rotate the impeller while checking to see that the clearance between the impeller and the housing remains constant and within the specified 0.030 - 0.050" clearance.
8. Install the air duct assembly through the head opening. Tighten the screws securing the air duct to the fan housing only enough to create a seal between the neoprene gasket and the housing.
9. After connecting the motor leads, verify that the impeller rotation is counter-clockwise when viewed from the motor end.

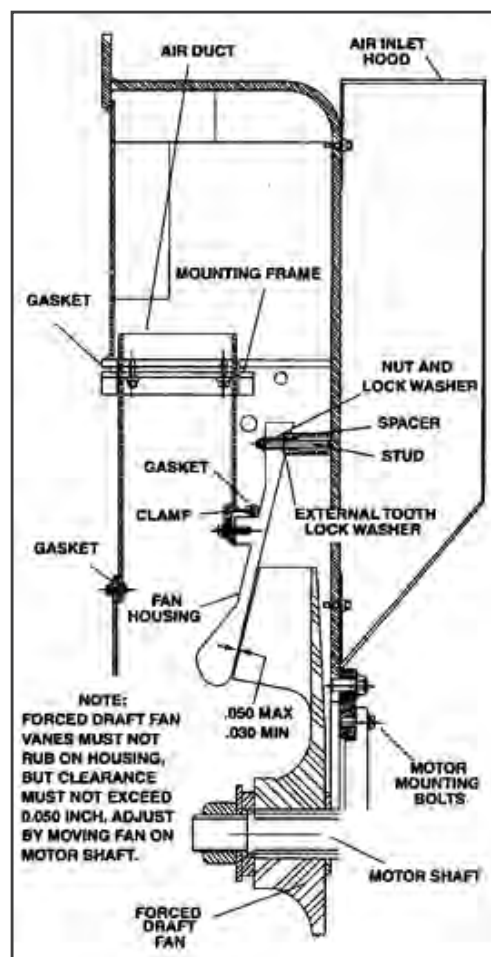

**FIGURE 8-1. Forced Draft Fan**

### Notice

If the boiler is installed in a dusty location, check the vanes occasionally for deposits of dust or dirt. These buildups can cause a decrease in air capacity, or lead to an unbalanced condition or cause damage to the equipment.

## 8.10 - Fan/Motor Cassette Removal

Before the boiler is commissioned at the job site, the IFGR system should be visually inspected. The fan/motor cassette should be removed to expose the internal IFGR linkage and damper. Remove the fan/motor cassette as follows:

1. Disconnect and lock out electric power to the boiler.
2. Be sure that the front door is securely bolted to the boiler
3. Release the davit arm by removing the retaining bolt at the top center of the boiler.
4. Connect the davit arm to the fan/motor cassette using the suspension system diagrammed in **Figure 8-2**
5. Arrange the attaching chains so the lifting point is over the motor shaft centerline and the center of balance for the fan/ motor cassette. This point is approximately 4-inches from the motor backplate for 600-800 hp units, and 3-inches for 250- 500 hp units.
6. Remove the fan/motor cassette fastening nuts
7. Swing the fan/motor cassette to the side and secure it to the boiler using high strength cord. Do not over extend the motor wires.

### Warning

**Disconnect and lock out electrical power to the boiler before removing the fan/motor cassette. Failure to follow these instructions can result in electrical shock and serious personal injury or death.**

### Warning


**Do not remove the davit arm assembly without first ensuring that the front door is securely bolted to the boiler. Failure to follow these instructions can result in serious personal injury or death.**

### Warning

**When suspending the fan/motor cassette from the davit arm, all equipment used must be of adequate strength to safely support the complete cassette. Failure to follow these instructions can cause injury or death.**

### Caution

**Chains or other devices used to attach a lifting device to the fan/motor cassette must be arranged so the cassette does not rotate or tilt when removed from the front head. Failure to follow these instructions could result in damage to equipment.**

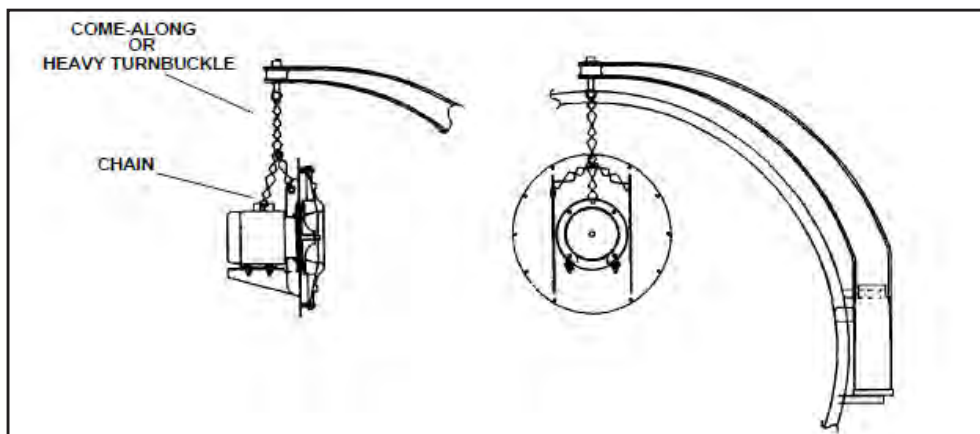

**FIGURE 8-2. Fan/motor cassette rigging**

### Caution

**Be sure that the fan motor wiring and conduit are not stretched during the fan/motor cassette removal. Failure to follow these instructions can result in damage to the equipment.**

## 8.11 - IFGR Inspection and Adjustment

NOx levels should be checked periodically to ensure compliance with all local and federal regulations, as well as to ensure that the boiler is operating at maximum efficiency. Linkages should be inspected and free movement (no binding) of the IFGR damper confirmed.

Increasing or decreasing NOx levels could indicate incorrect damper positioning, loose linkages, an improper air-to-fuel ratio, or stack draft changes. If adjustment is required, or if problems persist, contact your local Cleaver-Brooks authorized representative for further assistance.

As ash and products of combustion pass through the IFGR damper, there will be some accumulation on the damper, windbox, and other parts of the IFGR system and burner.

**TABLE 8-1. Impeller clearances**

60 PPM	9 PPM 30 PPM 25 PPM	5-7 PPM 20 PPM
.040 ±.010	0.050 +.010/-.005	.060 +.005/-.000

To ensure proper operation of the IFGR system and burner, inspection and cleaning should be performed at regular intervals, depending on the load, type of fuel, and combustion temperatures.

1. With the IFGR damper exposed, inspect the internal linkages for secure connections, and check for free movement of the linkage arms and the IFGR damper assembly. To check for free movement of the linkage separate the external linkage from the jackshaft drive arm(s) and cycling the exterior linkage through its range of movement.
2. The clearance between the impeller and backplate should be checked, and adjusted, if required.
3. The impeller clearance is checked by inserting a long feeler gauge of the proper thickness between the impeller and the impeller housing. Impeller clearances should be checked at the highest fin on the impeller (that fin which is closest to the impeller housing), and must be checked at each point where the housing is attached to the motor backplate.
4. If the impeller clearance is not correct at all points, make adjustments as follows:
  - A. Loosen the retaining nuts on both sides of the impeller housing.
  - B. Adjust the retainers for the correct impeller clearance at two housing attachment points 180° apart.
  - C. Adjust the retainers for correct clearance at the housing attachment points 90° from those initially adjusted.
  - D. Adjust for correct impeller clearance at the remaining attachment points.
5. Check and replace any gaskets that have been damaged. Gaskets that have been in use for one year or more should be replaced. In particular, inspect the airbox gasket for damage.

See also "IFGR Setup" in Chapter 5.

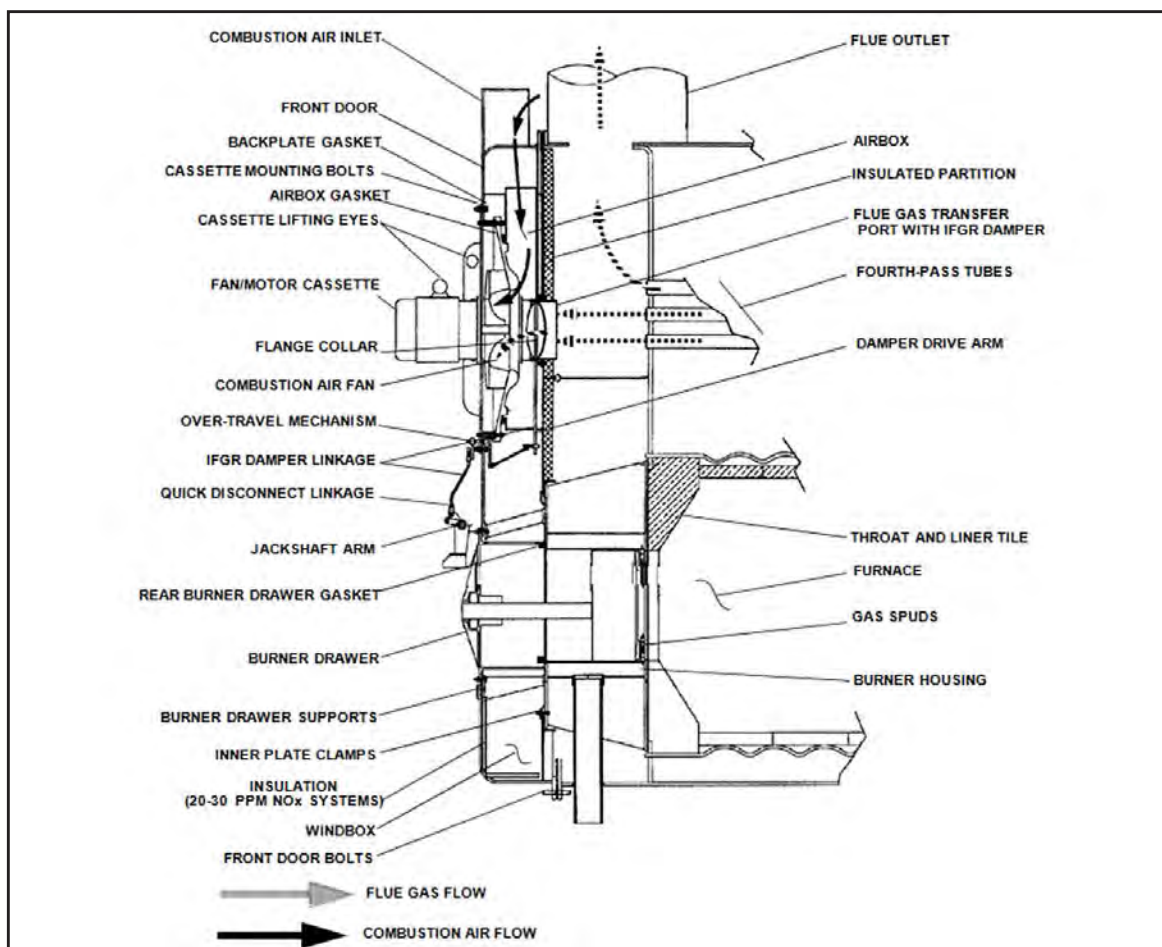


FIGURE 8-3. IFGR System

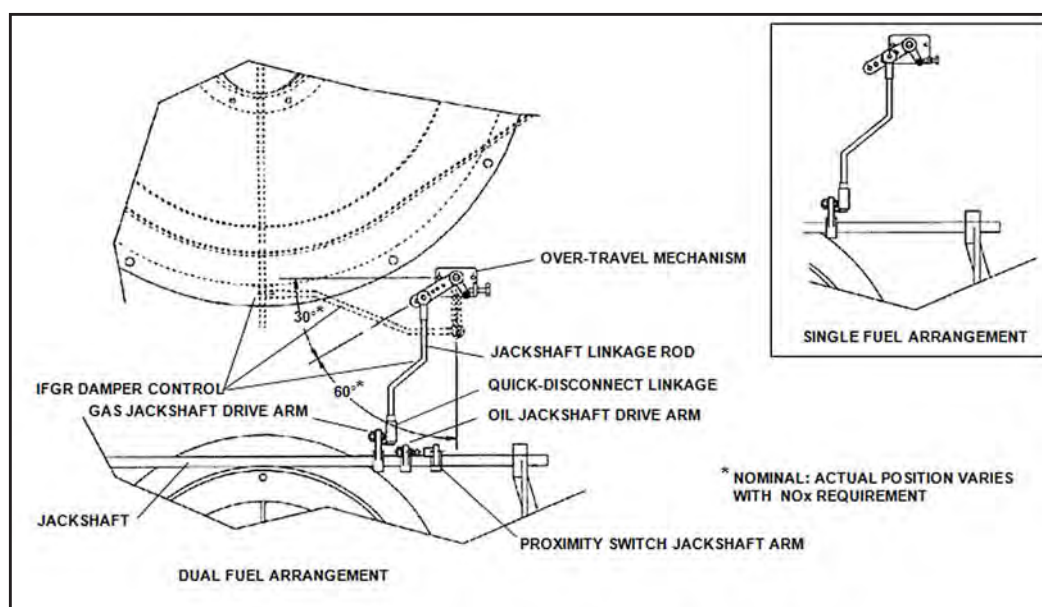


FIGURE 8-4. IFGR Damper Linkage

---

## 8.12 - Airbox Gasket Installation

 **Caution**

**When replacing the airbox gasket, use only Cleaver-Brooks components. Failure to use components designed for this application can result in improper combustion. Failure to follow these instructions can result in equipment damage.**

If the fan/motor cassette is opened for any reason after the unit has been in operation for one year, the airbox gasket should be replaced.

Attach the airbox gasket to the inlet box with high-temperature silicone adhesive/sealant, using two beads of silicone about 1/4" in from each side of the gasket (gasket surface is 2" wide).

1. Secure the gasket in position with clamps, using strips of wood on top of the gasket for a bearing surface.
2. After the silicone has dried (approximately 24 hours), remove the clamps and strips of wood.

## 8.13 - Fan/Motor Cassette Installation

 **Warning**

**Do not remove the davit arm assembly from the motor/fan cassette without first verifying that the cassette is securely bolted to the boiler. Failure to follow these instructions can result in serious personal injury or death.**

The fan/motor cassette can be closed as follows:

1. Check that all adjustment screws are tight, and check the linkage and IFGR damper for free movement before closing the unit.
2. Position the cassette into the front door.
3. Slide the cassette into position until it begins to contact the inlet gasket, then measure the clearance between the cassette flange and the front door mounting face. There must be clearance of at least 1/4" to provide adequate gasket compression when the cassette is mounted tightly to the door.
4. Secure the cassette with the fastening nuts.
5. After the cassette has been secured to the front head, reconnect the davit to the front door by screwing in the retaining bolt at the top centerline.

Check occasionally that the fan is securely tightened to the motor shaft. Check the clearance between the fan vanes and housing as outlined above.

## 8.14 - Safety Valves

The safety valve is a critical safety device and should be given due attention in the course of boiler maintenance.

Follow the recommendations of your boiler inspector regarding valve inspection and testing. The frequency of testing, either by the use of the lifting lever or by raising the steam pressure, should be based on the recommendation of your boiler inspector and/or the valve manufacturer, and in accordance with sections VI and VII of the ASME Boiler and Pressure Vessel Code.

Avoid excessive operation of the safety valve; even one opening can provide a means of leakage. Safety valves should be operated only often enough to assure that they are in good working order. When a pop test is required, raise the operating pressure to the set pressure of the safety valve, allowing it to open and reseal as it would in normal service.

Do not hand operate the valve with less than 75% of the stamped set pressure exerted on the underside of the disc. When hand operating, be sure to hold the valve in an open position long enough to purge accumulated foreign material from the seat area and then allow the valve to snap shut.

Frequent usage of the safety valve will cause the seat and disc to become wire drawn or steam cut. This will cause the valve to leak and necessitate down time of the boiler for valve repair or replacement. Repair of a valve must be done only by the manufacturer or his authorized representative.

Avoid having the operating pressure too near the safety valve set pressure. A 10% differential is recommended. An even greater differential is desirable and will assure better seat tightness and valve longevity.

## 8.15 - Fuel Oil Metering Valve

In the event that a leak occurs in the packing of the metering valve, the packing nut should be snugged gradually to stop the leak.

If replacement of the metering valve packing is necessary, procure kit P/N 880-370 and install in accordance with the following procedure.

1. Shut off the oil flow. Be sure no pressure shows on the gauge.
2. Match-mark the cam hub and drive shaft. Match marking will enable replacement of the cam in its original position and result in a minimum of cam adjustment when the burner is restarted.
3. Clamp or hold the metering stem in the down position.

---

 **Caution**

---

The caution symbol consists of a triangle with an exclamation mark inside, followed by the word "Caution" in a bold, sans-serif font.

**Do not over tighten the metering valve packing nut. Excessive tightening of the packing nut prevents free movement of the metering stem. Failure to follow these instructions can cause damage to the equipment.**


4. Loosen the setscrews in the cam hub and rotate, or move the cam to a position where it does not interfere with stem removal.
5. Withdraw the metering valve stem and spring. Do not drop or mishandle. Check for nicks or scratches. Check that the pin holding the metering portion is not protruding. Back off the packing gland.
6. Remove the capscrews holding the jack shaft support bracket so that the bracket can be moved. It may also be necessary to loosen the supporting bracket on the far end of the shaft.
7. Remove the existing packing and guides. Do not reuse the packing and guides.
8. Lightly coat the stem with the lubricant provided with the packing kit. Place the new packing, O-rings and guides onto the stem in the sequence shown in Figure 8-15. The beveled face of the guides and the teflon

rings must face upward, with the exception of the upper brass guide which is faced down. Be sure that the O-rings are properly located.

9. Using the stem as a guide, insert the assembled packing into the cavity, then withdraw the stem.
10. In the event the packing is too high, remove one teflon packing from each side of the middle brass guide as needed. Under no circumstances eliminate the two teflon packings on only one side of the brass guide.
11. Replace the gasket, put the support in place, and secure all fastenings.
12. Replace the metering stem and spring. Lightly lubricate the stem to facilitate insertion and easy movement. Use care when inserting so that the orifice and the stem are not damaged.
13. Snug the packing gland, but only sufficiently to place slight tension on the packing. The stem must move freely from the force of the spring.
14. Work the stem up and down several times to ensure that it moves freely.
15. Depress the valve stem and replace the cam. Mate the match- marks and secure the setscrews. Be sure the cam spring is centered in the roller.
16. Restore oil flow. Test fire the burner at various firing rates being certain that the metering stem freely follows the cam.
17. Tighten the packing gland after a period of operation, if necessary, to maintain proper tension on the packing. Do not overtighten.

If there are indications that the oil metering valve has become clogged at its orifice, it will be necessary to disassemble the control to remove the obstruction. Clean the slotted stem of the oil metering valve with suitable solvent and blow-dry with an air line. Follow the procedure outlined above when removing or reinstalling the metering valve stem. Also check all fuel line strainers.

Should a pressure adjusting or relief valve become clogged, disassemble by releasing the locknut and backing off the screw to relieve tension on diaphragm. Remove the valve cover and the diaphragm to expose any dirt or foreign material which may have entered the valves. Clean out carefully and reassemble. It is recommended that the diaphragms be replaced annually.

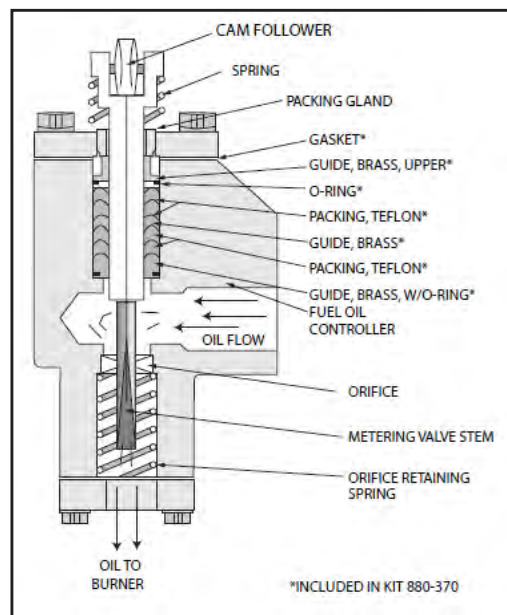

**FIGURE 8-5. Metering Valve Packing**

## 8.16 - Air Compressor

The air pump itself requires little maintenance. However, the life of the pump is dependent upon a sufficient supply of clean cool lubricating oil. The oil level in the air-oil tank must be observed closely. Lack of oil will damage the pump making replacement necessary. Disassembly or field repairs to the pump are not recommended.

Lubricating oil must be visible in the gauge glass at all times. There is no specific level required as long as oil is visible. Do not operate if oil is not visible.

Oil with proper viscosity must be used. SAE 20 detergent is recommended, although SAE 10 detergent is also permissible. When adding oil, remove the cover from the fill pipe and add oil through the conical strainer in the pipe with the unit running.

The oil and its container should be clean. Although there is a strainer in the lube oil line, its purpose is to remove any unwanted materials rather than to act as a filter for unclean oil.

### 8.16.1 - Lubricating Oil Strainer and Cooling Coil

Air pressure from the pump forces lubricating oil from the tank through a cooling coil to the pump. The oil lubricates the pump bearings and also provides a seal and lubrication for the pump vanes.

The cooled oil flows to the pump through the strainer in the filler pipe. It is possible to visually verify oil flow during operation by removing the filler cap and checking the flow. If necessary, the strainer may be cleaned during operation.

In the event it is necessary to clean the strainer during operation, clean it and replace immediately. It can be cleaned by immersing in solvent and blowing it dry with compressed air. Do not operate without the strainer any longer than necessary, and never add new oil unless it is in place. A spare strainer basket can be obtained, if desired, and used on a rotating basis while the other is serviced.

### 8.16.2 - Air Cleaner

Never operate the air pump without the air cleaner in place. The cleaner itself must be periodically checked and its element flushed and cleaned semi-annually.

### 8.16.3 - Air-Oil Tank

Pads of steel wool are used in the air to oil tank as a filtering medium to separate the lube oil from the compressed air. Figure 8-6 shows a cross-section of a tank and the location of the steel wool.

The pads play a very important role and should be replaced semi-annually. It is also important that a proper grade of steel wool be used. Only No. 3 coarse grade American steel wool or equal (CB P/N 919-00124) should be used. Three pads are required. When replacing the wool, insert two pads into the cylinder. Alternate the grain of the pads. Install the spacer with its stub end toward the opening and fit one pad over the stub. Be careful not to overly compress the wool and be sure that it is fluffed out to fill all available space. Improper packing can cause high oil consumption. After the last pad is in place, slip the retainer screen onto the cylinder. Be sure to fit an O-ring gasket under the cover so that a tight seal is obtained.

Follow previous instructions for oil replacement.

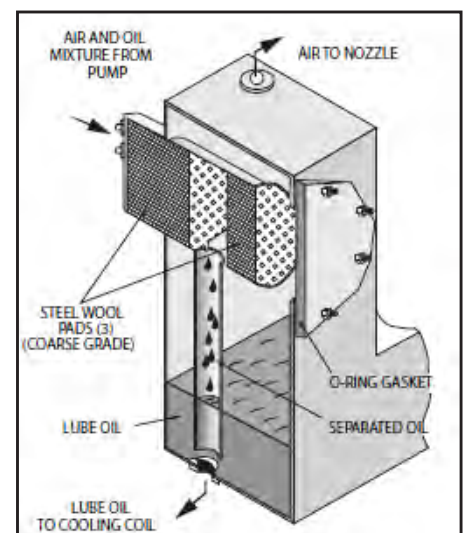


FIGURE 8-6. Air-Oil Tank

#### 8.16.4 - Lube Oil Cooling Coil

The fins on the tubing must be kept clean and free of any dust or dirt that would resist air flow and cause overheating. Use an air hose to blow away debris. Internal cleaning of the tubes is seldom required if a good quality lube oil is used.

#### 8.16.5 - Flexible Coupling Alignment

Alignment of the pump and motor through the flexible coupling is extremely important for trouble-free operation. Check the coupling alignment semi-annually and replace the coupling insert as required. Keep the coupling guard in place.

The most commonly used tools for checking alignment are a small straightedge and a thickness gauge.

The coupling must be checked for both parallel (offset) alignment and angular (gap) alignment. Parallel misalignment exists when shaft axes are parallel but not concentric (see Figure 8-18). Angular misalignment is the reverse situation - shaft axes concentric, but not parallel.

Checking parallel alignment, both horizontal and vertical can be accomplished, by laying a straightedge across the coupling halves and checking with a thickness gauge to obtain the amount of misalignment. The check should be done on the top of the coupling and at 90 degrees. A useful hint is to hold a flashlight behind the straightedge so that any gap can readily be seen.

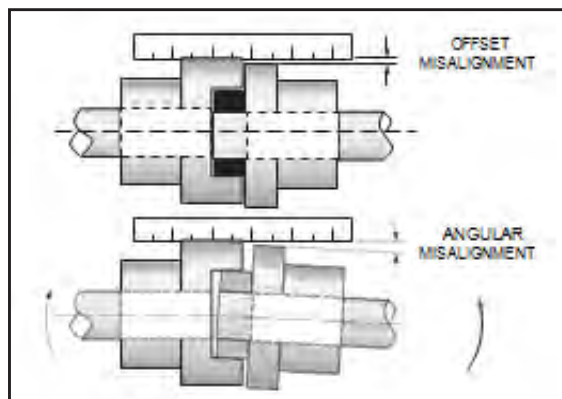


FIGURE 8-7. Flexible Coupling

Shim stock of appropriate thickness and area is then used under either the feet of the pump or the motor to establish parallel alignment. A tolerance of .008" is a permissible limit.

After parallel alignment is established, check for angular alignment, which is done by checking the gap between coupling halves. The coupling should have a minimum gap of 1/16" and a maximum of 3/32".

Set the spacing between the halves at one point by using a thickness gauge and then rotate the coupling slowly to be sure that clearance at that point remains the same through 360 degrees of rotation. Adjust to obtain proper gap by loosening the hold-down bolts and shifting either the pump or the motor as required.

Generally, a slight tapping on either the front or rear legs is all that is needed to obtain lateral adjustment. Rear legs may require shimming for vertical correction.

Tighten the hold-down bolts after adjustments are made and recheck alignment.

Calipers can also be used to check angular alignment. Measure the overall distance of the outer ends of the coupling halves at 90° intervals. Shift the pump or motor, as required, so that the ends of the coupling are the same distance apart at all points. The coupling will then have proper angular alignment.

Remember that alignment in one direction may alter alignment in another. Recheck both angular and parallel alignment procedures after making any alteration.


A properly aligned coupling will last longer and will provide trouble-free mechanical operation.

#### 8.16.6 - Air Compressor Replacement

Use the following procedures in replacing the pump. Be sure to tag the motor leads if disconnected to simplify reconnection.

## Dismantling

1. Lift out the two front cylinder pins that hold the screen, and remove the screen.
2. Disconnect the flared nut on tubing behind the screen and lift tubing high enough to prevent drainage of lubricating oil from the tank.
3. Disconnect the flared nut at the orifice fitting.
4. Remove the two sheet metal screws that hold the cylinder in place. One screw is located at the top rear of cylinder, the other is at the bottom front.
5. Remove the entire heat exchange assembly, consisting of the cylinder, the finned tubing, and the oil line.
6. Remove the fan from the air pump.
7. Disconnect the flexible air line from the lube tank.
8. Remove the coupling guard by pushing in on both sides until it clears the clamp.
9. Loosen the clamp at the rear of the tank and remove the tank with copper tubing attached.
10. Leave the rear pump bracket (coupling end) in place to aid in realignment of the replacement pump. Do this by removing the two capscrews that extend through the bracket into the pump housing. Temporarily leave the front bracket attached to the pump.
11. Remove screws holding the front bracket to the base and lift off the pump with its attachments. Note the location of the pipe fittings and brackets prior to removing for installation on the replacement pump. If piping is dismantled, be sure that the check valve is reinstalled so that the gate swings towards the pump.

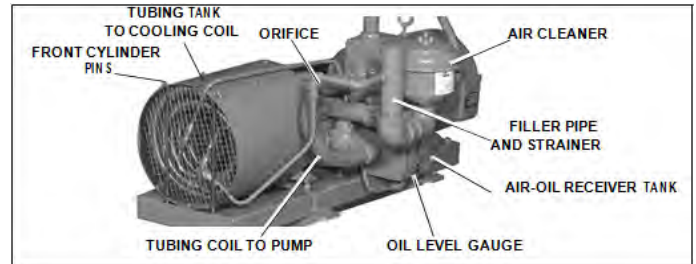

**FIGURE 8-8. Air Compressor**

## Reassembly

Reassemble in reverse order of disassembly. With the rear pump bracket left in place, realignment and spacing between the pump shaft and the motor shaft is greatly simplified.

There should be approximately 7/8" space between the two shafts. Place the coupling insert between the coupling halves prior to reassembly. Check that both shafts rotate freely.

Refer to the previous section on coupling alignment instructions.

If shims were used originally under either pump brackets or motor feet, be sure that they are correctly reinstalled.

When reinstalling the fan, slide the hub on the pump shaft so that it is bottomed. Tighten the setscrew and cap screws. If the fan blades were removed from the hub, be sure that the side of the blade marked "Blower" faces the hub when reassembling. When tightening the coupling halves or the fan hub, tighten the setscrews against the key first, then tighten the setscrew against the shaft. Clean or remove any dust or grime from the blades prior to reinstalling.

When replacing the retainer screen, a slight force may be required to push the cooling coil into the air cylinder so that the pins may be fitted into place.

Be sure that all piping connections are tight.

If the motor was replaced or if motor leads were disconnected, be sure that pump rotation is correct before starting operation. The air pump should rotate in a clockwise direction, as viewed from the drive shaft end.

## 8.17 - Refractory

The boiler is shipped with completely installed refractory. The refractory consists of the rear head, the inner door, and the furnace liner. Normal maintenance requires little time and expense, and prolongs the operating life of the refractory.

Preventive maintenance through periodic inspection will keep the operator informed of the condition of the refractory, and will guard against unexpected and unwanted downtime and major repairs.

Frequent wash coating of the refractory surfaces is recommended. High-temperature-bonding, air-dry type mortar, diluted with water to the consistency of light cream, is used for wash coating. Recoating intervals will vary with operating loads and are best determined by the operator when the boiler is opened for inspection.

### 8.17.1 - Furnace Liner

Maintenance consists of occasional wash coating of the entire liner. Face all joints or cracks by applying high temperature bonding mortar with a trowel or fingertips. Wash coating should be done as soon as cracks are detected.

Should segments of the liner burn away or fall out, replace the entire refractory. Any refractory that may break out should be removed as soon as detected so that it will not fuse to the bottom of the furnace and obstruct the flame.

If replacement is necessary, refer to Chapter 9 and order proper replacement materials. Remove existing refractory. Thoroughly clean the furnace to remove all old refractory cement or other foreign material to ensure the new liner seats firmly against the steel. Inspect the furnace metal.

Depending upon the design pressure of the boiler, the furnace may be of the corrugated type. It is necessary to fill in the corrugation valleys under the furnace liner tile from 4 o'clock to 8 o'clock with insulating cement. The liner tile should be fitted tightly against the crown of the corrugation.

### 8.17.2 - Throat Tile

The throat tile must be installed to maintain an approximately 16" inside diameter, and be centered in the furnace. Since the thickness of the furnace metal varies with the boiler design pressure, a shim of appropriate thickness must be used to compensate for the variance. A layer or two of insulating board or equal, or a bed of refractory material, may be used to center the ring.

The liner tile can be fitted tightly against the furnace, since the finished diameter is not critical.

It is recommended that the tile be dry-fitted, match-marked, removed, and then reinstalled with the proper amount of refractory cement. Thin joints (less than 1/16") are desirable. Generally, it will be necessary to shave a portion from one or more tiles to obtain a fit. If a fill piece is required, cut it to fit and install the piece at the bottom of the furnace. When installing the housing, or the tile against the housing, liberally coat the surface with refractory cement. Remove any cement that is squeezed out.

Allow refractory to air dry as long as possible. If immediate use is required, fire intermittently at a low rate for several hours to thoroughly dry the refractory.

For detailed information, contact your local Cleaver-Brooks representative.

**Notice - The area between the burner housing and the throat tile requires a good seal. An improper or poor seal allows air leaks that can cause overheating and burning of the burner housing metal. The area should be inspected semi-annually. Contact your local Cleaver-Brooks representative for information and service.**

### 8.17.3 - Installation (60" boiler)

Furnace Tiles - Start from bottom of furnace and work around both sides to top and determine if a cut tile is needed. If a cut tile is required, cut to suit, shift tiles, and re-install w/ cut tile located on bottom of furnace.

Precast Dry Oven - Glue fiberglass rope to dry oven around the outside diameter of precast. Apply Trowleze to end of furnace tiles. Fit up dry oven and tighten in place. Remove excess cement.

#### Notes:

1. No cut tiles are to be installed in the upper 120 deg. quadrant of the furnace.
2. Pack all tiles tightly w/ mallet and remove all excess cement - 1/16" typical joint (1/8" max.). All tiles should fit tight to furnace walls w/ no expansion space between.
3. Stagger all cemented joints (seams) between all tiles.
4. After each half course of tiles is installed, clean up excess cement and fill in any open joint (seam) areas.

Refer to parts list for illustrations and part numbers.


### 8.17.4 - Installation (67" & 83" boilers)

1. Install studs, bricking tool, Cerafelt, bottom and top arch bricks as shown on Detail "A" to check fit up. If interference is present at arch brick I.D., measure this distance and trim I.D. of all bricks typical. Note: Arch bricks must be trimmed on excessive pressures to maintain brick I.D.

2. Install bottom half of arch bricks as shown on Detail "B".

3. Mix vee block to a mortar-like consistency (per manufacturers instructions) and pack front (3) valleys of furnace corrugations w/ mixture flush w/ furnace I.D. up to 3 and 9 o'clock centerline of furnace. Install both pieces of item #7 Cerafelt (to insulate tile from corrugation) and begin bottom half of first row of tiles as shown on Detail "C" (see Note #7 and 8).

4. To begin top half of arch bricks and tiles, measure off upper half of furnace arch bricks and tiles w/ templates, mark w/ chalk, and determine if a cut brick or cut tile is needed (see Detail "B"). If cut brick is required, locate below 2 and 10 o'clock positions (see Note #4). If brick is cut, angle of cut surface should be the same as original brick. If cut brick or tile measures less than 1/2 full width, cut two (2) pieces (see Note #1).

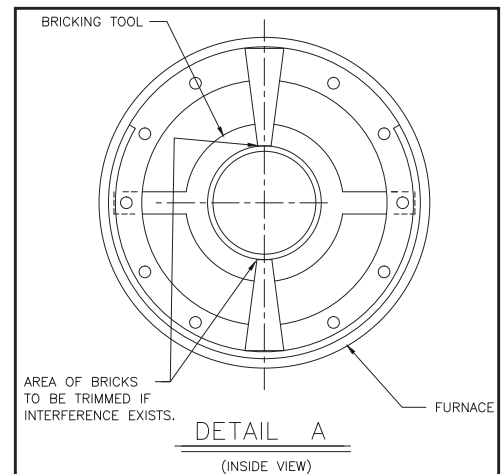

5. Install bricking tool as shown on detail “A” and continue installing upper half by alternating one (1) arch brick and one (1) corresponding tile behind brick typical.

6. For the last two (2) rows of tiles, pack all remaining valleys of furnace corrugations (measure 36” from inside surface of arch bricks) w/ vee block mixture flush w/ furnace I.D. up to 3 and 9 o'clock centerline of furnace.

7. Install both pieces of item #8 Cerafelt and continue laying furnace tiles.

8. After joint cement hardens (2 hours approx.), remove bricking tool, wooden tile supports, and discard Cerafelt shims.

### Notes:

1. No Cerafelt, cut bricks, or cut tiles to be installed in upper 120 deg. quadrant of furnace, as shown on details “B” and “C”.

2. Pack all bricks and tiles tightly w/ mallet and remove excess cement- 1/16” typical joint/ 1/8” max.

3. No cement applied between Cerafelt and bricks, tiles, or furnace. Only applied between bricks and tiles.



4. Do not cover furnace weld seam w/ Cerafelt. cut and space to suit as shown on details “B” and “C”.

5. Support upper tiles w/ wooden boards to suit @ assembly. two (2) boards per tile as shown on detail “C”.

6. To ensure tight fit and maximum I.D. of arch bricks, cut a 3” sq. piece of scrap Cerafelt and use as a shim between bricking tool O.D. and I.D. of upper half of bricks typical (if necessary).

7. Stagger cemented joints (seams) between all arch bricks and tiles.

8. After each half course of bricks or tiles is installed, clean up excessive cement and fill open joint areas where necessary.

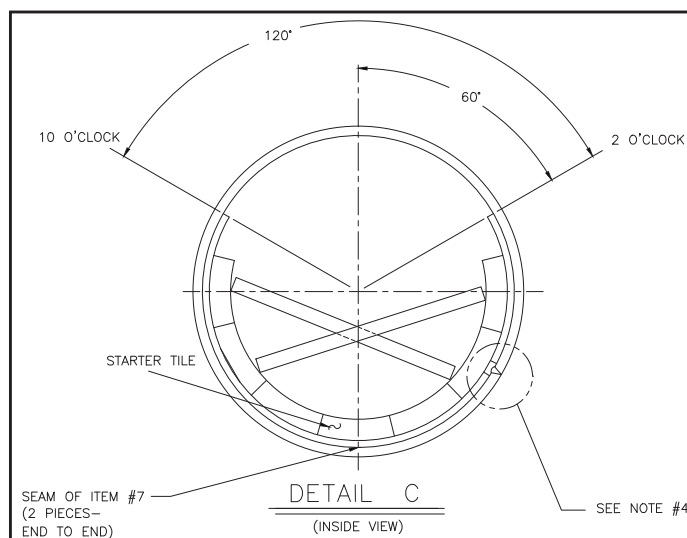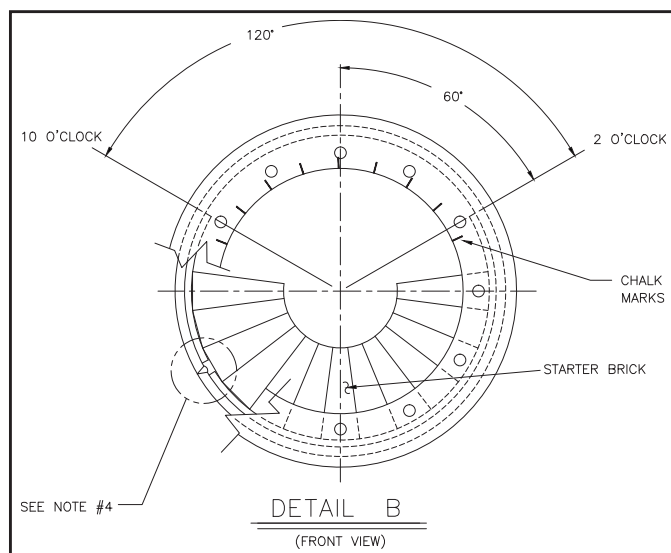

Refer to parts list for additional illustrations and part numbers.

## 8.18 - Rear Door

The rear door is a steel shell containing horizontal baffle tiles and lined with insulation material and castable refractory.

Burned or discolored paint on the outer surface of the door does not necessarily indicate refractory trouble, but may be an indication of other conditions, such as:

- Leaking gaskets.
- Improper seal.
- Door retaining bolts insufficiently or unevenly tightened.

- The air line to the rear sight tube may be blocked or loose.
- Door was repainted with other than heat resistant paint.

Therefore, before assuming that the refractory requires reworking:

1. Check the condition of the tadpole gasket and rope seal.
2. Check the condition of the insulating cement protecting the tadpole gasket.
3. Check the horizontal baffle tile for large cracks, breaks, chipped corners, etc.
4. Check for cracks in the castable refractory at ends of the baffle tile.
5. Check the tightness of the door bolts.
6. Be sure that the air line to the sight tube is clear, and that the connections are tight. If necessary, blow the line clear with an air hose.

It is normal for refractories exposed to hot gases to develop thin "hairline" cracks. It by no means indicates improper design or workmanship. Since refractory materials expand and contract with changes in temperature, they should be expected to show minor cracks due to contraction when examined at low temperatures. Cracks to approximately 1/8" across may be expected to close at high temperature. If there are any cracks that are relatively large (1/8" to 1/4" in width), clean and fill them with high-temperature- bonding mortar. Any gap that may show between the castable refractory and the baffle tile should be filled in a similar manner.

#### 8.18.1 - Opening and Preparation for Resealing

A good seal between the rear door and the pressure vessel is necessary to prevent leakage of combustion gases, loss of heat, and to aid in obtaining operating efficiency. Leaks can also cause hot spots that can lead to premature refractory failure and/or damage to the door metal.

When opening the door, either for routine maintenance or for an annual inspection, do not do so when the boiler or the door is hot. The refractory will hold its temperature for some time and exposure to ambient temperature or rapid cooling may cause refractory cracking and/or harm to the boiler and door metal.



**Be certain that the davit arm is under tension before opening. Failure to follow these instructions can result in serious personal injury or death.**

Before loosening the door bolts, tighten the nut on the davit stud to ensure tension on the davit arm. Putting the davit arm under tension will help eliminate sagging, and will facilitate opening and closing.

The opened door should be supported by blocking or jacking to eliminate possible deformation of the door.

After opening the rear door, clean the flange with a scraper or wire brush. Clean the surface of the refractory carefully with a fiber brush to avoid damaging the surface. Clean the mating surfaces of the baffle and the boiler shell. Remove all dried sealing material.

Remove the old rope from the rear door baffle. Be careful not to chip or crack the refractory. Apply spray adhesive (P/N 797-1813) to the groove in the baffle and attach a new length of 1-1/2" diameter fiberglass rope (P/N 853-1036) to the groove. Be certain that the rope is properly positioned. Wash-coat the lower half of the rear door refractory prior to closing.

### 8.18.2 - Closing and Sealing

Attach new tadpole gasket with fasteners 841-00507. Apply spray adhesive 797-1813 around the inner circumference of the gasket and across the baffle seal area of the tube sheet. Apply blanket insulation 872-1073 to this area. Refer to Figure 8-9.

Door bolts should be run in snug and tightened evenly to avoid cocking the door and damaging the gasket. Start tightening at top center and alternate between the top and bottom bolts until both are tight. Do not overtighten. Tighten alternate bolts until the door is secured and gas tight. After the boiler is back in operation, retighten the bolts to compensate for any expansion. Loosen the nut on the davit stud to release tension from the davit arm.

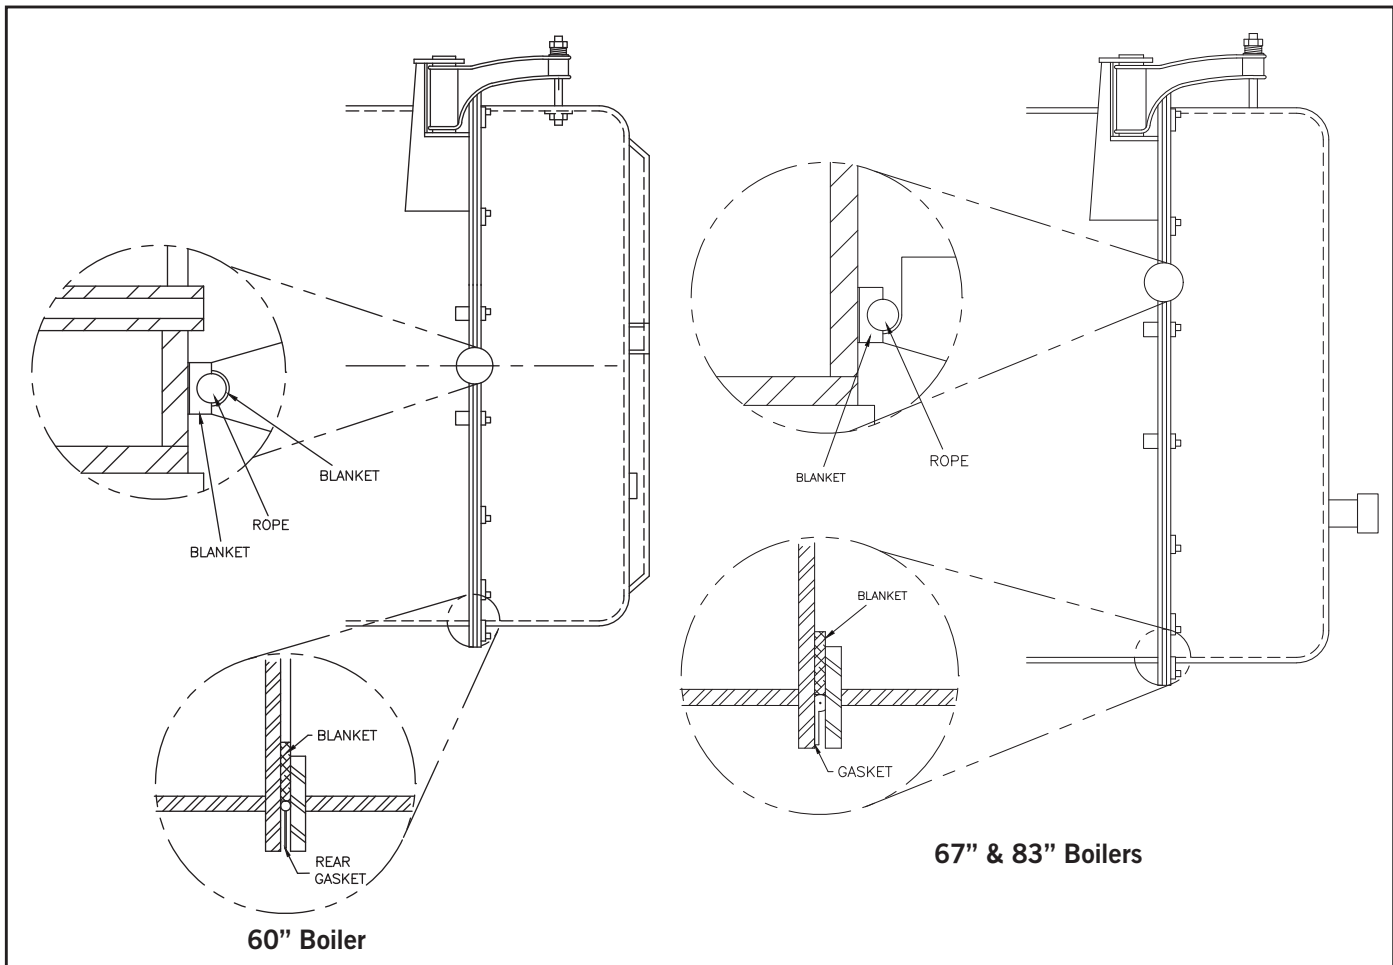


FIGURE 8-9. Rear Door Seal

## 8.19 - Lubrication

Manufacturers of electric motors vary in their specifications for lubrication and care of motor bearings; their specific recommendations should be followed.

Ball-bearing-equipped motors are pre-lubricated. The length of time a motor can run without having grease added will depend upon many factors, including the rating of the motor, type of motor enclosure, duty, atmospheric conditions, humidity, and ambient temperatures.



**Disconnect and lock out electrical power to the boiler before lubricating the fan motor. Failure to follow these instructions can cause injury or death.**

Complete renewal of grease, when necessary, can be accomplished by forcing out the old grease with the new grease. Thoroughly wipe those portions of the housing around the filler and drain plugs (above and below bearings). Remove the drain plug (bottom) and free the drain hole of any hardened grease which may have accumulated. With the motor not running, add new grease through the filler hole until clear grease starts to come out of the drain hole. Before replacing the drain plug, reconnect power and run the motor for 10 to 20 minutes to expel any excess grease. The filler and drain plugs should be thoroughly cleaned before they are replaced. Disconnect and lock out power and wipe excess grease from motor before replacing fill and drain plugs.

**Baldor and Marathon motors** - refer to motor nameplate for recommended lubricant. Do not mix different grease types.

**Siemens motors** - *Aluminum complex high temperature grease* required. Do not mix with other lubricants.

**TABLE 8-2. Fan/Motor/IFGR System Maintenance Schedule**

Daily	<ul style="list-style-type: none"> <li>• Check visually for free movement of IFGR linkage.</li> </ul>
Quarterly	<ul style="list-style-type: none"> <li>• Manually check for free movement of IFGR linkage.</li> <li>• Inspect and clean IFGR damper (oil-fueled system).</li> <li>• Inspect and clean fan and burner (oil-fueled system).</li> <li>• Grease fan motor.</li> </ul>
Semi-Annual	<ul style="list-style-type: none"> <li>• Inspect and clean IFGR damper (gas-fueled system).</li> <li>• Inspect and clean fan and burner (gas-fueled system).</li> <li>• Open motor/fan cassette to check for free movement of IFGR linkage and damper assembly.</li> </ul>
Annual	<ul style="list-style-type: none"> <li>• Inspect fan impeller.</li> <li>• Check emissions.</li> <li>• Change inlet gasket.</li> </ul>

---

## 8.20 - Control Linkage

Apply a non-gumming, dripless, high temperature lubricant, such as graphite or a silicone derivative to all pivot points and moving parts. Work lubricant in well and wipe excess. Repeat application at required intervals to maintain freedom of motion of parts.

## 8.21 - Solenoid and Motorized Valves

Solenoid valves and motorized valves require no lubrication.

## 8.22 - Oil Heaters - Electric, Steam, Hot Water

An annual maintenance of the heaters consists primarily of removing the heating element from the shell and scraping any accumulation of carbonized oil or sludge deposits that may have collected on the heat exchanging surfaces.

Before breaking any of the electrical connections to the electric heating elements, mark all wires and terminals to assure rapid and correct replacement of wires.

Finish the cleaning process with a cleaning solvent to cut all hardened deposits from the heater element. Because of the insulating effect of carbon and sludge, periodic cleaning is necessary to prevent overheating of the elements. If operation of the heater becomes sluggish, examine the elements at once and clean as required.

Inspect the shell or tank each time the heater is removed. Flush all accumulated sludge and sediment from the tank before reinstalling the heater.

The condensate from steam oil heaters must be safely discharged to waste. The waste should be checked periodically for any traces of oil that would indicate leaking tubes within the heater.

The hot water oil heater contains a heat transfer solution. Oil flows through an inner tube while boiler water surrounds the outer tube. The space between the two tubes is filled with the heat transfer solution and is connected to an expansion chamber on the rear of the heater. A visual indicator on the chamber reveals the presence of any oil if an oil leak occurs.

A 50/50 solution of permanent antifreeze and water is generally used as the heat transfer solution. If there is no danger of freezing, plain water may be used as a replenishment if necessary to refill.

Evidence of oil in either the steam heater condensate or in the water heater indicator demands prompt repairs.

## 8.23 - Combustion

The frequency of burner adjustments depends upon several factors, including; type of burner, type of fuel, load conditions, ambient temperature, climatic variables, and general maintenance practices.

The air-fuel ratio should be checked monthly in order to alert the operator to losses in efficiency, which do not produce visible flame change. Any time maintenance is performed on the burner linkage, the air-fuel ratio should be checked. Readjustment of the burner may be required due to variations in fuel composition. A combustion analyzer should be used to adjust air-fuel ratio for maximum operating efficiency. If your burner requires adjustments, contact your local Cleaver-Brooks authorized representative for assistance.

DAILY	MONTHLY	SEMI-ANNUALLY	ANNUALY
<ul style="list-style-type: none"> <li>• Check water level</li> <li>• Check combustion visually</li> <li>• Blow down boiler</li> <li>• Blow down water column</li> <li>• Record feedwater pressure/temperature</li> <li>• Record flue gas temperature</li> <li>• Record oil pressure and temperature</li> <li>• Record gas pressure</li> <li>• Treat water according to the established program</li> <li>• Record atomizing air pressure</li> </ul>	<ul style="list-style-type: none"> <li>• Inspect burner</li> <li>• Inspect for flue gas leak</li> <li>• Inspect for hot spots</li> <li>• Check cams</li> <li>• Check for tight closing of fuel valve</li> <li>• Check fuel and air linkage</li> <li>• Check indicating lights and alarms</li> <li>• Check operating and limit controls</li> <li>• Check safety and interlock controls</li> <li>• Check for leaks, noise, vibration, unusual conditions, etc.</li> <li>• Check low water cutoff operation</li> </ul>	<ul style="list-style-type: none"> <li>• Clean low water cutoff</li> <li>• Clean oil pump strainer, filter</li> <li>• Clean air cleaner and air/oil separator</li> <li>• Inspect refractory</li> <li>• Remove and clean oil preheater</li> <li>• Check air pump coupling alignment</li> <li>• Inspect / repair burner housing to refractory seal</li> </ul>	<ul style="list-style-type: none"> <li>• Clean fireside surfaces</li> <li>• Clean breeching</li> <li>• Inspect waterside surfaces</li> <li>• Check operation of safety valves</li> </ul>



---

**Ordering Parts**

Furnish complete information when ordering parts by giving the item number, description, and the quantity of parts desired, together with the complete boiler nameplate data, including all electrical requirements.

Repair and replacement parts should be ordered from your local Cleaver-Brooks authorized representative.

**CBR boiler sizes**

<b>VESSEL SIZE</b>	<b>BOILER HP</b>
60"	125-200
67"	250-350
83"	400-800

**Parts List Contents**

Furnace Liner & Bricking 9-2  
Burner Drawer 9-7  
Blower Cartridge 9-10  
Front Head Electrical 9-11  
Front Head Linkage 9-13  
Low Water Cut Off (Steam) 9-15  
Pressure Controls 9-18  
Low Water Cut Off (Hot Water) 9-18  
Temperature Controls 9-19  
Gas Train 9-20  
Front Head Oil / Air Piping (Light Oil) 9-26  
Front Head Oil / Air Piping (Heavy Oil) 9-29  
Common Heavy Oil Parts 9-32  
Rear Head Sealing 9-33

## 9.1 - Furnace Liner & Bricking

### 9.1.1 - 60"

#### INSTALLATION PROCEDURE

1. METHOD FOR INSTALLING FURNACE TILES - START FROM BOTTOM OF FURNACE AND WORK AROUND BOTH SIDES TO TOP AND DETERMINE IF A CUT TILE IS NEEDED. IF A CUT TILE IS REQUIRED, CUT TO SUIT, SHIFT TILES, AND RE-INSTALL W/ CUT TILE LOCATED ON BOTTOM OF FURNACE.
2. METHOD FOR INSTALLING PRECAST DRY OVEN - GLUE FIBERGLASS ROPE TO DRY OVEN (ITEM #2) AROUND THE OUTSIDE DIA. OF PRECAST (ITEM #1) AS SHOWN BELOW. APPLY TROWLEZE TO END OF FURNACE TILES. FIT UP DRY OVEN AND TIGHTEN IN PLACE. REMOVE EXCESS CEMENT.


ITEM	REQ.	PART NO.	DESCRIPTION
1	1	459B526	OVEN, DRY - PRECAST
②	1	32A107	GASKET - DRY OVEN
3	8	841-1736	STUD
4	8	952-108	WASHER - STD. 1/2"
5	8	869-29	NUT - HEX. BRASS 1/2" - 13
⑥	1	32A106	GASKET - DRY OVEN
7	8	952-106	WASHER - STD. 3/8"
8	8	869-37	NUT - HEX. BRASS 3/8" - 16
⑨	5#	872-390	CEMENT - TROWLEZE H-124
⑩	17	94A203	TILE, FURNACE
⑪	6 FT	872-635	3/4" SQ. FIBERGLASS ROPE

NOTES: 1. NO CUT TILES TO BE INSTALLED IN UPPER 120° QUADRANT OF FURNACE.

2. PACK ALL TILES TIGHTLY W/ MALLET AND REMOVE ALL EXCESS CEMENT - 1/16" TYPICAL JOINT / 1/8" MAX. ONLY APPLIED BETWEEN TILES AND DRY OVEN. ALL TILES SHOULD FIT TIGHT TO FURNACE WALLS W/ NO EXPANSION SPACE BETWEEN.


3. STAGGER ALL CEMENTED JOINTS (SEAMS) BETWEEN ALL TILES.

4. AFTER EACH HALF COURSE OF TILES IS INSTALLED, CLEAN UP EXCESS CEMENT AND FILL IN ANY OPEN JOINT (SEAM) AREAS.

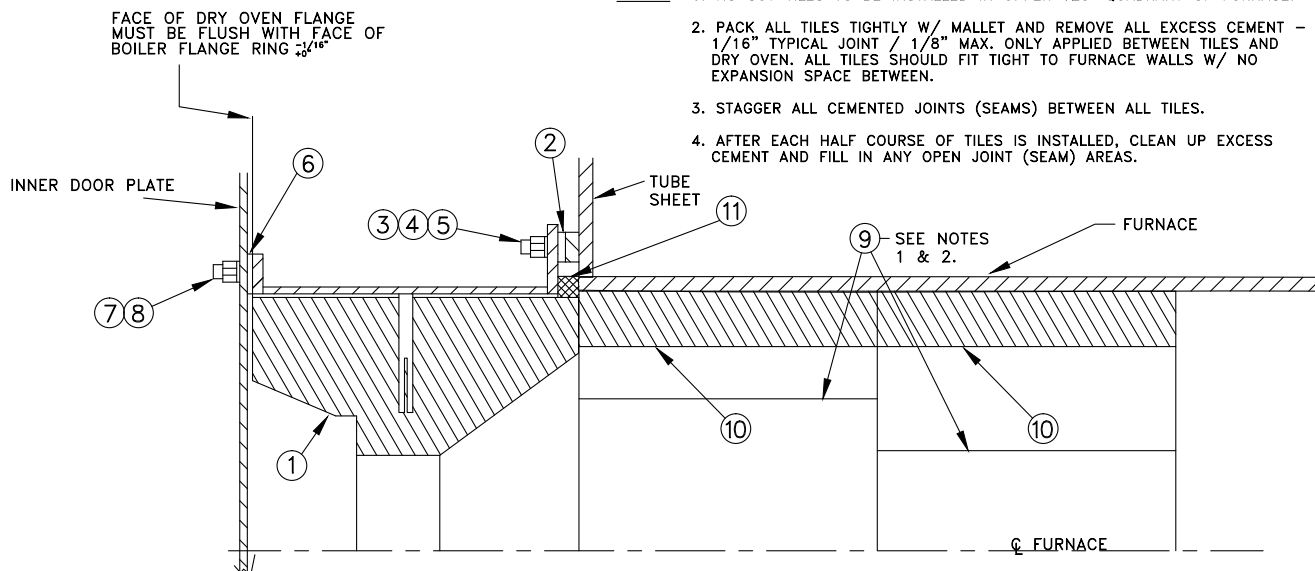


## 9.1.2 - 67"

ITEM	QTY	PART No.	DESCRIPTION	USED ON	
				H.P.	PRESSURE
①	33	094-A-00204	TILE - 34" O.D. FURNACE (CORRUGATED)	CB/LE/4WI/CBR 300 CB/LE/CBR 350 CB/LE/CBR 350 CB/LE/CBR 250-350	125# 125# 150# 300#
	36		TILE - 34" O.D. FURNACE (PLAIN)	CB/LE/4WI/CBR 250-300 CB/LE/CBR 350 CB/LE/4WI/CBR 250 CB/LE/4WI/CBR 250-300 CB/LE/4WI/CBR 250-300 CB/LE/CBR 350 CB/LE/CBR 250-300 CB/LE/CBR 350	15/30# 15/30# 125# 150# 200# 200# 250# 250#
②	25	094-B-00343	REFRACTORY - ARCH BRICK	CBR 250-350	15#-30#
	25	094-B-00449	REFRACTORY - ARCH BRICK	CB/LE & CBR 250-350	125#-300#
③	10 LBS.	872-00390	CEMENT - JOINT MORTAR	CBR 250-350	ALL
④	1368 in <sup>2</sup>	872-00518	BULK INSUL. 1/4" X 7-1/8" X 96" LG. (2 PCS)	CBR 250-350	ALL
5	12	841-01736	STUD, 1/2"-13 UNC X 2" LG.	CBR 250-350	ALL
⑥	15 LBS.	872-00162	REFRACTORY - VEE BLOCK MIX	CB/LE/CBR 300-350	125#
				CB/LE/CBR 350	150#
⑦	2304 in <sup>2</sup>	872-00518	BULK INSUL. 1/4" X 12" X 96" LG. (2 PCS)	CB/LE/CBR 300-350	125#
				CB/LE/CBR 350	150#
⑧	4608 in <sup>2</sup>	872-00518	BULK INSUL. 1/4" X 24" X 96" LG. (2 PCS)	CB/LE/CBR 300-350	125#
				CB/LE/CBR 350	150#

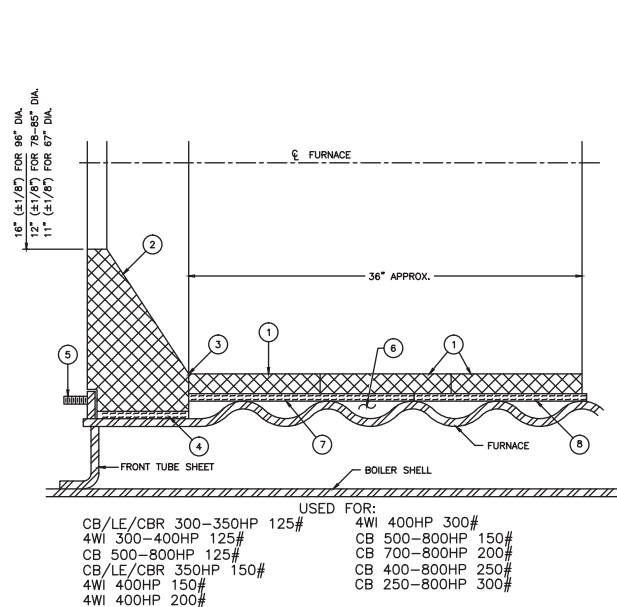


STANDARD CORRUGATED FURNACE

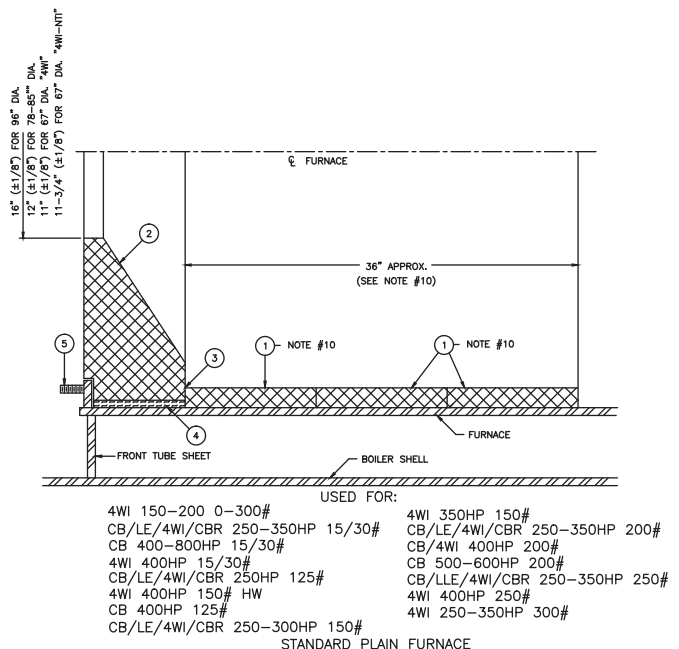

STANDARD PLAIN FURNACE


## 67" Furnace Liner & Bricking, continued

### INSTALLATION PROCEDURE

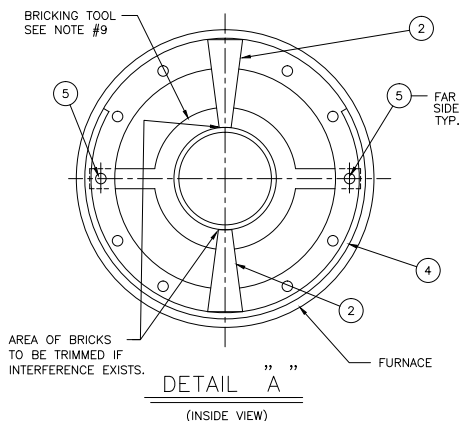


NOTE: THE FOLLOWING PROCEDURE IS TYPICAL FOR ALL STD. 67"-85" 4WI, 78"-96"CB/CBW, & 78"LE BOILERS W/THE EXCEPTION OF ITEM #1 WHICH DOES NOT APPLY TO 67"4WI, AND ITEMS #6,7, & 8 WHICH ARE NOT USED FOR ANY PLAIN FURNACE BOILERS. DISREGARD ANY REFERENCE TO THESE ITEMS WHEN WORKING W/PLAIN FURNACE BOILERS.

1. INSTALL STUDS, BRICKING TOOL, CERAFELT, BOTTOM AND TOP ARCH BRICKS AS SHOWN ON DETAIL "A" TO CHECK FIT UP. IF INTERFERENCE IS PRESENT @ ARCH BRICK I.D., MEASURE THIS DISTANCE AND TRIM I.D. OF ALL BRICKS TYPICAL. NOTE: ARCH BRICKS MUST BE TRIMMED ON EXCESSIVE PRESSURES TO MAINTAIN BRICK I.D. (11" FOR 67"DIA. 12" FOR 78"DIA. AND 16" FOR 96"DIA.).
2. INSTALL BOTTOM HALF OF ARCH BRICKS AS SHOWN ON DETAIL "B".
3. MIX VEE BLOCK TO A MORTAR-LIKE CONSISTENCY (PER MANUFACTURERS INSTRUCTIONS) AND PACK FRONT (3) VALLEYS OF FURNACE CORRUGATIONS W/ MIXTURE FLUSH W/ FURNACE I.D. UP TO 3 AND 9 O'CLOCK CENTERLINE OF FURNACE. INSTALL BOTH PIECES OF ITEM #7 CERAFELT (TO INSULATE TILE FROM CORRUGATION) AND BEGIN BOTTOM HALF OF FIRST ROW OF TILES AS SHOWN ON DETAIL "C" (SEE NOTE #7 AND 8).
4. TO BEGIN TOP HALF OF ARCH BRICKS AND TILES, MEASURE OFF UPPER HALF OF FURNACE ARCH BRICKS AND TILES W/ TEMPLATES, MARK W/ CHALK, AND DETERMINE IF A CUT BRICK OR CUT TILE IS NEEDED (SEE DETAIL "B"). IF CUT BRICK IS REQUIRED, LOCATE BELOW 2 AND 10 O'CLOCK POSITIONS (SEE NOTE #4). IF BRICK IS CUT, ANGLE OF CUT SURFACE SHOULD BE THE SAME AS ORIGINAL BRICK. IF CUT BRICK OR TILE MEASURES LESS THAN 1/2 FULL WIDTH, CUT TWO (2) PIECES (SEE NOTE #1).
5. INSTALL BRICKING TOOL AS SHOWN ON DETAIL "A" AND CONTINUE INSTALLING UPPER HALF BY ALTERNATING ONE (1) ARCH BRICK AND ONE (1) CORRESPONDING TILE BEHIND BRICK TYPICAL (SEE NOTES #5, 6, AND 9).
6. FOR THE LAST TWO (2) ROWS OF TILES, PACK ALL REMAINING VALLEYS OF FURNACE CORRUGATIONS (MEASURE 36" FROM INSIDE SURFACE OF ARCH BRICKS) W/ VEE BLOCK MIXTURE FLUSH W/ FURNACE I.D. UP TO 3 AND 9 O'CLOCK CENTERLINE OF FURNACE.
7. INSTALL BOTH PIECES OF ITEM #8 CERAFELT AND CONTINUE LAYING FURNACE TILES TO COMPLETE THE LAST TWO (2) ROWS (SEE NOTE #7).
8. AFTER JOINT CEMENT HARDENS (2 HOURS APPROX.), REMOVE BRICKING TOOL, WOODEN TILE SUPPORTS, AND DISCARD CERAFELT SHIMS.

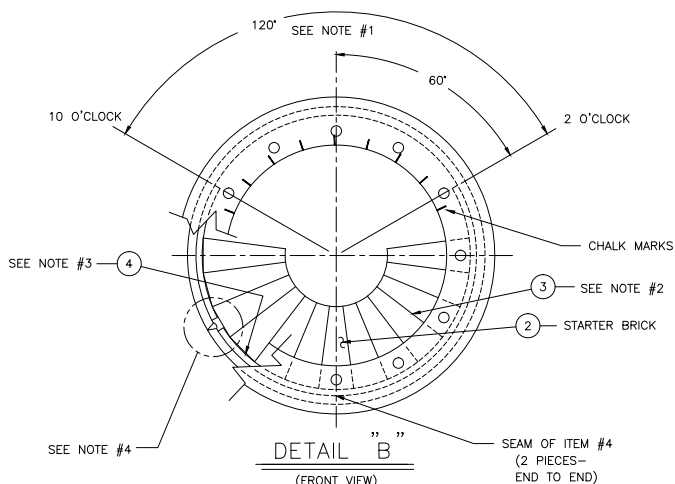


#### NOTES:

1. NO CERAFELT, CUT BRICKS, OR CUT TILES TO BE INSTALLED IN UPPER 120° QUADRANT OF FURNACE, AS SHOWN ON DETAILS "B" AND "C".
2. PACK ALL BRICKS AND TILES TIGHTLY W/ MALLET AND REMOVE EXCESS CEMENT— 1/16" TYPICAL JOINT/ 1/8" MAX.
3. NO CEMENT APPLIED BETWEEN CERAFELT AND BRICKS, TILES, OR FURNACE. ONLY APPLIED BETWEEN BRICKS AND TILES.
4. DO NOT COVER FURNACE WELD SEAM W/ CERAFELT. CUT AND SPACE TO SUIT AS SHOWN ON DETAILS "B" AND "C".
5. SUPPORT UPPER TILES W/ WOODEN BOARDS TO SUIT @ ASSEMBLY. TWO (2) BOARDS PER TILE AS SHOWN ON DETAIL "C"—  
FOR 96" DIA. USE 3/4" X 1-1/2" X 38" LG. APPROXIMATE.  
FOR 78" & 85" DIA. USE 3/4" X 1-1/2" X 28" LG. APPROXIMATE.  
FOR 67" 4WI DIA. USE 3/4" X 1-1/2" X 25" LG. APPROXIMATE.
6. TO INSURE TIGHT FIT AND MAXIMUM I.D. OF ARCH BRICKS, CUT A 3" SQ. PIECE OF SCRAP CERAFELT AND USE AS A SHIM BETWEEN BRICKING TOOL O.D. AND I.D. OF UPPER HALF OF BRICKS TYPICAL (IF NECESSARY).
7. STAGGER CEMENTED JOINTS (SEAMS) BETWEEN ALL ARCH BRICKS AND TILES.
8. AFTER EACH HALF COURSE OF BRICKS OR TILES IS INSTALLED, CLEAN UP EXCESSIVE CEMENT AND FILL OPEN JOINT AREAS WHERE NECESSARY.
9. FOR 78" DIA. BOILER USE BRICKING TOOL #98-D-280 AND FASTEN W/ TWO (2) 1/2"-13 NUTS.  
FOR 96" DIA. BOILER USE BRICKING TOOL #98-D-279 AND FASTEN W/ TWO (2) 5/8"-11 NUTS.  
FOR 67" DIA. 4WI BOILER USE BRICKING TOOL #98-A-336 AND FASTEN W/ TWO (2) 1/2"-13 NUTS.  
FOR 67" DIA. 4WI-NTI BOILER USE BRICKING TOOL #98-A-337 AND FASTEN W/ TWO (2) 1/2"-13 NUTS.  
FOR 85" DIA. 4WI BOILER USE BRICKING TOOL #98-A-333 AND FASTEN W/ TWO (2) 1/2"-13 NUTS.
10. ITEM #1 AND ASSOCIATED DIMENSION DO NOT APPLY TO 67"DIA. 4WI BOILERS. NO LINER TILES ARE REQUIRED.

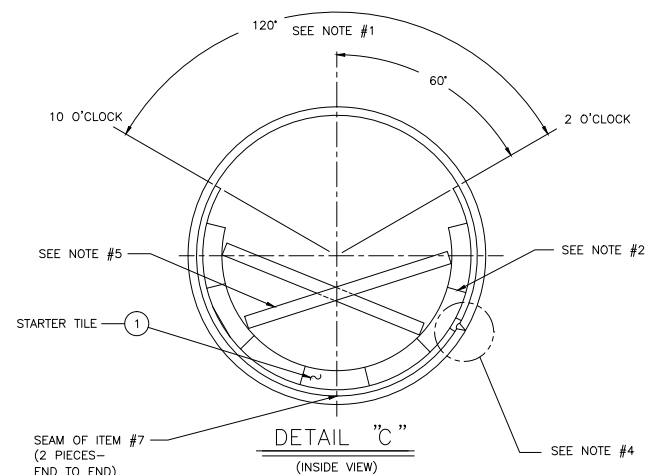


## 9.1.3 - 83"

ITEM	QTY	PART No.	DESCRIPTION	USED ON	
				H.P.	PRESSURE
①	17	094-A-00428	TILE - 47" O.D. FURNACE (CORRUGATED)	LE 500-800/ CBR 400-800	125#
				LE/ CBR 600-800	150#
				LE/ CBR 700-800	200#
				LE/ CBR 400-800	250-300#
①	18	094-A-00428	TILE - 47" O.D. FURNACE (PLAIN)	LE/ CBR 400-800	15/30#
				LE/ CBR 400-500	150#
				LE/ CBR 400-600	200#
②	35	094-B-00429	REFRACTORY - ARCH BRICK	LE/ CBR 400-800	15#-30#
		094-B-00451	REFRACTORY - ARCH BRICK	LE/ CBR 400-800	125#-300#
③	25 LBS.	872-00390	CEMENT - JOINT MORTAR	400-800	ALL
④	648 in <sup>2</sup>	872-00518	BULK INSUL. 1/4" X 6-3/4" X 48" LG. (2 PCS.)	400-800	
5	12	841-01884	STUD, 5/8"-11 UNC X 2-1/4" LG.	400-800	ALL
⑥	30 LBS.	872-00162	REFRACTORY - VEE BLOCK MIX	LE/ CBR 500-800	125#
				LE/ CBR 600-800	150#
				LE/ CBR 700-800	200#
				LE/ CBR 400-800	250-300#
⑦	768 in <sup>2</sup>	872-00518	BULK INSUL. 1/4" X 8" X 48" LG. (2 PCS.)	LE/ CBR 500-800	125#
				LE/ CBR 600-800	150#
				LE/ CBR 700-800	200#
				LE/ CBR 400-800	250-300#
⑧	1152 in <sup>2</sup>	872-00518	BULK INSUL. 1/4" X 12" X 48" LG. (2 PCS.)	LE/ CBR 500-800	125#
				LE/ CBR 600-800	150#
				LE/ CBR 700-800	200#
				LE/ CBR 400-800	250-300#
⑨	17	094-A-00430	TILE - 47" O.D. FURNACE (CORRUGATED)	LE/ CBR 400-800	125#
				LE/ CBR 600-800	150#
				LE/ CBR 700-800	200#
				LE/ CBR 400-800	250-300#
⑨	18	094-A-00430	TILE - 47" O.D. FURNACE (PLAIN)	LE/ CBR 400-800	15/30#
				LE/ CBR 400-500	150#
				LE/ CBR 400-600	200#
				LE/ CBR 400-600	200#

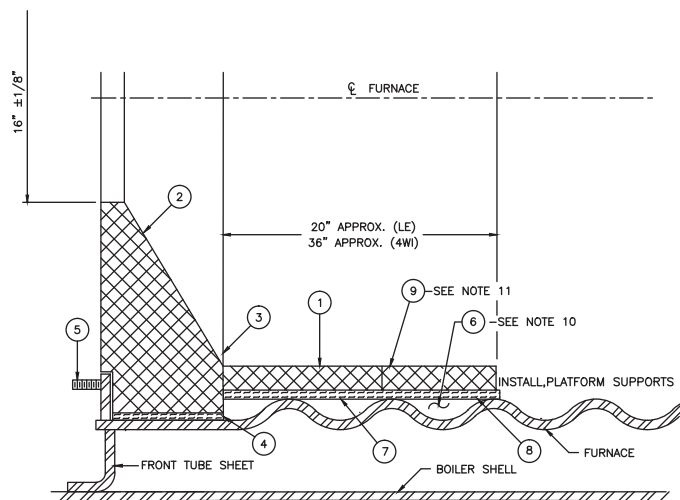

STANDARD CORRUGATED FURNACE

USED FOR:  
 LE/ CBR 500-800HP 125# DP. 4WI 600-800HP 200# DP.  
 4WI 500-800HP 125# DP. LE/ CBR 400-800HP 250# DP.  
 LE/ CBR 600-800HP 150#ST DP. 4WI 500-800HP 250# DP.  
 4WI 500-800HP 150# DP. LE/ CBR 400-800HP 300# DP.  
 LE/ CBR 700-800HP 200# DP. 4WI 500-800HP 300# DP.

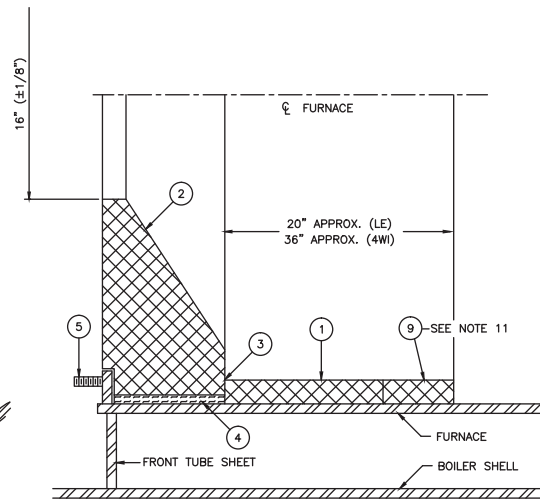


STANDARD PLAIN FURNACE

USED FOR:  
 4WI 500-800HP 15/30#  
 LE/ CBR 400-800HP 15/30# DP.  
 LE/ CBR 400HP 125# DP.  
 LE/ CBR 400-500HP 150#DP  
 LE/ CBR 400-600HP 200# DP.  
 4WI 500HP 200# DP.  
 4WI 500, 700-800HP 150# HW.


## 83" Furnace Liner & Bricking continued

### INSTALLATION PROCEDURE

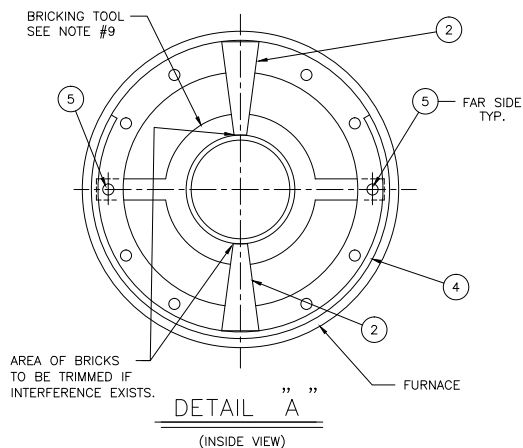


NOTE: THE FOLLOWING PROCEDURE IS TYPICAL FOR ALL STD. LE 96" & 96"-106" 4WI DIA. BOILERS W/ THE EXCEPTION OF ITEMS #6,7 AND 8. NOT USED FOR PLAIN FURNACE BOILERS. DISREGARD ANY REFERENCE TO THESE ITEMS WHEN WORKING W/ PLAIN FURNACE BOILERS.

1. INSTALL STUDS, BRICKING TOOL, CERAFELT, BOTTOM AND TOP ARCH BRICKS AS SHOWN ON DETAIL "A" TO CHECK FIT UP. IF INTERFERENCE IS PRESENT @ ARCH BRICK I.D., MEASURE THIS DISTANCE AND TRIM I.D. OF ALL BRICKS TYPICAL. NOTE: ARCH BRICKS MUST BE TRIMMED TO 16" ON EXCESSIVE PRESSURES TO MAINTAIN BRICK I.D.
2. INSTALL BOTTOM HALF OF ARCH BRICKS AS SHOWN ON DETAIL "B".
3. MIX VEE BLOCK TO A MORTAR-LIKE CONSISTENCY (PER MANUFACTURERS INSTRUCTIONS) AND PACK FRONT (2) VALLEYS OF FURNACE CORRUGATIONS W/ MIXTURE FLUSH W/ FURNACE I.D. UP TO 3 AND 9 O'CLOCK CENTERLINE OF FURNACE. INSTALL BOTH PIECES OF ITEM #7 CERAFELT (TO INSULATE TILE FROM CORRUGATION) AND BEGIN BOTTOM HALF OF FIRST ROW OF TILES AS SHOWN ON DETAIL "C" (SEE NOTE #7 AND 8).
4. TO BEGIN TOP HALF OF ARCH BRICKS AND TILES, MEASURE OFF UPPER HALF OF FURNACE ARCH BRICKS AND TILES W/ TEMPLATES, MARK W/ CHALK, AND DETERMINE IF A CUT BRICK OR CUT TILE IS NEEDED (SEE DETAIL "B"). IF CUT BRICK IS REQUIRED, LOCATE BELOW 2 AND 10 O'CLOCK POSITIONS (SEE NOTE #4). IF BRICK IS CUT, ANGLE OF CUT SURFACE SHOULD BE THE SAME AS ORIGINAL BRICK. IF CUT BRICK OR TILE MEASURES LESS THAN 1/2 FULL WIDTH, CUT TWO (2) PIECES (SEE NOTE #1).
5. INSTALL BRICKING TOOL AS SHOWN ON DETAIL "A" AND CONTINUE INSTALLING UPPER HALF BY ALTERNATING ONE (1) ARCH BRICK AND ONE (1) CORRESPONDING TILE BEHIND BRICK TYPICAL (SEE NOTES #5, 6, AND 9).
6. FOR THE LAST TWO (2) ROWS OF TILES, PACK ALL REMAINING VALLEYS OF FURNACE CORRUGATIONS (MEASURE 20" FOR LE AND 36" FOR 4WI FROM INSIDE SURFACE OF ARCH BRICKS) W/ VEE BLOCK MIXTURE FLUSH W/ FURNACE I.D. UP TO 3 AND 9 O'CLOCK CENTERLINE OF FURNACE.
7. INSTALL BOTH PIECES OF ITEM #8 CERAFELT AND CONTINUE LAYING FURNACE TILES.
8. AFTER JOINT CEMENT HARDENS (2 HOURS APPROX.), REMOVE BRICKING TOOL, WOODEN TILE SUPPORTS, AND DISCARD CERAFELT SHIMS.

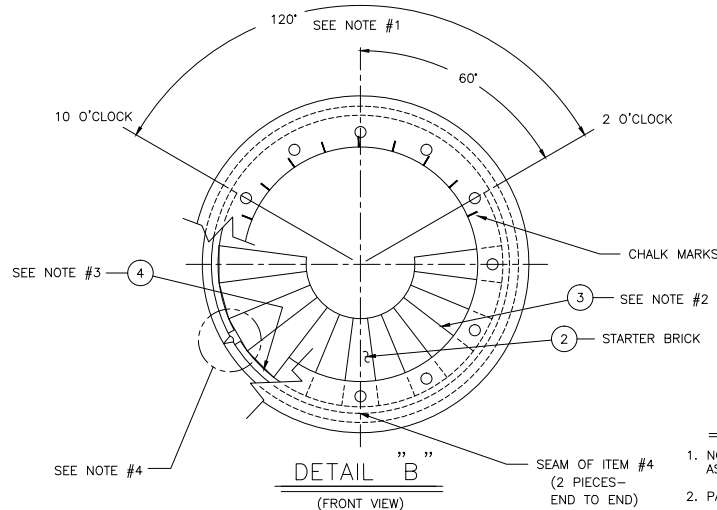

#### NOTES:

1. NO CERAFELT, CUT BRICKS, OR CUT TILES TO BE INSTALLED IN UPPER 120° QUADRANT OF FURNACE, AS SHOWN ON DETAILS "B" AND "C".
2. PACK ALL BRICKS AND TILES TIGHTLY W/ MALLET AND REMOVE EXCESS CEMENT- 1/16" TYPICAL JOINT/ 1/
3. NO CEMENT APPLIED BETWEEN CERAFELT AND BRICKS, TILES, OR FURNACE. ONLY APPLIED BETWEEN BRICKS AND TILES.
4. DO NOT COVER FURNACE WELD SEAM W/ CERAFELT. CUT AND SPACE TO SUIT AS SHOWN ON DETAILS "B" .
5. SUPPORT UPPER TILES W/ WOODEN BOARDS TO SUIT @ ASSEMBLY. TWO (2) BOARDS PER TILE AS SHOWN USE 3/4" X 1-1/2" X 38" LG. APPROXIMATE.
6. TO INSURE TIGHT FIT AND MAXIMUM I.D. OF ARCH BRICKS, CUT A 3" SQ. PIECE OF SCRAP CERAFELT AND 1 SHIM BETWEEN BRICKING TOOL O.D. AND I.D. OF UPPER HALF OF BRICKS TYPICAL (IF NECESSARY).
7. STAGGER CEMENTED JOINTS (SEAMS) BETWEEN ALL ARCH BRICKS AND TILES.
8. AFTER EACH HALF COURSE OF BRICKS OR TILES IS INSTALLED, CLEAN UP EXCESSIVE CEMENT AND FILL OPEN JOINT AREAS WHERE NECESSARY.
9. FOR 96" USE BRICKING TOOL #98-D-279 AND FASTEN W/ TWO (2) 5/8"-11 NUTS. FOR 106" USE BRICKING TOOL #98-B-334 AND FASTEN W/ TWO (2) 5/8"-11 NUTS.
10. FILL ONLY THE FULL CORRUGATIONS UNDER THE TILES WITH VEE BLOCK MIX- DO NOT FILL THE HALF CORRUGATION IMMEDIATELY NEXT TO ARCH BRICK.
11. ITEM #9 DOES NOT APPLY TO MODEL "4WI". RATHER, 3 ROWS OF ITEM #1 ARE USED.

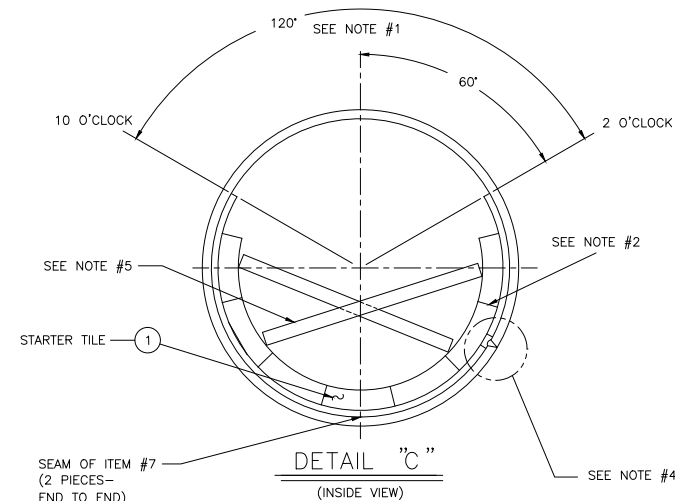


## 9.2 - Burner Drawer

### 9.2.1 - 60"

ITEM	QTY	PART NO.	DESCRIPTION	ITEM	QTY	PART NO.	DESCRIPTION
1	1	SEE TABLE	DIFFUSER, BURNER ASS'Y	19	4	860-39	SETSCREW, SOC. HD. 1/4"-20 X 3/8" LG
2	1	108B47	DAMPER	20	1	158A42	PLUG, TUBING, BURNER DRAWER
3	2	851-77	MICA, SHEET; PORT HOLE. 36 GA. X 1-1/2" DIA.	21	1	73A26	SEALER, RING BURNER
4	1	65A11	RETAINER SIGHT HOLE	22	1	868-210	CAPSCREW, SOCKET HD. 1/4"-20 X 1/2" LG
5	3	860-176	MACHINE SCREW, RD. HD. 10-24 X 1/4" LG.	23	4	860-7	MACH SCREW RD HD. 1/4"-20 X 1/2" LG
6	1	59-5768	PLATE, BACK, BEARING ASSY (SEE 59-A-918)	24	1	952-92	WASHER, LOCK, 1/4"
7	1	90A1512	TUBE, BURNER DRAWER	25	-	NOT USED	NOT USED
8	1	134B47	SPIDER	26	-	NOT USED	NOT USED
9	1	90A1709	OUTER PILOT TUBE	27	7	860-39	SETSCREW SOC. HD. 1/4"-20 X 3/8" LG.
10	1	845-194	ELBOW, MALE, 5/8" ODC X 1/2" NPT	28	3	860-158	SETSCREW SOC. HD. 1/4"-20 X 5/16" LG.
11	1	825-30	COCK, GAS	29	1	860-531	MACHINE SCREW RD. HD 5/16"-18 X 1/2" LG
12	2	857-153	NIPPLE, 1/2" DIA. X 1-1/2" LG.	30	1	90A1708	TUBE AND ADAPTER ASSY
13	1	435B36	ELECTRODE, IGNITION ASSY	31	1	34A7	GLAND, PACKING, PILOT, GAS BURNER
14	1	853-1	O-RING	32	1	904-36	GROMMET, RUBBER
15	1	2A31	ARM, DAMPER	33	1	48A98	VENTURI, GAS PILOT
16	1	858-310	PLUG, PIPE, 3/4" NPT	34	2	860-88	MACHINE SCREW, RD. HD. 1/4"-20 X 3/8" LG.
17	-	NOT USED	NOT USED	35	1	134A53	HOLDER-ELECTRODE
18	1	22A122	DIFFUSER, AIR STABILIZER	36	1	860-244	SET SCREW-SOCKET HD. 6-32 X 1/8" LG



"CBR" 125-150 30 & 60 PPM 429-D-1386	"CBR" 200 30 & 60 PPM 429-1363
ITEM 1 P/N 275B63	ITEM 1 P/N 275B82

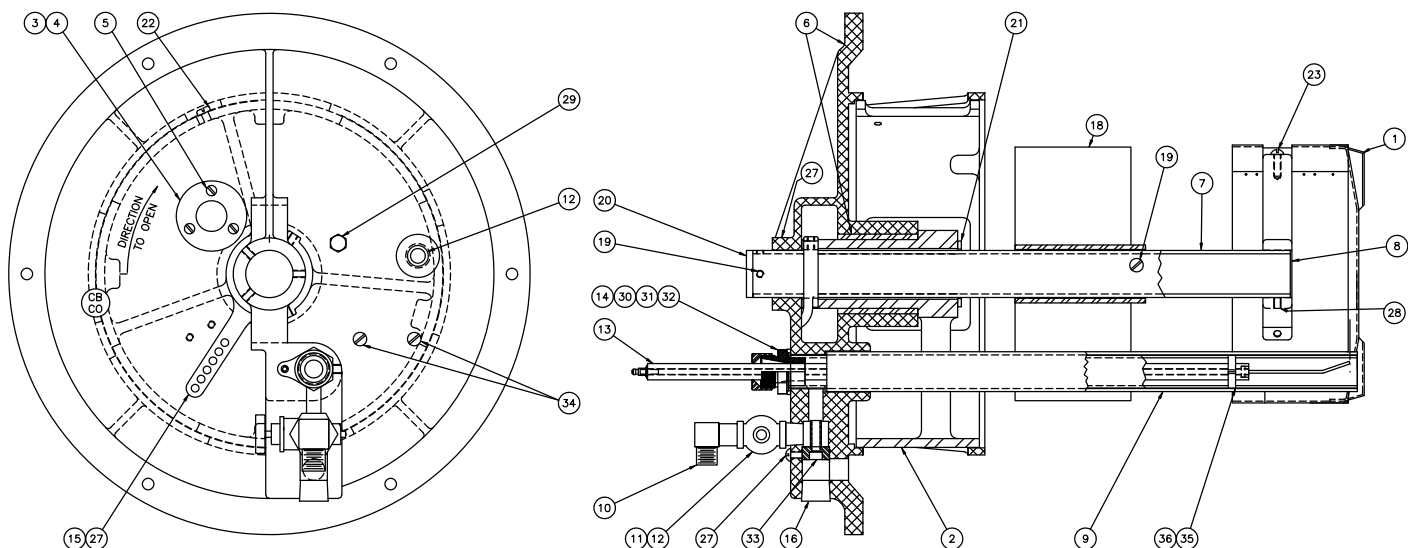

## 9.2.2 - 67"

BILL OF MATERIAL FOR 350HP 67" CBR BOILERS				
ITEM	QTY	PART No.	DESCRIPTION	FUEL
1	1	57-1939	BULK PIPE - 4" x 18-1/8" T.B.E.	GAS/COMB
2	-	-	-	-
3	2	59-10003	SEAL PLATE	GAS/COMB
4	-	-	-	-
5	1	146-334	SPUD KIT AND PATTERN	GAS/COMB
6	1	656D7965	INSTALLATION-BRNR HSG TO FURN. FLG.	-
7	20	952-286	WASHER - 1/2"	-
8	20	869-29	NUT HEX. - 1/2-13	-
9			N/A	-
10	8	296-A-19	CLAMPS	-
11	8	952-108	WASHER - 1/2"	-
12	8	869-29	NUT HEX. - 1/2-13 BRASS	-
13	2	32-A-928	GASKET - BURNER HOUSING SUPPORT	-
14	1	85-C-444	SUPPORT - BURNER HOUSING	-
15	8	869-29	NUT HEX. - 1/2-13 BRASS	-
16			N/A	-
17	1	15-B-39	FLANGE RING	-
18	8	869-15	NUT HEX. - 1/2-13	-
19	1	32-A-2625	GASKET - BURNER SUPPORT	-
20	1	853-1017	GASKET-1/8" x 1" x 42-13/16" SILICON	-
21	1	SEE TABLE	BURNER DRAWER	
22	1	40-00719	HOUSING - BURNER	GAS/COMB
		40-00907		OIL ONLY
23	1	032A02622	GASKET,FRONT HD.	
24	34	841-507	FASTENER, AUEVCO #1202	
25	5 OZ.	872-00558	THERMO SILICATE CEMENT	



67" CBR BOILER TABLE ITEM (21)				
FUEL H.P.	100	101-200	400-600	700
250-350	429-1567	429-1537	429-1554	429-1566

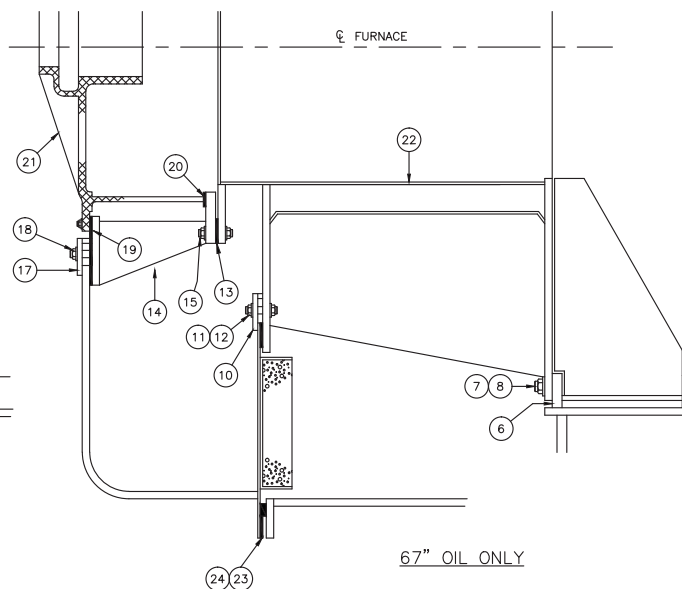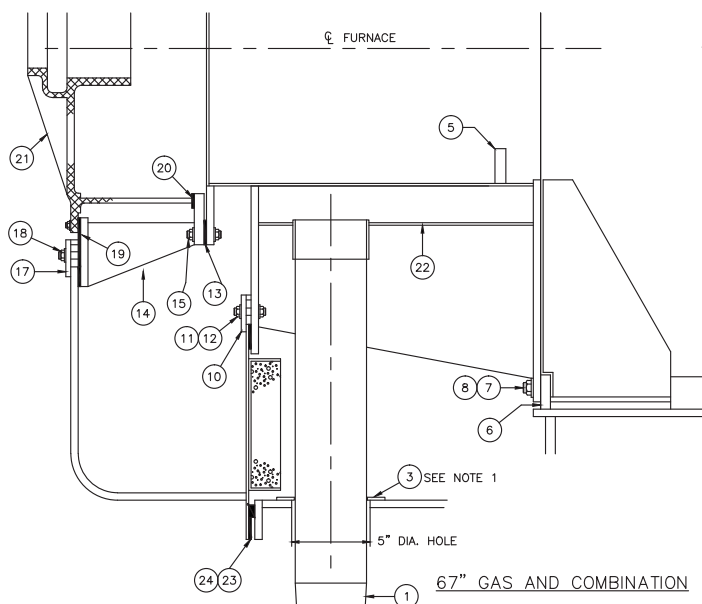

## 9.2.3 - 83"


BILL OF MATERIAL FOR 83" CBR BOILERS				
ITEM	QTY	PART No.	DESCRIPTION	FUEL
1	1	057-01950	BULK PIPE - 4" x 21-1/2" T.B.E.	GAS/COMB
2	-	-	-	-
3	2	59-10003	SEAL PLATE	GAS/COMB
4	-	-	-	-
5	1	146-00334	SPUD KIT AND PATTERN	GAS/COMB
6	1	656D07965	INSTALLATION-BRNR HSG TO FURN. FLG.	-
7	12	952-00287	WASHER - 5/8"	-
8	12	869-00002	NUT HEX. - 5/8"-11	-
9	-	-	N/A	-
10	8	296A00019	CLAMPS	-
11	16	952-00108	WASHER - 1/2"	-
12	8	869-00029	NUT HEX. - 1/2"-13 BRASS	-
13	-	-	N/A	-
14	1	040C00723	SUPPORT - BURNER HOUSING, 83" BOILERS	-
15	8	869-00029	NUT HEX. - 1/2"-13 BRASS	-
16	-	-	N/A	-
17	1	015B00041	FLANGE RING	-
18	8	868-00177	CAPSCREW, HEX. HD. 1/2"-13 x 2-1/4" LG.	-
19	1	032A02531	GASKET - BURNER SUPPORT	-
20	1	853-1017	GASKET TAPE, 3/16" x 1" x 55-1/2" SILICON	-
21	1	SEE TABLE	BURNER DRAWER	-
22	1	040C00593	HOUSING - BURNER GAS/COMB	0-250 PSI
		040-00674		300 PSI
		040-00601		0-250 PSI
		040-00675	HOUSING - BURNER OIL ONLY	350 PSI
23	1	032C02667	GASKET, FRONT HEAD	-
24	31	841-00507	FASTENER, AUEVCO #1202	-
25	5 OZ.	872-00558	THERMO SILICATE CEMENT	-

83" CBR BOILER TABLE ITEM (21)					
FUEL H.P.	100	101-200	400	600	700
400	429-1562	429-1746	429-1744	429-1568	429-1745
500	429-1562	429-1560	429-1568	429-1568	429-1564
600-800	429-1563	429-1561	429-1569	429-1569	429-1565

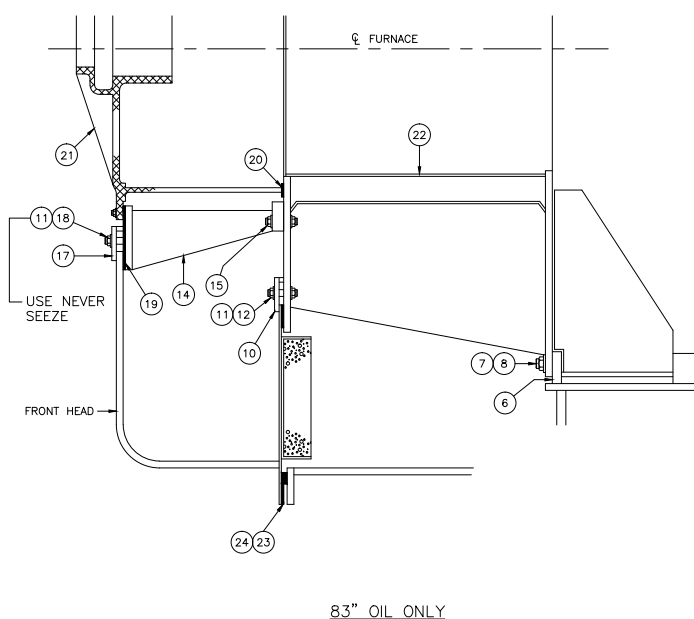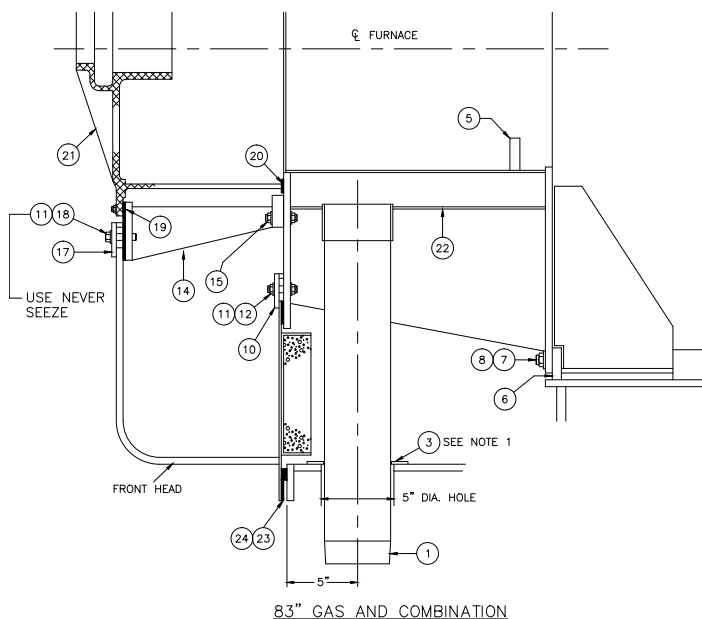

9.3 - Blower Cartridge


**NOTE:** Impeller and motor selection are based on boiler hp, ppm emissions level, boiler operating pressure, and altitude. To ensure proper component selection, contact Cleaver-Brooks Aftermarket for your specific application.

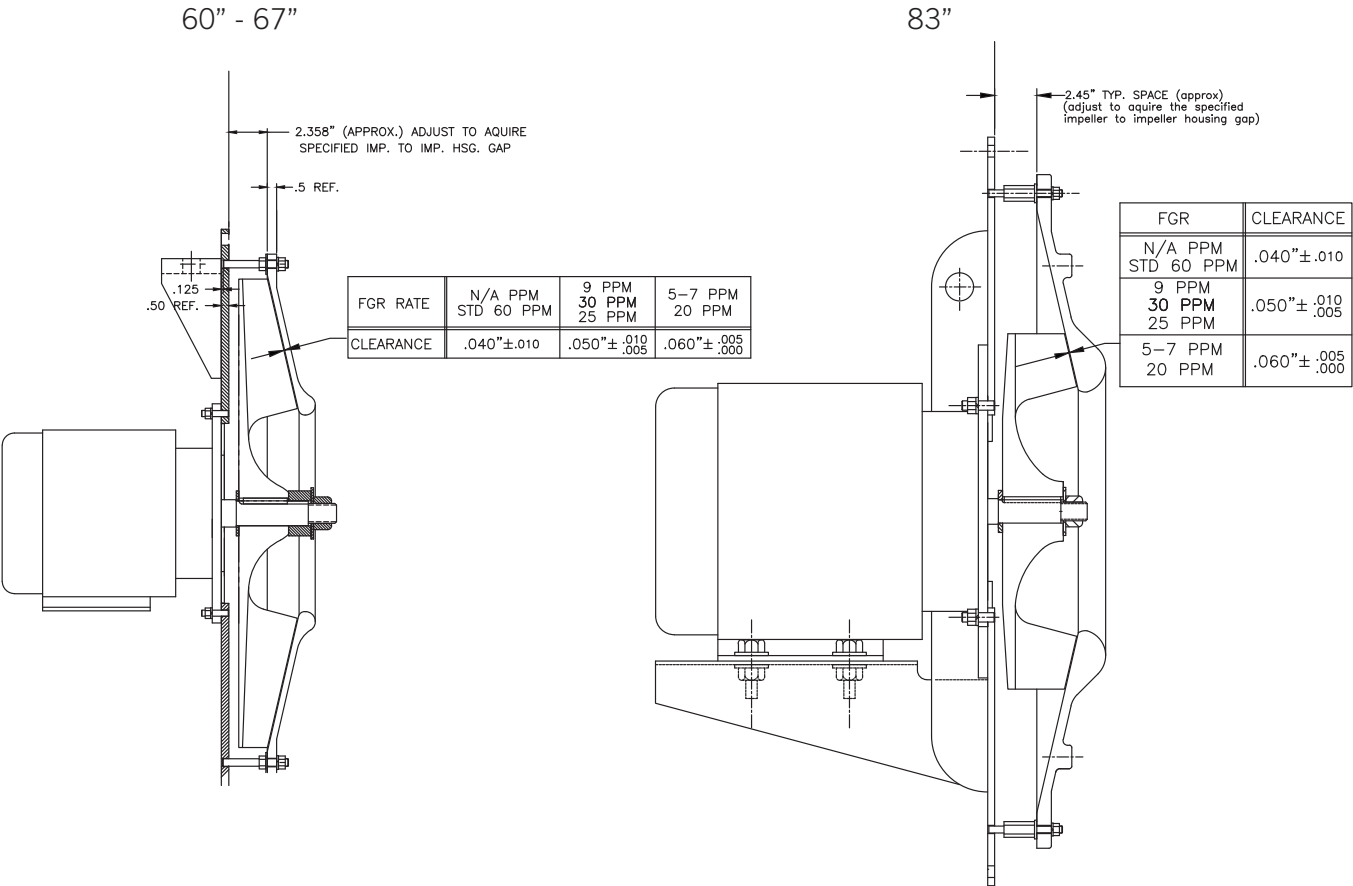

## 9.4 - Front Head Electrical

### 9.4.1 - 60" & 67"

ITEM	QTY	PART NO.	DESCRIPTION	USED ON
(1)	1	848-878	JUNCTION BOX, 12" X 10" X 5"	--
(2)	1	817-3446	CAPS	--
		--	--	--
(3)	1	832-118	IGNITION TRANSFORMER	OIL ONLY 60HZ.
	1	832-107	IGNITION TRANSFORMER	GAS & COMB 60HZ.
	1	832-286	IGNITION TRANSFORMER	ALL 50 HZ.
(4)	1	817-1743	UV SCANNER	NO BURNERS WITH 200, 400 OR 700 FUEL
		817-4984	UV SCANNER, SELF CHECK	--
		817-4133	IR SCANNER	ALL OTHERS
(5)	2	848-61	HANDY BOX, 2-1/8" X 2-1/8" X 4"LG.	--
(6)	2	848-243	COVER, HANDYBOX, 2-1/8" X 4"LG.	--
7	8	868-137	CAPSCREW, HEX. HD., 1/4"-20 X 1"LG.	--
8	2	848-325	CONNECTOR, 1/2" STRAIGHT	--
9	3	848-16	CONNECTOR, SQUEEZE TYPE, 3/8" X 90°	--
10	3	848-100	BUSHING, ANTI-SHORT, 3/8"	--
(11)	1	292-66	IGNITION WIRE	GAS & COMB.
	1	292-67	IGNITION WIRE	OIL ONLY
(12)	1	292-96	IGNITION WIRE	OIL ONLY
13	8	952-92	LOCKWASHER, 1/4"	--
14	8	860-7	SCREW, MACHINE, 1/4"-20 X 1 1/2"LG.	--
15	3	848-36	CONNECTOR, BOX, STRAIGHT, 2 SCREW TYPE, 1/2"	--
16	1	848-31	CONNECTOR, BOX, 45° SQUEEZE TYPE, 2 PC., 1/2"	--
17	3	848-465	CONNECTOR, STRAIGHT, 3/8" FLEX	--
18	2	848-10	CONNECTOR, SQUEEZE TYPE	100-176HP
	2	848-85	CONNECTOR, SQUEEZE TYPE	177-227HP
19	2	848-101	BUSHING, ANTI-SHORT	100-176HP
	2	848-307	BUSHING, ANTI-SHORT	177-227HP
20	1	848-371	WASHER, REDUCING	100-176HP
	1	848-6	WASHER, REDUCING	177-227HP
21	1	848-151	WASHER, REDUCING	100-176HP
	1	848-6	WASHER, REDUCING	177-227HP
(22)	--	--	--	--
(23)	--	--	--	--
24	1	817-03371	HAPS	HAWK ICS VSD

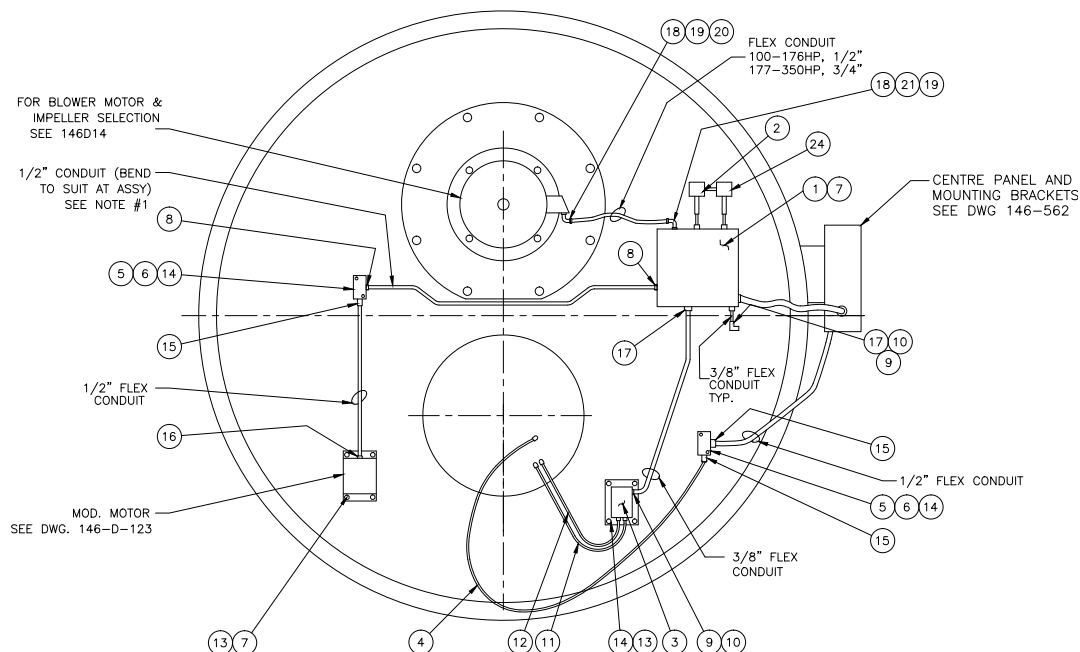


**NOTES:**

1. 1/2" CONDUIT FROM JUNCTION BOX TO MOD. MOTOR TO RUN BELOW MOTOR CASSETTE ASSEMBLY (AS SHOWN) SO AS NOT TO INTERFERE W/ FUTURE CASSETTE REMOVAL.

## 9.4.2 - 83"

ITEM	QTY	PART NO.	DESCRIPTION	USED ON
1	1	827-6	GREENFIELD 3/8" X 15"	ALL EXCEPT 700
(3)	1	817-3446	CAPS	-
4	2	848-85	CONNECTOR, SQUEEZE TYPE, 3/4" X 90'	350-400 H.P.
	2	848-86	CONNECTOR, SQUEEZE TYPE, 1" X 90'	500 H.P.
	2	848-34	CONNECTOR, SQUEEZE TYPE, 1-1/4" X 90'	600 - 700 H.P.
	2	848-495	CONNECTOR, SQUEEZE TYPE, 2" X 90'	750-800 H.P.
5	2	848-6	WASHER, REDUCING 1" X 3/4"	350-400 H.P. ONLY
	2	848-448	WASHER, REDUCING 1-1/2" X 1-1/4"	650-700 HP. ONLY
6	1	848-473	COUPLING, 1/2" EMT X 1/2" FLEX	-
7	2	848-100	BUSHING	ALL EXCEPT 700
8	1	928-14	PIPE STRAP	-
9	3	868-136	CAPSCREW, 1/4"-20 X 3/4" LG.	-
10	7	952-92	LOCKWASHER, 1/4"	-
(11)	1	292-66	IGNITION WIRE	OIL ONLY
12	3	848-325	CONNECTOR, STRAIGHT, 1/2"	-
13	1	848-494	CONNECTOR, STRAIGHT, SQUEEZE TYPE, 2"	750-800 H.P.
	1	848-33	CONNECTOR, STRT, SQUEEZE TYPE, 1-1/4"	350-700 H.P.
(14)	1	292-95	IGNITION WIRE	-
15	1	848-2	CONNECTOR-GREENFIELD 3/8" X 15"	ALL EXCEPT 700
16	1	848-878	JUNCTION BOX 12" X 10" X 5" DEEP	-
17	1	848-10	CONNECTER BOX 1/2" X 90'	-
(18)	1	817-1743	UV SCANNER ASSEMBLY	NIT BURNERS WITH 200, 400 OR 700 FUEL
	1	817-4133	IR SCANNER ASSEMBLY	ALL OTHERS
21	1	848-248	COVER, OUTLET BOX	-
22	4	869-36	NUT, HEX., 5/16"-18 UNC	-
(23)	1	827-8	BULK CONDUIT, 1/2" x 26.875"	ALL EXCEPT 700
	1	827-8	BULK CONDUIT, 1/2" x 32.8125"	700
(24)	1	848-273	OUTLET BOX, 4" SQ. X 2-1/8" DEEP	ALL EXCEPT 700
25	2	848-16	BOX CONNECTOR, SQUEEZE TYPE, 3/8"	-
(26)	1	832-118	IGNITION TRANSFORMER	OIL ONLY 60 HZ
	1	832-107	IGNITION TRANSFORMER	GAS & COMB. 60 HZ
	1	832-286	IGNITION TRANSFORMER	ALL 50 HZ
27	4	860-64	MACH. SCR. RD. HD. 1/4"-20 X 3/4" LG.	-
28	1	928-112	CLIP	-
29	1	868-148	SELF TAPPING SCREW, 10-32 x 1/2" LG.	-
30	1	817-3371	HAPS	HAWK ICS VSD
31	2	167-00014	ANGLE IRON, 1/8 X 2 X 2 X 12" LG	-

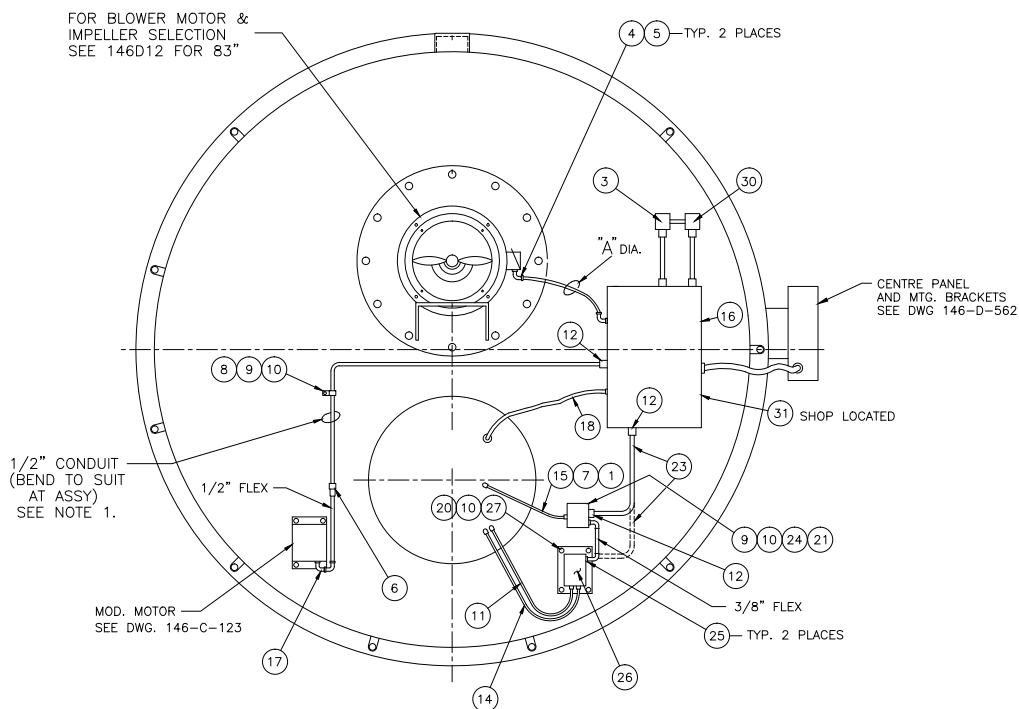



CONDUIT DIAMETER				
H.P.	350-400	500	600-700	750-800
"A"	3/4"	1"	1-1/4"	2"

NOTES: 1. 1/2" CONDUIT FROM JUNCTION BOX TO MOD. MOTOR TO RUN BELOW BLOWER MOTOR CASSETTE ASSEMBLY (AS SHOWN) SO AS NOT TO INTERFERE W/ FUTURE CASSETTE REMOVAL.


## 9.5 - Front Head Linkage

### 9.5.1 - 60"

60" DIA. BOILER				
ITEM	QUANTITY			DESCRIPTION
	GAS	OIL	CMB	
(1)	1	1	2	313-A-5 CAM ASSEMBLY
(2)	1	-	1	295-99 GAS VALVE STEM ASSY. (295-C-98)
(3)	1	1	-	85-A-1926 SUPPORT - JACKSHAFT
(4)	1	-	1	67-A-17 ROD LINKAGE, GAS VALVE
(5)	1	-	-	853-454 GASKET
(6)	1	-	-	476-A-54 AIR DAMPER LINKAGE
(7)	1	-	-	476-A-53 MOTOR TO SHAFT LINKAGE
(8)	1	-	-	883-17 BALL JOINT
(9)	2	-	-	824-21 COLLAR
(10)	1	-	-	10-A-288 BUSHING-BALL JOINT
(11)	1	-	-	074-00204 JACKSHAFT
(13)	1	-	-	10-A-91 BUSHING
(14)	1	-	-	287-A-24 GAS VALVE & ARM DAMPER
(15)	1	-	-	68-A-32 END ROD LINKAGE
16	1	-	-	853-436 GASKET
19	4	-	-	860-101 SET SCREW 1/4-20 x 1/2"
22	3	-	-	952-93 LOCKWASHER 3/8"
(24)	1	-	-	506-479 MOD. MOTOR
25	1	-	-	2-A-47 DRIVE ARM *SEE NOTE# 2*
26	4	-	-	868-137 BOLT, HEX HD 1/4-20 X 1" LG.
27	4	-	-	952-92 LOCKWASHER 1/4"
(28)	2	-	-	77-371 CAM SPACERS (FUEL 200, 400, 700)

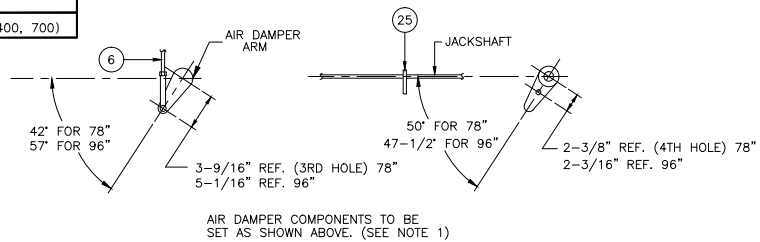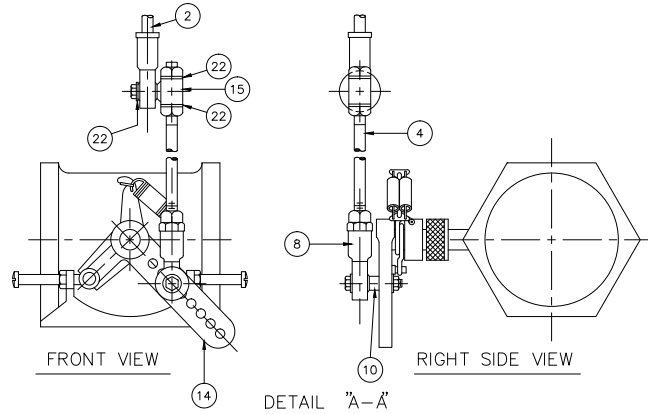

- NOTES:
- WITH DAMPER AT FULLY CLOSED POSITION, SET JACKSHAFT DAMPER CONTROL ARM AND BURNER DAMPER CONTROL ARM AT ANGLES SHOWN. WHEN CONNECTING LINKAGE ASSEMBLY TO CONTROL ARMS, ADJUST AS NECESSARY TO ACHIEVE DESIRED EXCESS AIR LEVEL AT LOW FIRE.
  - ITEM #3 & 28 USED ON GAS ONLY (FOR 78" AND 96"). FOR 48" AND 60" DIA. BOILERS, ITEM #3 IS USED FOR ALL FUELS, AND ITEM #28 IS USED ON GAS OR OIL/GAS COMB. ONLY.
  - ITEM #3 & 28 USED ON OIL ONLY (FOR 78" AND 96"). FOR 48" AND 60" DIA. BOILERS, ITEM #3 IS USED FOR ALL FUELS, AND ITEM #28 IS USED ON GAS OR OIL/GAS COMB. ONLY.
  - FOR 78" & 96" DIA. BOILERS, MOUNT MOD. MOTOR & JACKSHAFT LINKAGE ASSEMBLY AS SHOWN ON FRONT HEAD ASSEMBLY. FOR 48" AND 60" DIA. BOILERS, MOUNT ITEMS AS SHOWN ON DETAIL "B".
  - FOR 78" LE, ITEM 11 CALLED OUT ON 476-C-237 & 476-C-238.




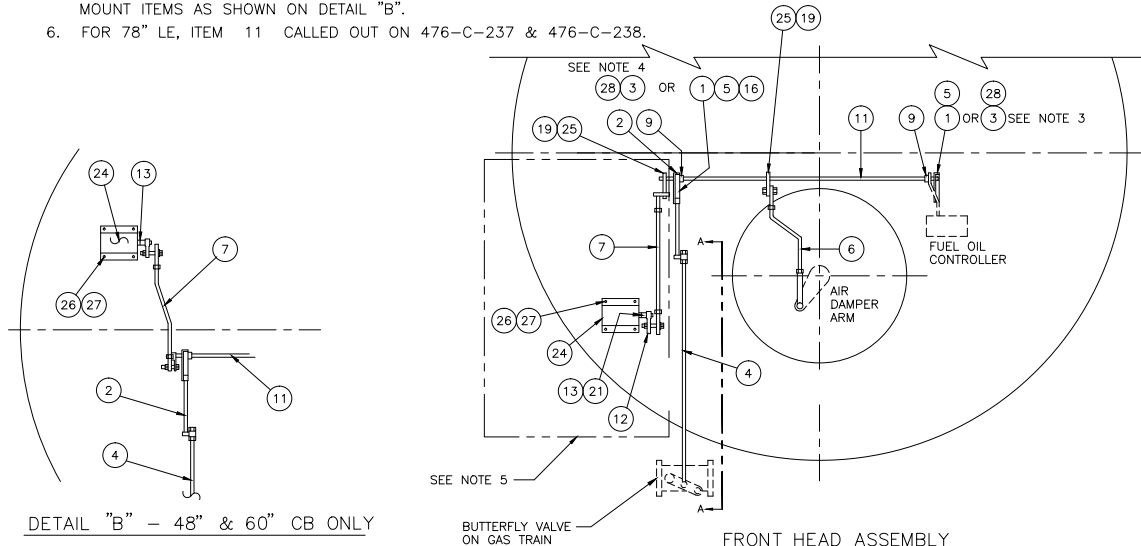


## 9.5.2 - 67" & 83"

ITEM	QUANTITY			PART NO.	DESCRIPTION	USED ON
	GAS	OIL	CMB			
1	1	1	2	313A00005	CAM ASSEMBLY	ALL
2	1	—	1	295-00099	GAS VALVE STEM ASSEMBLY	67"
	1	—	1	295C00098	GAS VALVE STEM ASSEMBLY	83"
3	1	1	—	085A01926	SUPPORT — JACKSHAFT	ALL
4	1	—	1	067-00943	ROD LINKAGE, GAS VALVE	67"
	1	—	1	067-00161	ROD LINKAGE, GAS VALVE (067B00442)	83"
5	2	—	—	853-00454	GASKET	67"
6	1	—	—	476A00054	AIR DAMPER LINKAGE	67"
	1	—	—	476A00208	AIR DAMPER LINKAGE	83"
7	1	—	—	476A00053	MOTOR TO SHAFT LINKAGE	67"
	1	—	—	476-00102	MOTOR TO SHAFT LINKAGE	83"
8	1	—	—	883-00017	BALL JOINT	ALL
9	2	—	—	824-00021	COLLAR	ALL
10	1	—	—	010-00288	BUSHING—BALL JOINT	ALL
11	1	—	—	074-00204	JACKSHAFT, 33-1/2" LG.	67"
	1	—	—	074-00218	JACKSHAFT, 49" LG.	85"
12	1	—	—	074-00496	JACKSHAFT, 39.5" LG.	83"
	1	—	—	002A00047	DRIVE ARM — MODUTROL MOTOR	83"
13	1	—	—	010A00091	BUSHING	ALL
14	1	—	—	287A00024	GAS VALVE & ARM DAMPER	ALL
15	1	—	—	068A00032	END ROD LINKAGE	ALL
16	2	—	—	077-00371	CAM SPACERS	ALL
17	4	—	—	952-00092	LOCKWASHER 1/4"	ALL
18	4	—	—	868-00137	BOLT, HEX HD 1/4-20 X 1" LG.	ALL
19	4	—	—	860-00101	SET SCREW 1/4-20 X 1/2"	ALL
20	2	—	—	002A00047	DRIVE ARM	83"
21	1	—	—	506-00479	MOD. MOTOR	67"
	1	—	—	894-03471	MOD. MOTOR	83"
22	3	—	—	952-00093	LOCKWASHER 3/8"	ALL

### NOTES:

- WITH DAMPER AT FULLY CLOSED POSITION, SET JACKSHAFT DAMPER CONTROL ARM AND BURNER DAMPER CONTROL ARM AT ANGLES SHOWN. WHEN CONNECTING LINKAGE ASSEMBLY TO CONTROL ARMS, ADJUST AS NECESSARY TO ACHIEVE DESIRED EXCESS AIR LEVEL AT LOW FIRE.
- SET AIR DAMPER FOR 60"—67" BOILERS THE SAME AS 60" LE BOILERS.
- ITEM #3 & #16 USED ON GAS ONLY.
- ITEM #3 & #16 USED ON OIL ONLY.

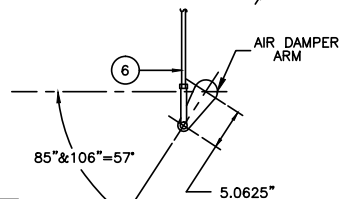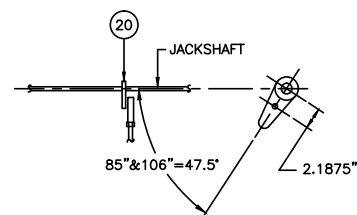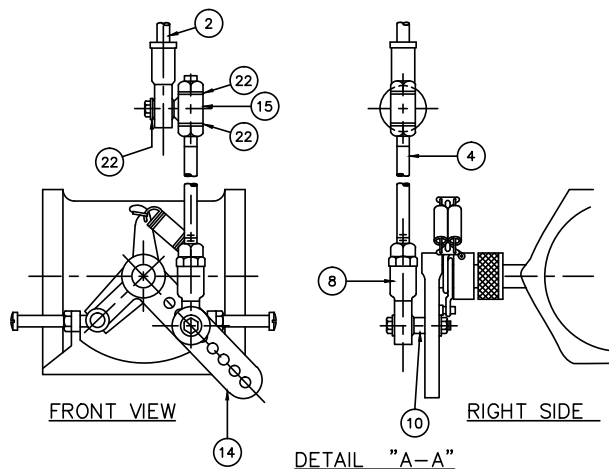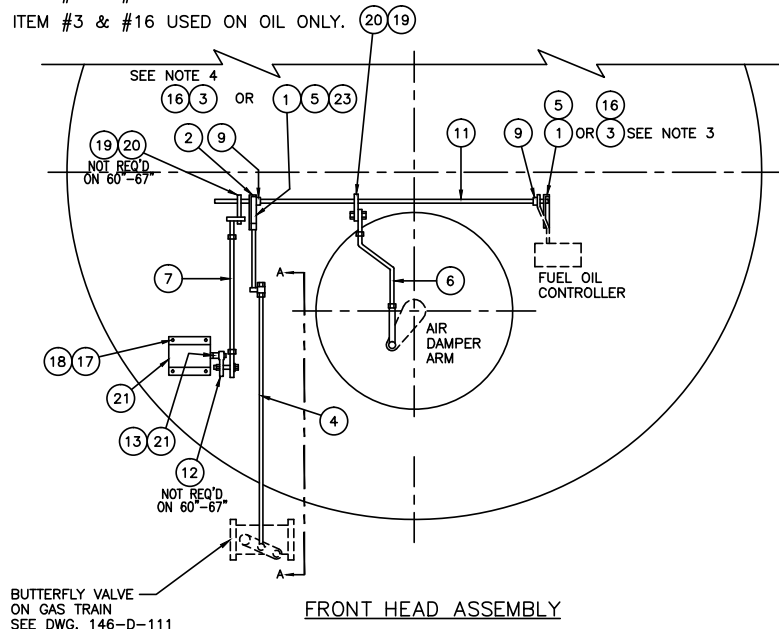

AIR DAMPER COMPONENTS TO BE SET AS SHOWN ABOVE. (SEE NOTE 1) FOR 60"—67" BOILERS, SEE NOTE 2


## 9.6 - Low Water Cut Off (Steam)

### 9.6.1 - Level Master

ITEM	15# / 150# / 200# ST	250# ST	DESCRIPTION
1	623-00230	623-00230	SENSOR ASSEMBLY
2	see table		WATER COLUMN
3	941-00055	941-02656	VALVE, BALL
4	941-01790	x	VALVE, BALL, BR
	x	941-00170	VALVE, GATE, BR


#### ITEM #2 - WATER COLUMN

VESSEL SIZE	60"	67" - 83"
without TRICOCKS	289-00991	289-00830
with TRICOCKS	289-00993	289-00831

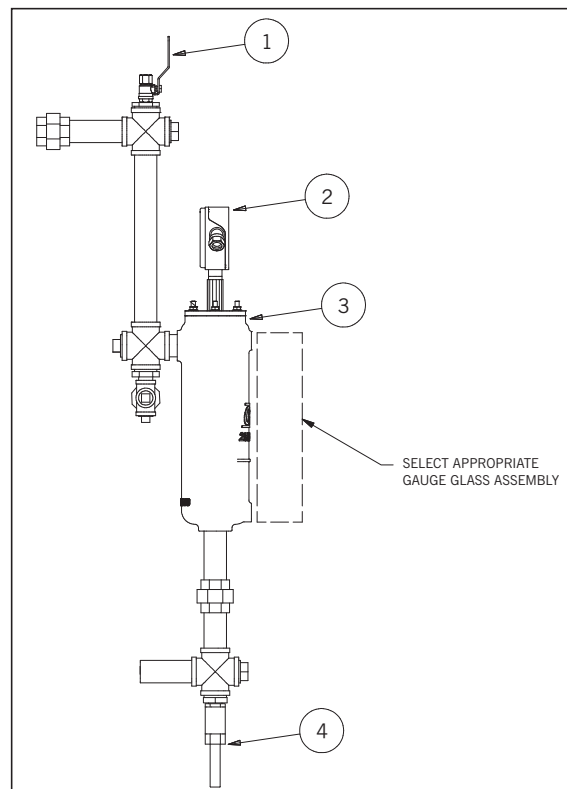

### 9.6.2 - McD-M 157S-RL

ITEM	15# / 150# ST		DESCRIPTION
	60" - 67"	83"	
1	941-00055		VALVE, BALL
2	817-02405	817-02405	CONTROL, PUMP & LWCO
3	x	941-01790	VALVE, BALL, BR
	941-00170	x	VALVE, GATE, BR

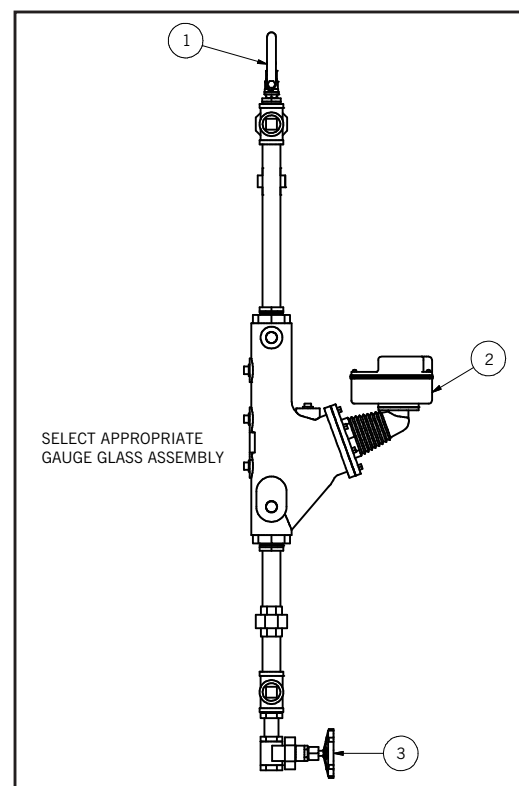


### 9.6.3 - McD-M 193/193-B; McD-M 193-7B/193-B-7B

ITEM	15# / 150# ST		DESCRIPTION
	60" - 67"	83"	
1	941-00055	941-00055	VALVE, BALL
2	see table		CONTROL, PUMP & LWCO
3	x	941-01790	VALVE, BALL, BR
	941-00170	x	VALVE, GATE, BR

#### ITEM #2 - CONTROL, PUMP & LWCO

	60"	67" - 83"
193/193-B	817-04604	817-00621
193-7B/193-B-7B	817-04420	817-01307

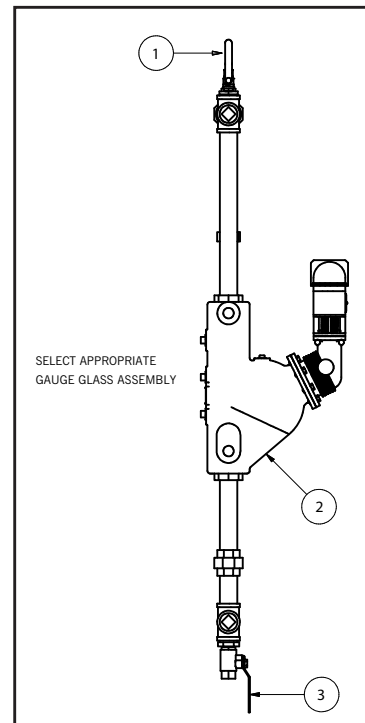


### 9.6.4 - McD-M 194-A

ITEM	200# ST	250# ST	DESCRIPTION
1	941-00055	941-02656	VALVE, BALL
2	see table		CONTROL, PUMP & LWCO
3	941-00170	941-00170	VALVE, GATE, BR

#### ITEM #2 - CONTROL, PUMP & LWCO

194-A	817-02374
193-A-7B	817-01384

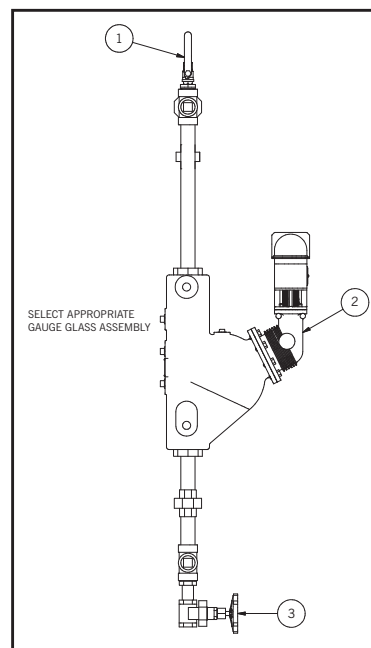


### 9.6.5 - Magnetrol W29-1B10-CLA; W25-1B10-CLA; W29-1B10-CMA; W25-1B10-CMA

ITEM	QTY	15# / 150# /200#	250#	300#	DESCRIPTION
1	2	941-00170	941-00170	941-00170	VALVE, BR
2	1	see table			CONTROL
3	1	941-00055	941-02656	x	VALVE,BALL
		x	x	941-00318	VALVE, GLOBE

#### ITEM #2 - CONTROL, PUMP & LWCO

	15# / 150# /200# / 250#	300#
W29-1B10-CLA	x	817-04233
W29-1B10-CMA	x	817-02031
W25-1B10-CLA	817-04230	x
W25-1B10-CMA	817-02055	x

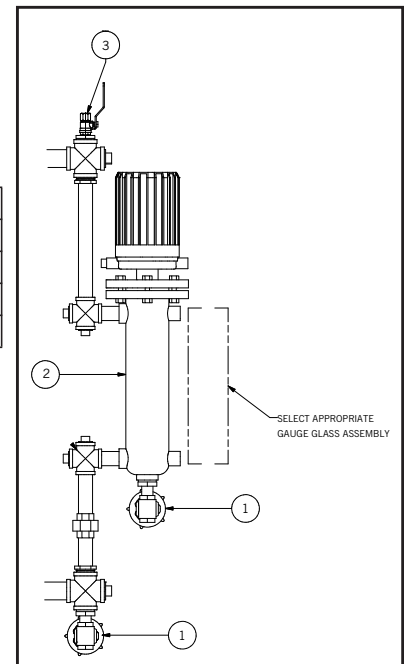


### 9.6.6 - Gauge Glass etc.

			Boiler Diameter	Design Pressure, PSI				
				15	150	200	250	300
Gauge Glass Assembly	Std tubular glass with ASME ball check valves for 12.75" between gauge connections	Hand Wheels	36"-67"	851-00546-000			851-00547-000	N/A
		Chain Operated	72"-138"	851-00550-000				N/A
		Hand Wheels	36"-67"				851-00548-000*	851-00549-000*
	Std tubular glass with ASME ball check valves for 13.5" between gauge connections	Hand Wheels	36"-67"	851-00592-000			851-00594-000	N/A
		Chain Operated	72"-138"	851-00593-000				N/A
	Reflex gauge glass assemblies	Chain Operated	All	851-00503-000			851-00504-000	851-00505-000
Vacuum Breaker	1" Water Columns			507-01964-000			289-03530-000	289-02960-000
	1-1/4" Water Columns			289-00988-000			289-02842-000	289-03529-000
Tri-Cocks	Conbraco 26-305-C1			825-00092-000				N/A
	Clark-Reliance GC310 (Chain Operated)			825-00161-000				
	Clark-Reliance GC450 (Chain Operated)							825-00244-000

\* 851-00548-000 and 851-00549-000 are for use with 11.5" tapping distance for gauge glass. The McD-M 194 is the only assembly that uses the 11.5" tapping distance.

The 13.5" gauge glass assemblies are required on some of the Magnetrol LWCO's.

## 9.7 - Pressure Controls

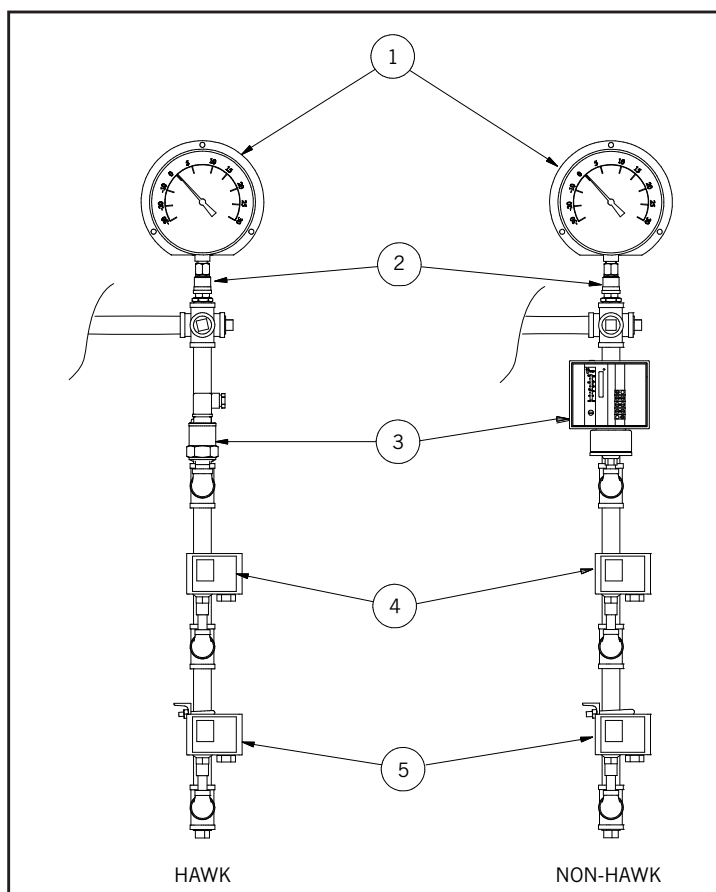

ITEM		15#	150#	200#	250#	300#	
1	60"-67"	850-00230	850-00222	850-00222	850-00320	850-00400	PRESSURE GAUGE
	83"	850-00264	850-00104	850-00104	850-00150	850-00172	
2		941-00055	941-00055	941-00055	941-02656	941-00318	VALVE
3	HAWK	817-04866	817-04867	817-04868	817-04868	817-04868	PRESSURE TRANSMITTER
	NON-HAWK	817-00251	817-00204	817-00234	817-00234	817-00234	MODULATING PRESS. CONTROL
4		817-04095	817-004093	817-04883	817-04147	817-04091	OP. LIMIT CONTROL
5		817-04094	817-04092	817-04148	817-04149	817-04073	HIGH LIMIT CONTROL

## 9.8 - Low Water Cut Off (Hot Water)

### Standard Internal Probe LWCO, 30-250 PSI


817-02305	Control
817-02306	Probe Holder
067-00871	12" Long Probe

9.9 - Temperature Controls

BILL OF MATERIAL			DESCRIPTION		USED ON	
ITEM	QTY	PART NO.	DESCRIPTION		USED ON	
1	1	SEE TABLE	TEMPERATURE CONTROL, MODULATING (MC)		-	
2	1	SEE TABLE	WELL, SEPARABLE		-	
3	1	SEE TABLE	TEMPERATURE CONTROL, HIGH LIMIT (HLC)		-	
4	1	SEE TABLE	WELL, SEPARABLE		-	
5	1	SEE TABLE	TEMPERATURE CONTROL, OPERATING LIMIT (OLC)		-	
6	1	SEE TABLE	WELL, SEPARABLE		-	
7	1	SEE TABLE	THERMOMETER		15-200HP	
8	1	SEE TABLE	THERMOMETER		250-800HP	
9	1	SEE TABLE	WELL, SEPARABLE		15-800HP	
10	1	SEE TABLE	BRACKET, LIMIT CONTROLS (DWG. 008-B-937)		15-200HP	
11	1	SEE TABLE	BRACKET, LIMIT CONTROLS (DWG. 008-B-937)		250-800HP	
12	1	SEE TABLE	BUSHING, REDUCING, 3/4" x 1/2", F.S.		-	
13	9	860-4	MACH. SCR. #10-32 x 3/4"		-	
14	9	869-9	NUT, MACH. SCR. #10-32		-	
15	4	841-571	SHFT. MTL. SCR. #10-32 x 5/8"		-	
16	1	928-39	STRAP, PIPE		-	
17	1	950-414	WIRE, THERMOCOUPLE, TYPE-J		-	
18	1	SEE TABLE	TEMPERATURE CONTROL, (LPHC)		-	
19	1	SEE TABLE	WELL, SEPARABLE		-	

- NOTES:
1. INSTALL PER ELECTRICAL SCHEMATIC.
  2. ALL UNUSED FITTINGS MUST BE CAPPED.
  3. ITEM #1 FOR 256-360° F. IS THE THERMOCOUPLE USED IN CONJUNCTION WITH THE UDC2500 CONTROLLER (817-4035), WHICH IS EITHER CALLED OUT OR SHOWN FOR CBL/CBL/4W/4W, OR SUPPLIED IN THE BURNER RANGE FOR CBL/CBL/4W/4W. SEE SPEC E20-SHOT FOR CONFIGURATION SHAPER DETAILS.

4. LENGTH OF THERMOCOUPLE WIRE USED IS BASED ON BOILER DIAMETER. ACTUAL LENGTH MAY BE AFFECTED BY PANEL LOCATIONS.
5. 48" DIA. = 16 FT. 72" DIA. = 20 FT. 96" DIA. = 24 FT. 120" DIA. = 28 FT. 144" DIA. = 32 FT. 168" DIA. = 36 FT. 192" DIA. = 40 FT. 216" DIA. = 44 FT. 240" DIA. = 48 FT. 264" DIA. = 52 FT. 288" DIA. = 56 FT. 312" DIA. = 60 FT. 336" DIA. = 64 FT. 360" DIA. = 68 FT. 384" DIA. = 72 FT. 408" DIA. = 76 FT. 432" DIA. = 80 FT. 456" DIA. = 84 FT. 480" DIA. = 88 FT. 504" DIA. = 92 FT. 528" DIA. = 96 FT. 552" DIA. = 100 FT. 576" DIA. = 104 FT. 600" DIA. = 108 FT. 624" DIA. = 112 FT. 648" DIA. = 116 FT. 672" DIA. = 120 FT. 696" DIA. = 124 FT. 720" DIA. = 128 FT. 744" DIA. = 132 FT. 768" DIA. = 136 FT. 792" DIA. = 140 FT. 816" DIA. = 144 FT. 840" DIA. = 148 FT. 864" DIA. = 152 FT. 888" DIA. = 156 FT. 912" DIA. = 160 FT. 936" DIA. = 164 FT. 960" DIA. = 168 FT. 984" DIA. = 172 FT. 1008" DIA. = 176 FT. 1032" DIA. = 180 FT. 1056" DIA. = 184 FT. 1080" DIA. = 188 FT. 1104" DIA. = 192 FT. 1128" DIA. = 196 FT. 1152" DIA. = 200 FT. 1176" DIA. = 204 FT. 1200" DIA. = 208 FT. 1224" DIA. = 212 FT. 1248" DIA. = 216 FT. 1272" DIA. = 220 FT. 1296" DIA. = 224 FT. 1320" DIA. = 228 FT. 1344" DIA. = 232 FT. 1368" DIA. = 236 FT. 1392" DIA. = 240 FT. 1416" DIA. = 244 FT. 1440" DIA. = 248 FT. 1464" DIA. = 252 FT. 1488" DIA. = 256 FT. 1512" DIA. = 260 FT. 1536" DIA. = 264 FT. 1560" DIA. = 268 FT. 1584" DIA. = 272 FT. 1608" DIA. = 276 FT. 1632" DIA. = 280 FT. 1656" DIA. = 284 FT. 1680" DIA. = 288 FT. 1704" DIA. = 292 FT. 1728" DIA. = 296 FT. 1752" DIA. = 300 FT. 1776" DIA. = 304 FT. 1800" DIA. = 308 FT. 1824" DIA. = 312 FT. 1848" DIA. = 316 FT. 1872" DIA. = 320 FT. 1896" DIA. = 324 FT. 1920" DIA. = 328 FT. 1944" DIA. = 332 FT. 1968" DIA. = 336 FT. 1992" DIA. = 340 FT. 2016" DIA. = 344 FT. 2040" DIA. = 348 FT. 2064" DIA. = 352 FT. 2088" DIA. = 356 FT. 2112" DIA. = 360 FT. 2136" DIA. = 364 FT. 2160" DIA. = 368 FT. 2184" DIA. = 372 FT. 2208" DIA. = 376 FT. 2232" DIA. = 380 FT. 2256" DIA. = 384 FT. 2280" DIA. = 388 FT. 2304" DIA. = 392 FT. 2328" DIA. = 396 FT. 2352" DIA. = 400 FT. 2376" DIA. = 404 FT. 2400" DIA. = 408 FT. 2424" DIA. = 412 FT. 2448" DIA. = 416 FT. 2472" DIA. = 420 FT. 2496" DIA. = 424 FT. 2520" DIA. = 428 FT. 2544" DIA. = 432 FT. 2568" DIA. = 436 FT. 2592" DIA. = 440 FT. 2616" DIA. = 444 FT. 2640" DIA. = 448 FT. 2664" DIA. = 452 FT. 2688" DIA. = 456 FT. 2712" DIA. = 460 FT. 2736" DIA. = 464 FT. 2760" DIA. = 468 FT. 2784" DIA. = 472 FT. 2808" DIA. = 476 FT. 2832" DIA. = 480 FT. 2856" DIA. = 484 FT. 2880" DIA. = 488 FT. 2904" DIA. = 492 FT. 2928" DIA. = 496 FT. 2952" DIA. = 500 FT. 2976" DIA. = 504 FT. 3000" DIA. = 508 FT. 3024" DIA. = 512 FT. 3048" DIA. = 516 FT. 3072" DIA. = 520 FT. 3096" DIA. = 524 FT. 3120" DIA. = 528 FT. 3144" DIA. = 532 FT. 3168" DIA. = 536 FT. 3192" DIA. = 540 FT. 3216" DIA. = 544 FT. 3240" DIA. = 548 FT. 3264" DIA. = 552 FT. 3288" DIA. = 556 FT. 3312" DIA. = 560 FT. 3336" DIA. = 564 FT. 3360" DIA. = 568 FT. 3384" DIA. = 572 FT. 3408" DIA. = 576 FT. 3432" DIA. = 580 FT. 3456" DIA. = 584 FT. 3480" DIA. = 588 FT. 3504" DIA. = 592 FT. 3528" DIA. = 596 FT. 3552" DIA. = 600 FT. 3576" DIA. = 604 FT. 3600" DIA. = 608 FT. 3624" DIA. = 612 FT. 3648" DIA. = 616 FT. 3672" DIA. = 620 FT. 3696" DIA. = 624 FT. 3720" DIA. = 628 FT. 3744" DIA. = 632 FT. 3768" DIA. = 636 FT. 3792" DIA. = 640 FT. 3816" DIA. = 644 FT. 3840" DIA. = 648 FT. 3864" DIA. = 652 FT. 3888" DIA. = 656 FT. 3912" DIA. = 660 FT. 3936" DIA. = 664 FT. 3960" DIA. = 668 FT. 3984" DIA. = 672 FT. 4008" DIA. = 676 FT. 4032" DIA. = 680 FT. 4056" DIA. = 684 FT. 4080" DIA. = 688 FT. 4104" DIA. = 692 FT. 4128" DIA. = 696 FT. 4152" DIA. = 700 FT. 4176" DIA. = 704 FT. 4200" DIA. = 708 FT. 4224" DIA. = 712 FT. 4248" DIA. = 716 FT. 4272" DIA. = 720 FT. 4296" DIA. = 724 FT. 4320" DIA. = 728 FT. 4344" DIA. = 732 FT. 4368" DIA. = 736 FT. 4392" DIA. = 740 FT. 4416" DIA. = 744 FT. 4440" DIA. = 748 FT. 4464" DIA. = 752 FT. 4488" DIA. = 756 FT. 4512" DIA. = 760 FT. 4536" DIA. = 764 FT. 4560" DIA. = 768 FT. 4584" DIA. = 772 FT. 4608" DIA. = 776 FT. 4632" DIA. = 780 FT. 4656" DIA. = 784 FT. 4680" DIA. = 788 FT. 4704" DIA. = 792 FT. 4728" DIA. = 796 FT. 4752" DIA. = 800 FT. 4776" DIA. = 804 FT. 4800" DIA. = 808 FT. 4824" DIA. = 812 FT. 4848" DIA. = 816 FT. 4872" DIA. = 820 FT. 4896" DIA. = 824 FT. 4920" DIA. = 828 FT. 4944" DIA. = 832 FT. 4968" DIA. = 836 FT. 4992" DIA. = 840 FT. 5016" DIA. = 844 FT. 5040" DIA. = 848 FT. 5064" DIA. = 852 FT. 5088" DIA. = 856 FT. 5112" DIA. = 860 FT. 5136" DIA. = 864 FT. 5160" DIA. = 868 FT. 5184" DIA. = 872 FT. 5208" DIA. = 876 FT. 5232" DIA. = 880 FT. 5256" DIA. = 884 FT. 5280" DIA. = 888 FT. 5304" DIA. = 892 FT. 5328" DIA. = 896 FT. 5352" DIA. = 900 FT. 5376" DIA. = 904 FT. 5400" DIA. = 908 FT. 5424" DIA. = 912 FT. 5448" DIA. = 916 FT. 5472" DIA. = 920 FT. 5496" DIA. = 924 FT. 5520" DIA. = 928 FT. 5544" DIA. = 932 FT. 5568" DIA. = 936 FT. 5592" DIA. = 940 FT. 5616" DIA. = 944 FT. 5640" DIA. = 948 FT. 5664" DIA. = 952 FT. 5688" DIA. = 956 FT. 5712" DIA. = 960 FT. 5736" DIA. = 964 FT. 5760" DIA. = 968 FT. 5784" DIA. = 972 FT. 5808" DIA. = 976 FT. 5832" DIA. = 980 FT. 5856" DIA. = 984 FT. 5880" DIA. = 988 FT. 5904" DIA. = 992 FT. 5928" DIA. = 996 FT. 5952" DIA. = 1000 FT. 5976" DIA. = 1004 FT. 6000" DIA. = 1008 FT. 6024" DIA. = 1012 FT. 6048" DIA. = 1016 FT. 6072" DIA. = 1020 FT. 6096" DIA. = 1024 FT. 6120" DIA. = 1028 FT. 6144" DIA. = 1032 FT. 6168" DIA. = 1036 FT. 6192" DIA. = 1040 FT. 6216" DIA. = 1044 FT. 6240" DIA. = 1048 FT. 6264" DIA. = 1052 FT. 6288" DIA. = 1056 FT. 6312" DIA. = 1060 FT. 6336" DIA. = 1064 FT. 6360" DIA. = 1068 FT. 6384" DIA. = 1072 FT. 6408" DIA. = 1076 FT. 6432" DIA. = 1080 FT. 6456" DIA. = 1084 FT. 6480" DIA. = 1088 FT. 6504" DIA. = 1092 FT. 6528" DIA. = 1096 FT. 6552" DIA. = 1100 FT. 6576" DIA. = 1104 FT. 6600" DIA. = 1108 FT. 6624" DIA. = 1112 FT. 6648" DIA. = 1116 FT. 6672" DIA. = 1120 FT. 6696" DIA. = 1124 FT. 6720" DIA. = 1128 FT. 6744" DIA. = 1132 FT. 6768" DIA. = 1136 FT. 6792" DIA. = 1140 FT. 6816" DIA. = 1144 FT. 6840" DIA. = 1148 FT. 6864" DIA. = 1152 FT. 6888" DIA. = 1156 FT. 6912" DIA. = 1160 FT. 6936" DIA. = 1164 FT. 6960" DIA. = 1168 FT. 6984" DIA. = 1172 FT. 7008" DIA. = 1176 FT. 7032" DIA. = 1180 FT. 7056" DIA. = 1184 FT. 7080" DIA. = 1188 FT. 7104" DIA. = 1192 FT. 7128" DIA. = 1196 FT. 7152" DIA. = 1200 FT. 7176" DIA. = 1204 FT. 7200" DIA. = 1208 FT. 7224" DIA. = 1212 FT. 7248" DIA. = 1216 FT. 7272" DIA. = 1220 FT. 7296" DIA. = 1224 FT. 7320" DIA. = 1228 FT. 7344" DIA. = 1232 FT. 7368" DIA. = 1236 FT. 7392" DIA. = 1240 FT. 7416" DIA. = 1244 FT. 7440" DIA. = 1248 FT. 7464" DIA. = 1252 FT. 7488" DIA. = 1256 FT. 7512" DIA. = 1260 FT. 7536" DIA. = 1264 FT. 7560" DIA. = 1268 FT. 7584" DIA. = 1272 FT. 7608" DIA. = 1276 FT. 7632" DIA. = 1280 FT. 7656" DIA. = 1284 FT. 7680" DIA. = 1288 FT. 7704" DIA. = 1292 FT. 7728" DIA. = 1296 FT. 7752" DIA. = 1300 FT. 7776" DIA. = 1304 FT. 7800" DIA. = 1308 FT. 7824" DIA. = 1312 FT. 7848" DIA. = 1316 FT. 7872" DIA. = 1320 FT. 7896" DIA. = 1324 FT. 7920" DIA. = 1328 FT. 7944" DIA. = 1332 FT. 7968" DIA. = 1336 FT. 7992" DIA. = 1340 FT. 8016" DIA. = 1344 FT. 8040" DIA. = 1348 FT. 8064" DIA. = 1352 FT. 8088" DIA. = 1356 FT. 8112" DIA. = 1360 FT. 8136" DIA. = 1364 FT. 8160" DIA. = 1368 FT. 8184" DIA. = 1372 FT. 8208" DIA. = 1376 FT. 8232" DIA. = 1380 FT. 8256" DIA. = 1384 FT. 8280" DIA. = 1388 FT. 8304" DIA. = 1392 FT. 8328" DIA. = 1396 FT. 8352" DIA. = 1400 FT. 8376" DIA. = 1404 FT. 8400" DIA. = 1408 FT. 8424" DIA. = 1412 FT. 8448" DIA. = 1416 FT. 8472" DIA. = 1420 FT. 8496" DIA. = 1424 FT. 8520" DIA. = 1428 FT. 8544" DIA. = 1432 FT. 8568" DIA. = 1436 FT. 8592" DIA. = 1440 FT. 8616" DIA. = 1444 FT. 8640" DIA. = 1448 FT. 8664" DIA. = 1452 FT. 8688" DIA. = 1456 FT. 8712" DIA. = 1460 FT. 8736" DIA. = 1464 FT. 8760" DIA. = 1468 FT. 8784" DIA. = 1472 FT. 8808" DIA. = 1476 FT. 8832" DIA. = 1480 FT. 8856" DIA. = 1484 FT. 8880" DIA. = 1488 FT. 8904" DIA. = 1492 FT. 8928" DIA. = 1496 FT. 8952" DIA. = 1500 FT. 8976" DIA. = 1504 FT. 9000" DIA. = 1508 FT. 9024" DIA. = 1512 FT. 9048" DIA. = 1516 FT. 9072" DIA. = 1520 FT. 9096" DIA. = 1524 FT. 9120" DIA. = 1528 FT. 9144" DIA. = 1532 FT. 9168" DIA. = 1536 FT. 9192" DIA. = 1540 FT. 9216" DIA. = 1544 FT. 9240" DIA. = 1548 FT. 9264" DIA. = 1552 FT. 9288" DIA. = 1556 FT. 9312" DIA. = 1560 FT. 9336" DIA. = 1564 FT. 9360" DIA. = 1568 FT. 9384" DIA. = 1572 FT. 9408" DIA. = 1576 FT. 9432" DIA. = 1580 FT. 9456" DIA. = 1584 FT. 9480" DIA. = 1588 FT. 9504" DIA. = 1592 FT. 9528" DIA. = 1596 FT. 9552" DIA. = 1600 FT. 9576" DIA. = 1604 FT. 9600" DIA. = 1608 FT. 9624" DIA. = 1612 FT. 9648" DIA. = 1616 FT. 9672" DIA. = 1620 FT. 9696" DIA. = 1624 FT. 9720" DIA. = 1628 FT. 9744" DIA. = 1632 FT. 9768" DIA. = 1636 FT. 9792" DIA. = 1640 FT. 9816" DIA. = 1644 FT. 9840" DIA. = 1648 FT. 9864" DIA. = 1652 FT. 9888" DIA. = 1656 FT. 9912" DIA. = 1660 FT. 9936" DIA. = 1664 FT. 9960" DIA. = 1668 FT. 9984" DIA. = 1672 FT. 10000" DIA. = 1676 FT.

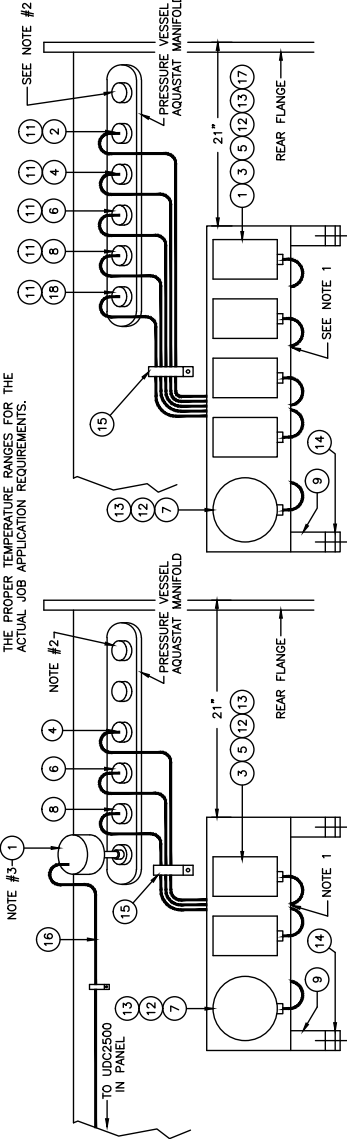


NON HAWK, 170-255° F.

NON HAWK, 256 - 360° F.


ALL HAWK

## 9.10 - Gas Train


A typical gas train is shown below; configurations may vary. Gas train component selection is based on boiler HP, emissions level, piping and connection sizes, pressure requirements, and insurance. Selected standard assemblies are shown in this section. Contact Cleaver-Brooks Aftermarket for information regarding your specific application.

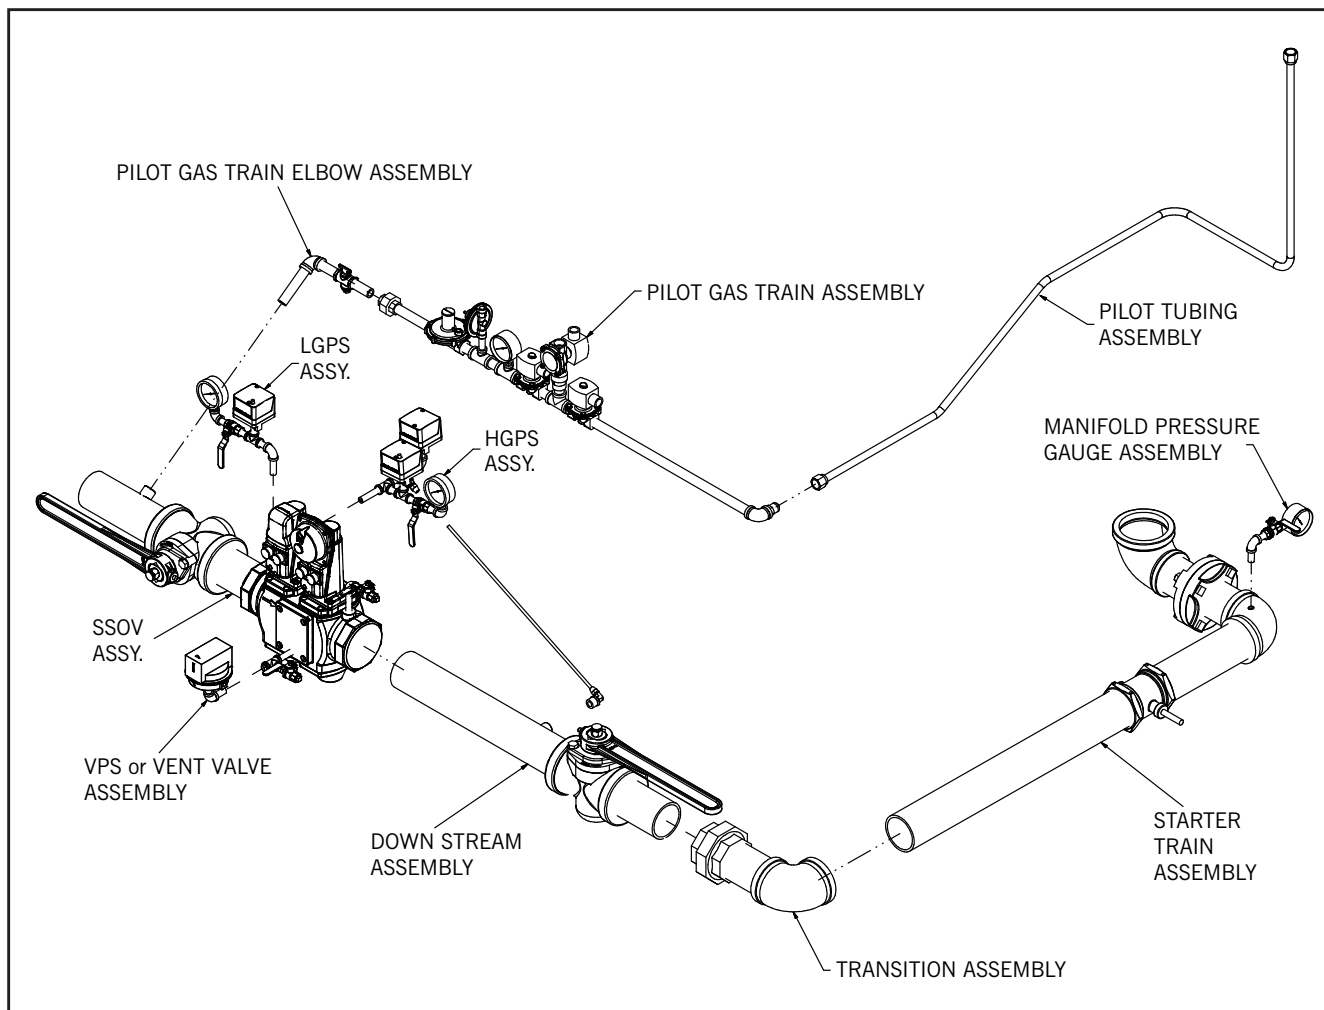


### 9.10.1 - SSOV 125-200 HP

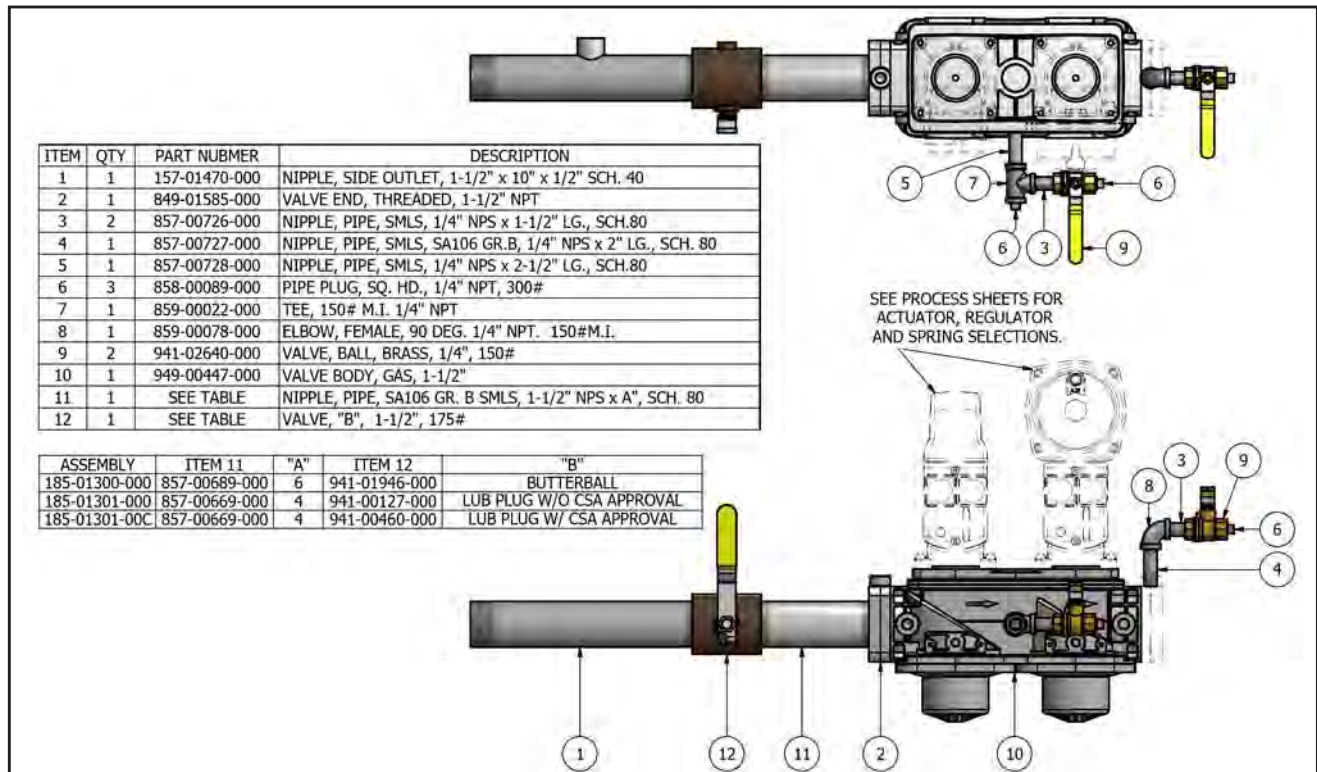


### 9.10.2 - SSOV 250-400 HP

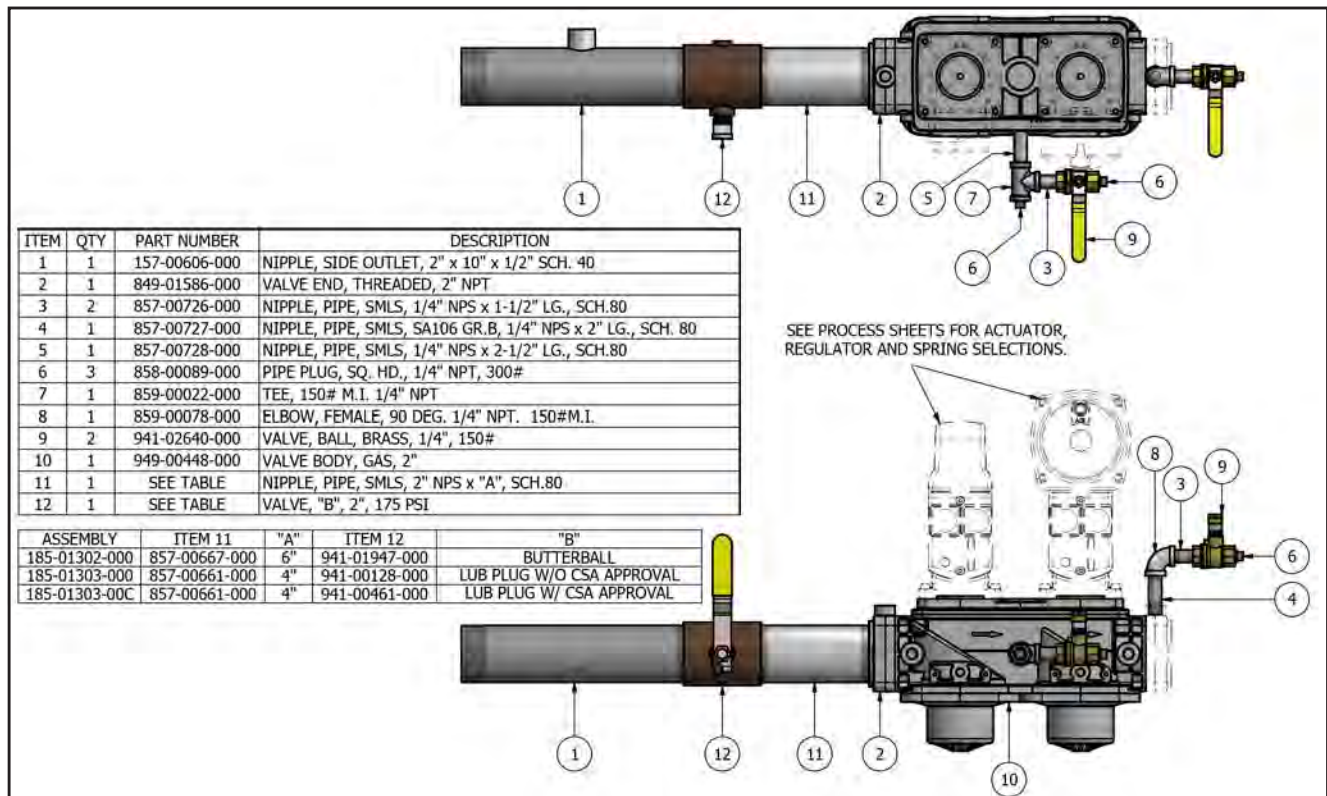

### 9.10.3 - SSOV 500-600 HP

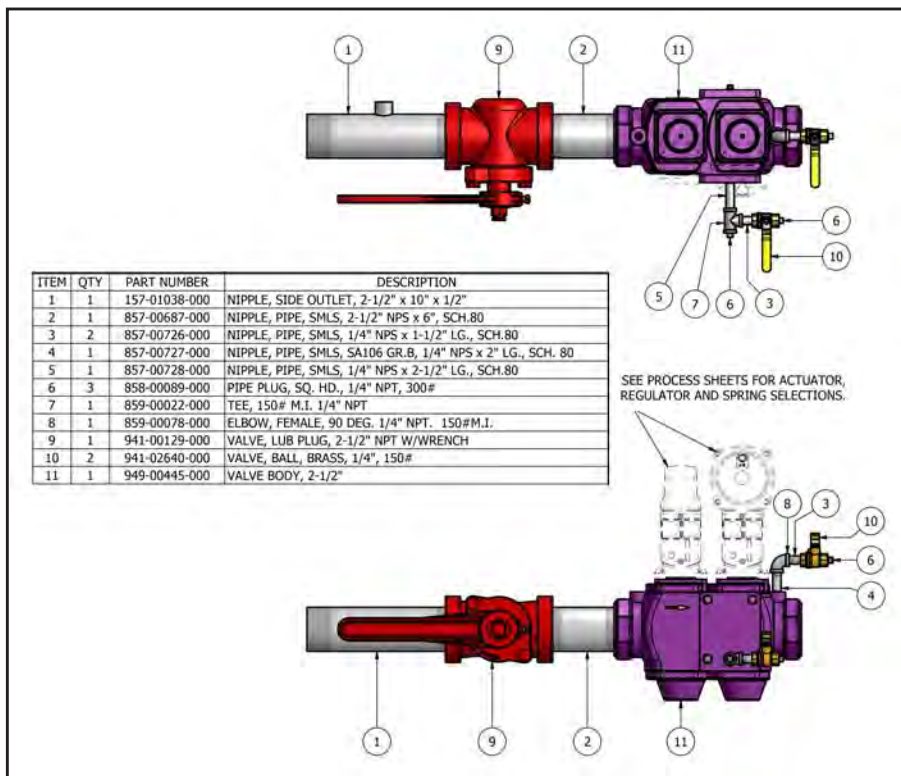

### 9.10.4 - SSOV 700-800 HP


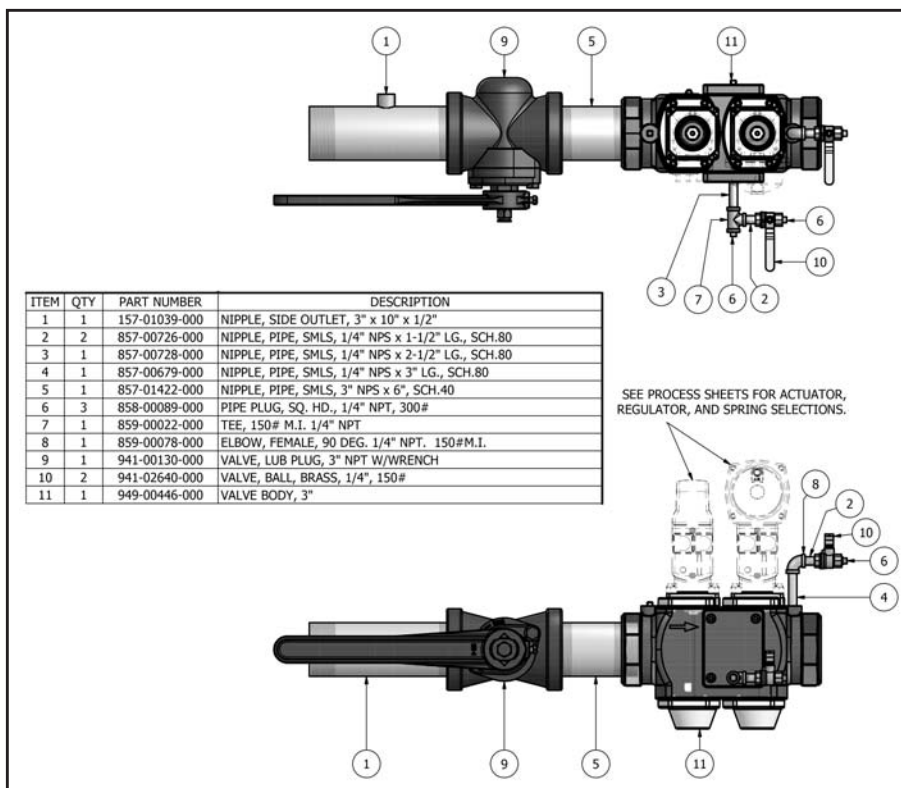


### 9.10.5 - Low Gas Pressure Switch

ITEM 1	
HONEYWELL	817-02416-000, 3-21"
HONEYWELL	817-02418-000, 12-60"
HONEYWELL	817-03591-000, 1.5-7#
ANTUNES	817-03483-000, 1-7#
ANTUNES	817-03484-000, 6-15#
ASHCROFT	836-00876-000, 3-30"
ASHCROFT	TBD, 6-60"
ASHCROFT	836-00855-000, 15-50"
ASHCROFT	836-00851-000, 3-30#

ITEM 2	
	850-00109-000, 0-35"
	850-00580-000, 0-60"
	850-01093-000, 0-100"
	850-00613-000, 0-200"
	850-02363-000, 0-15#


ITEM	185-01704-000	185-01705-000	Part No.	Description
1	1	1	SEE TABLE	LGPS
2	N/A	1	SEE TABLE	GAUGE, PRESSURE
3	N/A	1	859-00022-000	TEE, 150# M.I. 1/4" NPT
4	N/A	1	941-02640-000	VALVE, BALL, BRASS, 1/4", 150#
5	1	1	859-00078-000	ELBOW, FEMALE, 90 DEG. 1/4" NPT. 150#M.I.
6	2	4	857-00726-000	NIPPLE, PIPE, SMLS, 1/4" NPS x 1-1/2" LG., SCH.80
7	1	1	857-01637-000	NIPPLE, PIPE, SMLS, 1/8" NPS x 3" LG., SCH.80
8	1	1	847-00542-000	ELBOW, REDUCING, 1/4" NPS X 1/8" NPS

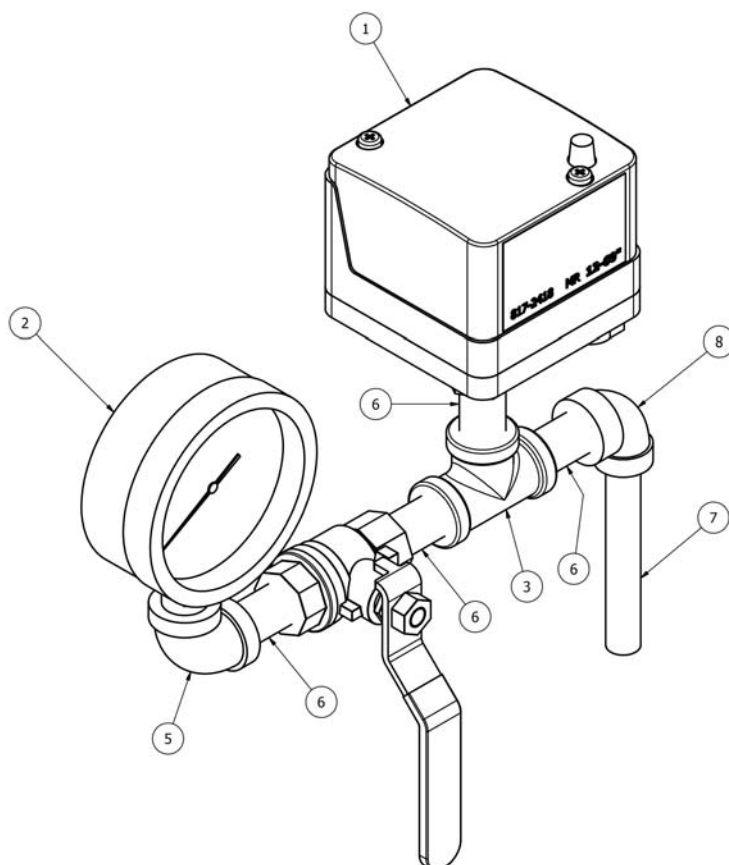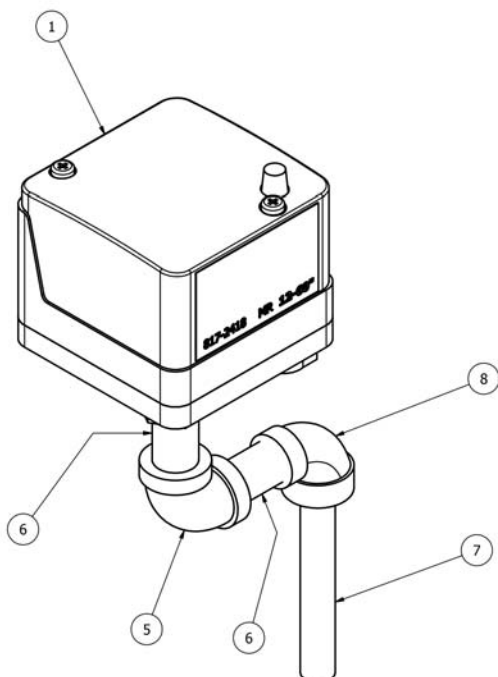

## 9.10.6 - High Gas Pressure Switch

	ITEM 1	ITEM 2	SWITCH RANGE	ITEM 1	ITEM 2	ITEM 3	ITEM 4	ITEM 5	ITEM 6	Part No.	Description
HONEYWELL	817-02420-000	817-02424-000	3-21 in. W.C.	1	1	1	1	1	1	SEE TABLE	HGPS
	817-02417-000	817-03371-000	12-60 in. W.C.	2	N/A	N/A	1	1	N/A	SEE TABLE	2ND LGPS
	817-02423-000	817-03443-000	1.5-7.0 psi	3	N/A	1	N/A	1	N/A	SEE TABLE	GAUGE, PRESSURE
ANTUNES	817-03481-000	817-04004-000	1-7 psi	4	N/A	1	N/A	1	N/A	941-02640-000	VALVE, BALL
	817-03482-000	817-04285-000	6-15 psi	5	1	2	2	3	N/A	859-00027-000	TFT
				6	1	1	2	2	N/A	859-00078-000	ELBOW, FEMALE
ASHCROFT	836-00848-000	836-00843-000	3-30 in. W.C.	7	1	1	1	1	N/A	857-00728-000	NIPPLE, PIPE
	836-00849-000	836-00844-000	6-60 in. W.C.	8	2	4	3	5	1	857-00726-000	NIPPLE, PIPE
	836-00850-000	836-00845-000	15-150 in. W.C.	9	N/A	N/A	N/A	N/A	1	847-00419-000	BUSHING, HEX HD.
	836-00846-000	836-00820-000	0-30 psi	10	N/A	N/A	1	1	N/A	857-00676-000	NIPPLE, PIPE

ITEM 3	
850-00109-000	0-35"
850-00590-000	0-60"
850-01093-000	0-100"
850-00613-000	0-200"
850-02363-000	0-15#

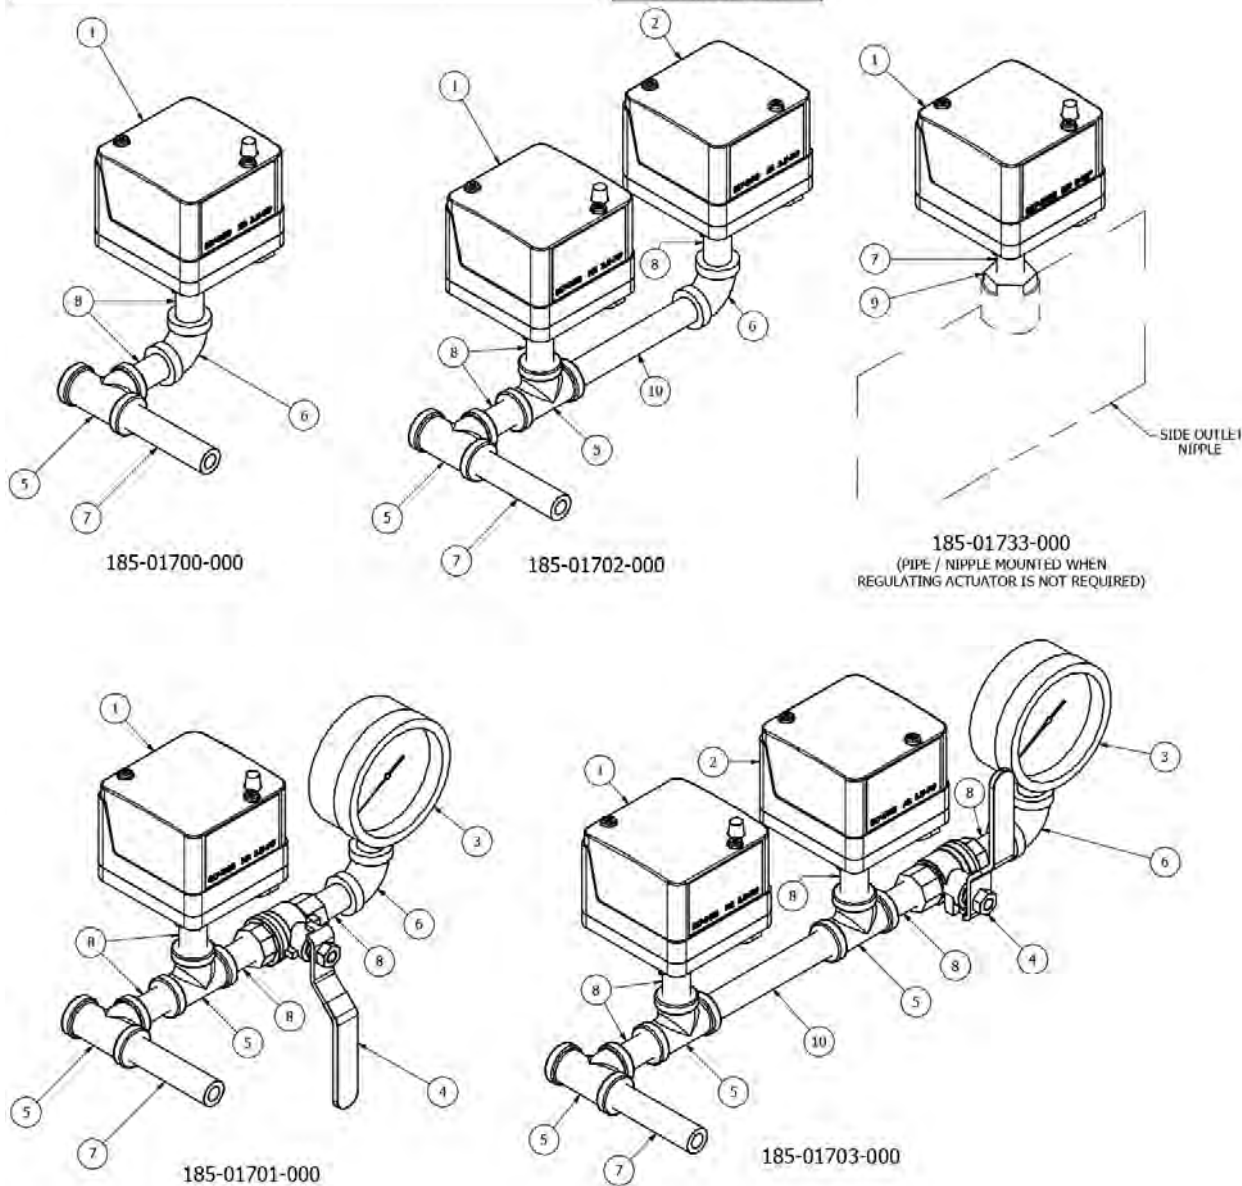


### 9.10.7 - Pilot Gas Train

ITEM	QTY	Part No.	Description
1	1	SEE TABLE	REGULATOR, GAS PRESSURE, 1/2" X 1/2" NPT
2	1	850-00109-000	GAUGE, PRESSURE, 2-1/2", 0-35" WC, 1/4" NPT BOTTOM MOUNT
3	1	948-00197-000	VALVE, SOLENOID, 1/2" NPT, NC, 0-50PSI
4	1	847-00260-000	TEE, REDUCING 1/2" X 1/2" X 1/4" NPT. 150#M.I.
5	2	857-00675-000	NIPPLE, 1/2" SCH. 80 X 3" LG. SA-106 GR. B SMLS
6	1	845-00044-000	CONNECTOR, MALE, SAE 45DEG FLRD 5/8"ODT X 1/2"NPT
7	1	859-00080-000	ELBOW, 90 DEG, 1/2" NPT 150# M.I.
8	"X"	900-00313-000	BULK PIPE, 1/2" NPS, SMLS, SCH.80
9	1	SEE TABLE	NIPPLE, PIPE, SMLS, 1/2" NPS, SCH.80



**STANDARD PILOT TRAIN  
WITHOUT PRV**

ASSEMBLY	REGULATOR RATING	REGULATOR SPRING RANGE	CSA APPROVAL	ITEM 1	ITEM 9
185-01801-00A	10 PSI	4.0"-12.0" W.C.	NO	918-01320-000	857-00651-000
185-01801-00B	10 PSI	10.0"-22.0" W.C.	NO	918-00869-000	857-00651-000
185-01801-00C	5 PSI	6.0"-10.0" W.C.	YES	918-01293-000	857-00651-000
185-01801-00H	25 PSI	6.5"-9.0" W.C.	NO	918-00696-000	857-01561-000

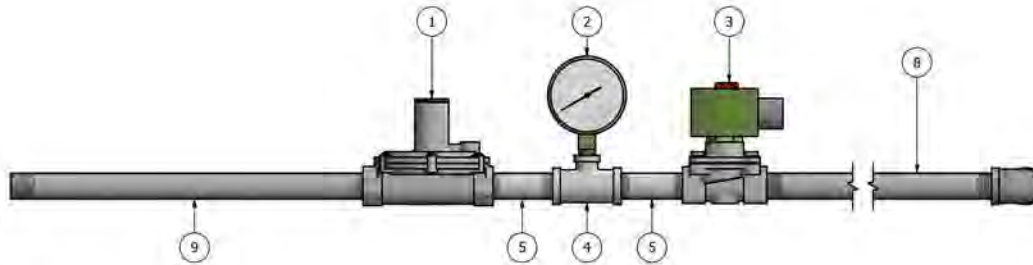


ITEM	QTY	Part No.	Description
1	1	SEE TABLE	REGULATOR, GAS PRESSURE, 1/2" X 1/2" NPT
2	1	850-00109-000	GAUGE, PRESSURE, 2-1/2", 0-35" WC, 1/4" NPT BOTTOM MOUNT
3	1	948-00197-000	VALVE, SOLENOID, 1/2" NPT, NC, 0-50PSI
4	2	847-00260-000	TEE, REDUCING 1/2" X 1/2" X 1/4" NPT. 150#M.I.
5	1	940-01582-000	VALVE, RELIEF, 1/4" NPT, 5-25" WC SPRING RANGE
6	1	857-00727-000	NIPPLE, PIPE, SMLS, SA106 GR.B, 1/4" NPS x 2" LG., SCH. 80
7	3	857-00675-000	NIPPLE, 1/2" SCH. 80 X 3" LG. SA-106 GR. B SMLS
8	1	845-00044-000	CONNECTOR, MALE, SAE 45DEG FLRD 5/8"ODT X 1/2"NPT
9	1	859-00080-000	ELBOW, 90 DEG, 1/2" NPT 150# M.I.
10	"X"	900-00313-000	BULK PIPE, 1/2" NPS, SMLS, SCH.80
11	1	SEE TABLE	NIPPLE, PIPE, SMLS, 1/2" NPS, SCH.80



**STANDARD PILOT TRAIN  
WITH PRV**

ASSEMBLY	REGULATOR RATING	REGULATOR SPRING RANGE	CSA APPROVAL	ITEM 1	ITEM 11
185-01802-00A	10 PSI	4.0"-12.0" W.C.	NO	918-01320-000	857-00650-000
185-01802-00B	10 PSI	10.0"-22.0" W.C.	NO	918-00869-000	857-00650-000
185-01802-00C	5 PSI	6.0"-10.0" W.C.	YES	918-01293-000	857-00650-000
185-01802-00H	25 PSI	6.5"-9.0" W.C.	NO	918-00696-000	857-00660-000

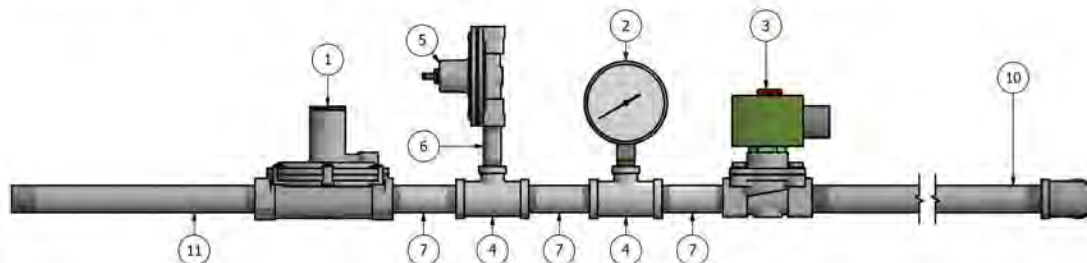

## 9.11 - Front Head Oil / Air Piping (Light Oil)

### 9.11.1 - 125-200 HP


#### NOTES:

- IF 100 FUEL, REMOVE PLUG AND PROVIDE OIL PILOT PIPING AS SHOWN.
- ALL DIMENSION ARE APPROX.
- USE p/n: 700-00851-000 ONLY ON IRI INSURANCE.
- FOR OIL SUPPLY AND RETURN TUBING, REFER TO DWG 146-B-138.
- FOR AIR COMPRESSOR PIPING TO AIR MANIFOLD BLOCK REFER TO DWG 146-B-113 FOR MODELS CBL/CBR, OR 146-D-471 FOR 4W/CBEX.
- ITEMS 12, 14, 15 ARE USED FOR OIL PILOT ONLY.
- ITEM 6 TO BE USED WHEN SOLENOID VALVES ARE REPLACED w/ MOTORIZED VALVES FOR 55 - 67" DIA BOILERS.
- ITEM 7 TO BE USED WHEN SOLENOID VALVES ARE REPLACED w/ MOTORIZED VALVES FOR 48" DIA BOILERS.
- CUT & FIT TUBING TO FIT.

ITEM 2 - PIPING, L.O. FUEL OIL CONTROLLER OUTLET		
PART NO.	DESCRIPTION	MODEL
700-00636-000	PIPING, L.O. FUEL OIL CONTROLLER OUTLET, STD/FM	125 - 150 HP
700-00637-000	PIPING, L.O. FUEL OIL CONTROLLER OUTLET, STD/FM	175 - 225 HP
700-00855-000	PIPING, L.O. FUEL OIL CONTROLLER OUTLET, STD w/ OIL METER	125 - 150 HP
700-00856-000	PIPING, L.O. FUEL OIL CONTROLLER OUTLET, STD w/ OIL METER	175 - 225 HP


ITEM 4 - PIPING, L.O. PILOT		
PART NO.	DESCRIPTION	MODEL
700-00850-000	PIPING, L.O. PILOT	50 - 225 HP - 100 FUEL
700-00851-000	PIPING, L.O. PILOT (IRI)	50 - 225 HP - 100 FUEL (IRI)

ITEM 21 - VALVE STEM	
PART NO.	MODEL
024-00084-000	100A, 125A, 125, 150, 125S, 150S HP
024-00085-000	175A, 175S, 200/225S, 150 4W - NTI

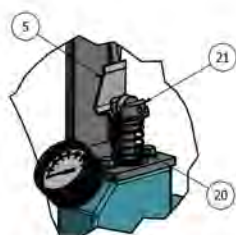

ITEM	QTY	PART NO.	DESCRIPTION	USED ON
1	1	SEE TABLE	PIPING, L.O. FUEL OIL CONT. INLET & RETURN, STD.	SEE TABLE
2	1	SEE TABLE	PIPING, L.O. FUEL OIL CONT. OUTLET, STD/FM/NFPA-85	SEE TABLE
3	1	739-00073-000	FUEL OIL CONTROLLER (739 - D - 73)	50 - 225 HP
4	1	SEE TABLE	PIPING, L.O. PILOT	SEE TABLE
5	1	036-00026-000	GUIDE, CAM BODY	
6	1	008-03418-000	BRACKET (SEE NOTE 7)	
8	2	952-00092-000	LOCKWASHER, 1/4"	
9	4	868-00157-000	CAPSCREW, HEX HD. 3/8" - 16 UNC x 1" LG.	60" - 67" DIA
10	1	106-00118-000	BLOCK, AIR MANIFOLD	
11	2	858-00088-000	PLUG, PIPE, SQ. 0.125" NPT	
12	4	845-00008-000	NUT, SHORT, SAE, 45° FLRD BRASS 1/4" ODT	100 FUEL
13	2	845-00008-000	NUT, SHORT, SAE, 45° FLRD BRASS 1/4" ODT	
14	2	939-00025-000	BULK TUBING	100 FUEL
15	1	845-00042-000	FITTING, ELBOW, 1/4" ODC x 1/8" NPT	100 FUEL
16	1	845-00349-000	CONNECTOR, MALE, SAE, 1/2" NPT x 1/4" ODT	
17	1	939-00025-000	BULK TUBING	
18	1	817-04093-000	LOPS, PRESSURE CONTROL, OP. LIMIT	
19	1	817-04093-000	HOPS, PRESSURE CONTROL, OP. LIMIT	IF REQUIRED
20	1	082-00083-000	SPRING, COMPRESSION	
21	1	SEE TABLE	VALVE STEM (24 - B - 81)	SEE TABLE
22	-	-	-	-
23	1	858-00088-000	PLUG, PIPE, SQ. HD. IRON, SOLID, .125" NPT	ALL EXCEPT 100 FUEL
24	1	857-00106-000	NIPPLE, 3/8" x 10-1/2"	50 - 150 HP
	1	857-00651-000	NIPPLE, 1/2" x 12"	175 - 225 HP
25	1	861-00438-000	FLEXIBLE HOSE, 3/8"	50 - 150 HP
	1	861-00439-000	FLEXIBLE HOSE, 1/2"	175 - 225 HP
26	1	847-00423-000	BUSHING, HEX HEAD, 3/4" X 3/8" NPT, F.S., ANSI B16.11	50 - 150 HP
	1	847-00152-000	BUSHING, HEX HEAD, 3/4" X 1/2" NPT, F.S., ANSI B16.11	175 - 225 HP
27	2	868-00387-000	CAPSCREW, HEX HD. 1/4" - 20 UNC x 2-3/4" LG.	
28	-	-	-	-
29	4	952-00093-000	LOCKWASHER, 3/8"	
30	1	859-00105-000	ELBOW, STREET, 3/8"	50 - 150 HP
	1	859-00106-000	ELBOW, STREET, 1/2"	175 - 225 HP
	1	861-00438-000	FLEXIBLE HOSE, 3/8"	125 - 150 HP
31	1	861-00439-000	FLEXIBLE HOSE, 1/2"	175 - 225 HP
32	1	845-00007-000	CONNECTOR, MALE, SAE 45 DEG. FLR BRASS, 1/4"	

ITEM 1 - PIPING, L.O. FUEL OIL CONTROLLER INLET & RETURN		
PART NO.	DESCRIPTION	MODEL
700-00652-000	PIPING, L.O. FUEL OIL CONTROLLER INLET & RETURN, STD	60" CBR/CBL 125 - 200 HP
700-00653-000	PIPING, L.O. FUEL OIL CONTROLLER INLET & RETURN, w/ HOPS	60" CBR/CBL 125 - 200 HP

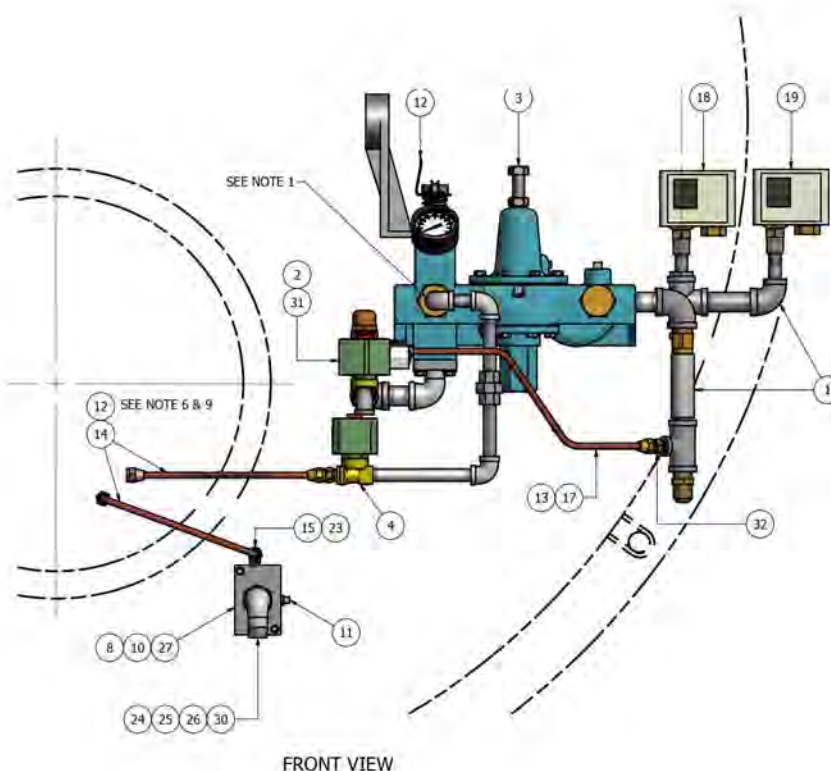

## 9.11.2 - 250-350 HP

ITEM	QTY	PART NO.	DESCRIPTION	USED ON
1	1	SEE TABLE	PIPING, L.O. FUEL OIL CONT. INLET & RETURN	SEE TABLE
2	1	SEE TABLE	PIPING, L.O. FUEL OIL CONT. OUTLET	SEE TABLE
3	1	739-00073-000	FUEL OIL CONTROLLER (739 - D - 73)	250 - 350 HP
4	1	SEE TABLE	PIPING, L.O. PILOT	SEE TABLE
5	1	036-00026-000	GUIDE, CAM BODY	
6	1	841-01119-000	U-BOLT w/ NUTS	
7	1	008-02204-000	BRACKET	
8	4	952-00092-000	LOCKWASHER, 1/4"	
9	2	868-00136-000	CAPSCREW, HEX HD. 1/4" - 20 UNC x 3/4" LG.	
10	1	106-00118-000	BLOCK, AIR MANIFOLD	
11	1	845-00042-000	FITTING, ELBOW, 1/4" x 1/8"	100 FUEL
12	2	858-00088-000	PLUG, SQUARE HD 0.125"	
13	2	845-00008-000	NUT, SHORT, SAE, 45° FLRD BRASS 1/4" ODT	100 FUEL
14	4	845-00008-000	NUT, SHORT, SAE, 45° FLRD BRASS 1/4" ODT	
15	1	845-00009-000	FITTING, ELBOW, 1/4" ODC x 1/4" NPT	
16	1	845-00349-000	CONNECTOR, MALE, SAE, 1/2" NPT x 1/4" ODT	
17	2	939-00025-000	BULK TUBING, SMLS, 1/4" OD x 0.030 WALL 16" LG. (APPROX)	100 FUEL
18	1	817-04093-000	LOPS, PRESSURE CONTROL, OP. LIMIT, DANFOSS, 150 PSI	
19	1	817-04093-000	HOPS, PRESSURE CONTROL, OP. LIMIT, DANFOSS, 150 PSI	IF REQUIRED
20	1	082-00083-000	SPRING, COMPRESSION	
21	1	024-00086-000	VALVE STEM (24 - B - 81)	250 - 350 HP
22	-	-	-	-
23	1	858-00088-000	PLUG, PIPE, SQ. HD, IRON, SOLID, .125" NPT	ALL EXCEPT 100 FUEL
24	1	057-01867-000	PIPE, 1/2" x 20" LG, TBE	
25	1	859-00106-000	ELBOW, STREET, 1/2"	
26	2	861-00439-000	FLEXIBLE HOSE, 1/2"	
27	1	847-00466-000	BUSHING, HEX HEAD, 3/4" X 1/2" NPT, F.S., ANST B16.11	
28	2	868-00387-000	CAPSCREW, HEX HD. 1/4" - 20 UNC x 2-3/4" LG.	



ITEM 1 - PIPING, L.O. FUEL OIL CONTROLLER INLET & RETURN		
PART NO.	DESCRIPTION	MODEL
700-00650-000	PIPING, L.O. FUEL OIL CONTROLLER INLET & RETURN, STD	67" CBR 250 - 350 HP
700-00651-000	PIPING, L.O. FUEL OIL CONTROLLER INLET & RETURN, w/ HOPS	67" CBR 250 - 350 HP

ITEM 2 - PIPING, L.O. FUEL OIL CONTROLLER OUTLET		
PART NO.	DESCRIPTION	MODEL
700-00638-000	PIPING, L.O. FUEL OIL CONTROLLER OUTLET, STD	250 - 350 HP
700-00641-000	PIPING, L.O. FUEL OIL CONTROLLER OUTLET, FM/NFPA-85	250 - 350 HP
700-00788-000	PIPING, L.O. FUEL OIL CONTROLLER OUTLET, STD w/ OIL METER	250 - 350 HP
700-00782-000	PIPING, L.O. FUEL OIL CONTROLLER OUTLET, FM/NFPA-85 w/ OIL METER	250 - 350 HP

ITEM 4 - PIPING, L.O. PILOT		
PART NO.	DESCRIPTION	MODEL
700-00852-000	PIPING, L.O. PILOT	250 - 350 HP - 100 FUEL
700-00853-000	PIPING, L.O. PILOT (IRI)	250 - 350 HP - 100 FUEL (IRI)

## NOTES:

- IF 100 FUEL, REMOVE PLUG AND PROVIDE OIL PILOT PIPING AS SHOWN.
- ALL DIMENSION ARE APPROX.
- USE p/n: 700-00853-000 ONLY ON IRI INSURANCE.
- FOR OIL SUPPLY AND RETURN TUBING, REFER TO DWG 146-B-114.
- FOR AIR COMPRESSOR PIPING TO AIR MANIFOLD BLOCK REFER TO DWG 146-B-136 FOR MODELS CBLE, OR 146-D-471 FOR 4WI/CBEX.
- NFPA-85 AND FM INSURANCE REQUIRES 2 MOTORIZED VALVES W/POC ITEM 2.
- ITEMS 4, 11, 14, 17 ARE USED FOR OIL PILOT ONLY.
- ITEMS 6 AND 7 ARE NOT REQUIRED WHEN OIL METER IS PROVIDED.
- CUT AND BEND TUBING TO FIT.

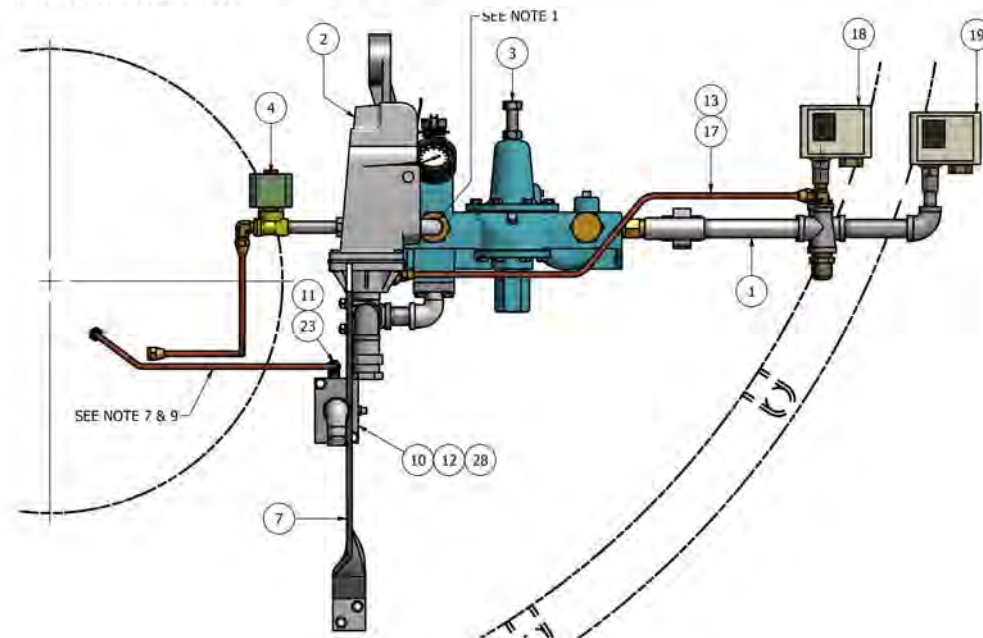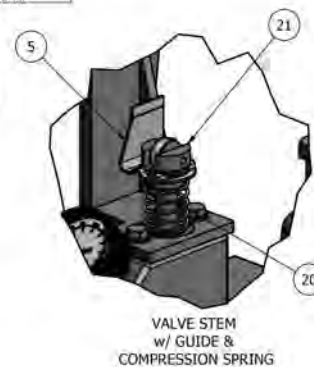

### 9.11.3 - 400-800 HP

ITEM	QTY	PART NO.	DESCRIPTION	USED ON
1	1	SEE TABLE	PIPING, L.O. FUEL OIL CONT. INLET & RETURN	SEE TABLE
2	1	SEE TABLE	PIPING, L.O. FUEL OIL CONT. OUTLET	SEE TABLE
3	1	SEE TABLE	FUEL OIL CONTROLLER (739 - D - 73)	SEE TABLE
4	1	SEE TABLE	PIPING, L.O. PILOT	SEE TABLE
5	1	036-00026-000	GUIDE, CAM BODY	
6	1	841-01119-000	U-BOLT w/ NUTS	
7	1	008-02204-000	BRACKET	
8	4	952-00092-000	LOCKWASHER, 1/4"	
9	2	868-00136-000	CAPSCREW, HEX HD. 1/4" - 20 UNC x 3/4" LG.	
10	1	106-00118-000	BLOCK, AIR MANIFOLD	
11	2	845-00429-000	CONNECTOR, MALE 1/4" ODC x 1/8" NPT	
12	1	859-00115-000	ELBOW, STREET, 45° 1/8" NPT 150# M.I.	
13	2	845-00008-000	NUT, SHORT, SAE, 45° FLRD BRASS 1/4" ODT	
14	1	507-09095-000	TOP LOAD, TUBING ASSEMBLY	
15	1	845-00009-000	FITTING, ELBOW, 1/4" ODC x 1/2" NPT	
16	1	845-00349-000	CONNECTOR, MALE, SAE, 1/2" ODT x 1/4" NPT	
17	1	939-00025-000	BULK TUBING, SMLS, 1/4" OD x 0.030 WALL ± 20.5" LG. (APPROX)	
18	1	817-04093-000	LOPS, PRESSURE CONTROL, OP. LIMIT, DANFOSS, 150 PSI	
19	1	817-04093-000	HOPS, PRESSURE CONTROL, OP. LIMIT, DANFOSS, 150 PSI	IF REQUIRED
20	1	082-00083-000	SPRING, COMPRESSION	
21	1	SEE TABLE	VALVE STEM (24 - A - 81)	SEE TABLE
22	2	939-00025-000	TUBING, BULK 1/4" OD 0.030" WALL x 19" LG	100 FUEL
23	1	858-00088-000	PLUG, PIPE, SQ. HD, IRON, SOLID, .125" NPT	ALL EXCEPT 100 FUEL
24	1	057-05112-000	PIPE, 3/4" x 23" LG, TBE	
25	1	859-00107-000	ELBOW, STREET, 3/4"	
26	1	861-00436-000	FLEXIBLE HOSE, 3/4"	
27	1	861-00439-000	FLEXIBLE HOSE, 1/2"	
28	2	868-00387-000	CAPSCREW, HEX HD. 1/4" - 20 UNC x 2-3/4" LG.	
29	1	845-00042-000	FITTING, ELBOW, 1/4" ODC x 1/8" NPT	100 FUEL
30	4	845-00008-000	NUT, SHORT, SAE, 45° FLRD BRASS 1/4" ODT	100 FUEL

ITEM 1 - PIPING, L.O. FUEL OIL CONTROLLER INLET & RETURN		
PART NO.	DESCRIPTION	MODEL
700-00644-000	PIPING, L.O. FUEL OIL CONTROLLER INLET & RETURN, STD	85" 4WT 400 HP / CBEX 500 - 600 HP / 83" CBR 400 - 800 HP
700-00645-000	PIPING, L.O. FUEL OIL CONTROLLER INLET & RETURN, w/ HOPS	85" 4WT 400 HP / CBEX 500 - 600 HP / 83" CBR 400 - 800 HP

ITEM 2 - PIPING, L.O. FUEL OIL CONTROLLER OUTLET		
PART NO.	DESCRIPTION	MODEL
700-00640-000	PIPING, L.O. FUEL OIL CONTROLLER OUTLET, STD	400 - 800 HP
700-00641-000	PIPING, L.O. FUEL OIL CONTROLLER OUTLET, FM/NFPA-85	400 - 800 HP
700-00832-000	PIPING, L.O. FUEL OIL CONTROLLER OUTLET, STD w/ OIL METER	400 - 800 HP
700-00752-000	PIPING, L.O. FUEL OIL CONTROLLER OUTLET, FM/NFPA-85 w/ OIL METER	400 - 800 HP

ITEM 3 - FUEL OIL CONTROLLER		
PART NO.	MODEL	
739-00074-000	400 - 750 HP	
739-00079-000	800 HP	



ITEM 4 - PIPING, L.O. PILOT		
PART NO.	DESCRIPTION	MODEL
700-00852-000	PIPING, L.O. PILOT	400 - 800 HP - 100 FUEL
700-00853-000	PIPING, L.O. PILOT (IRI)	400 - 800 HP - 100 FUEL (IRI)

#### NOTES:

1. IF 100 FUEL, REMOVE PLUG AND PROVIDE OIL PILOT PIPING AS SHOWN.
2. ALL DIMENSION ARE APPROX.
3. USE p/n: 700-00853-000 ONLY ON IRI INSURANCE.
4. FOR OIL SUPPLY AND RETURN TUBING, REFER TO DWG 146-B-114.
5. FOR AIR COMPRESSOR PIPING TO AIR MANIFOLD BLOCK REFER TO DWG 146-B-113 FOR MODELS CBLE/CBR, OR 146-D-471 FOR 4W/CBEX.
6. NFPA-85 AND FM INSURANCE REQUIRES 2 MOTORIZED VALVES W/POC ITEM 2.
7. ITEMS 4, 22, 29, 30 ARE USED FOR OIL PILOT ONLY.
8. ITEMS 6 AND 7 ARE NOT REQUIRED WHEN OIL METER IS PROVIDED.
9. CUT AND REFD TUBING TO FIT


ITEM 21 - VALVE STEM	
PART NO.	MODEL
024-00087-000	400 HP
024-00088-000	500 - 750 HP
024-00089-000	800 HP

VALVE STEM  
w/ GUIDE &  
COMPRESSION SPRING

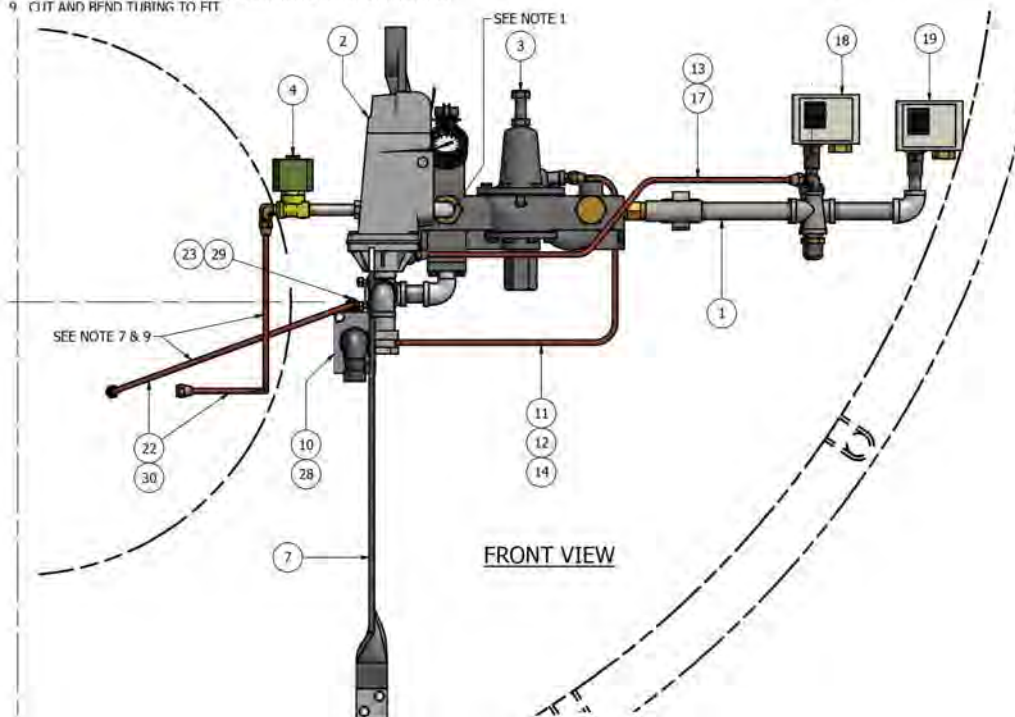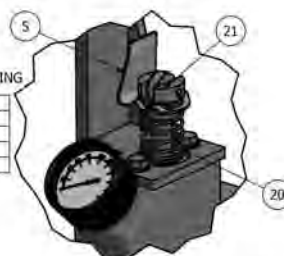


9.12 - Front Head Oil / Air Piping (Heavy Oil)  
9.12.1 - 60"

BILL OF MATERIAL				USED ON
ITEM	QUANTITY	PART No.	DESCRIPTION	
1	1	948-154	VALVE - SOLENOID, 3/8"	-
2	1	739-D-75	VALVE ASSEMBLY	-
3	1	24-83	VALVE STEM (24-B-81)	100 HP.
4	1	24-84	VALVE STEM (24-B-81)	125-150 HP.
5	1	24-85	VALVE STEM (24-B-81)	200 HP.
6	1	817-4093	PRESSURE SWITCH, 15-150#	HOPS OPTION
7	1	858-19	1/4" COUPLING	HOPS OPTION
8	1	858-11	1/4" SIPHON	HOPS OPTION
9	1	859-00079	ELBOW - 3/8"	125-150 HP.
10	1	847-00548	ELBOW, RED. - 1/2" X 3/8"	175S, 200 HP.
11	1	948-153	SOLENOID VALVE - 1/4"	#5 & #6 OIL ONLY
12	1	940-710	CHECK VALVE - 1/4"	#5 & #6 OIL ONLY
13	1	157-75	REDUCER - 1/2" x 1/4"	#5 & #6 OIL ONLY
14	1	106-A-10	ORIFICE BLOCK	#5 & #6 OIL ONLY
15	1	82-B-83	COMPRESSION SPRING	-
16	1	899-23	PURGE NOZZLE	100 HP.
17	1	899-26	PURGE NOZZLE	125-150HP #5-#6 OIL ONLY
18	1	899-33	PURGE NOZZLE	200HP #5-#6 OIL ONLY
19	2	861-438	FLEXIBLE HOSE	125-150 HP.
20	2	861-439	FLEXIBLE HOSE	175S, 200 HP.
21	3	845-42	ELBOW - 1/4" ODC x 1/8" NPT	#5 & #6 OIL ONLY
22	1	507-A-2648	PURGE LINE TUBING ASSEMBLY	#5 & #6 OIL ONLY
23	1	948-154	VALVE, SOLENOID, 3/8"	-
24	1	847-255	TEE 3/8" X 3/8" X 1/4"	-
25	1	859-105	ELBOW, STREET, 3/8"	125-150 HP
26	1	859-106	ELBOW, STREET, 1/2"	175S-200 HP
27	1	36-A-26	CAM BODY GUIDE	-
28	4	952-93	LOCKWASHER, 3/8"	-
29	4	868-56	CAPSCREW, HEX HD. 3/8"-16 X 1-1/4" LG.	-
30	1	106-118	AIR MANIFOLD BLOCK	-
31	2	952-92	LOCKWASHER, 1/4"	-
32	2	868-587	CAPSCREW, HEX HD. 1/4"-20 X 2-3/4" LG.	-
33	1	8B3358	BRACKET	CB
34	1	8-3418	BRACKET	LE

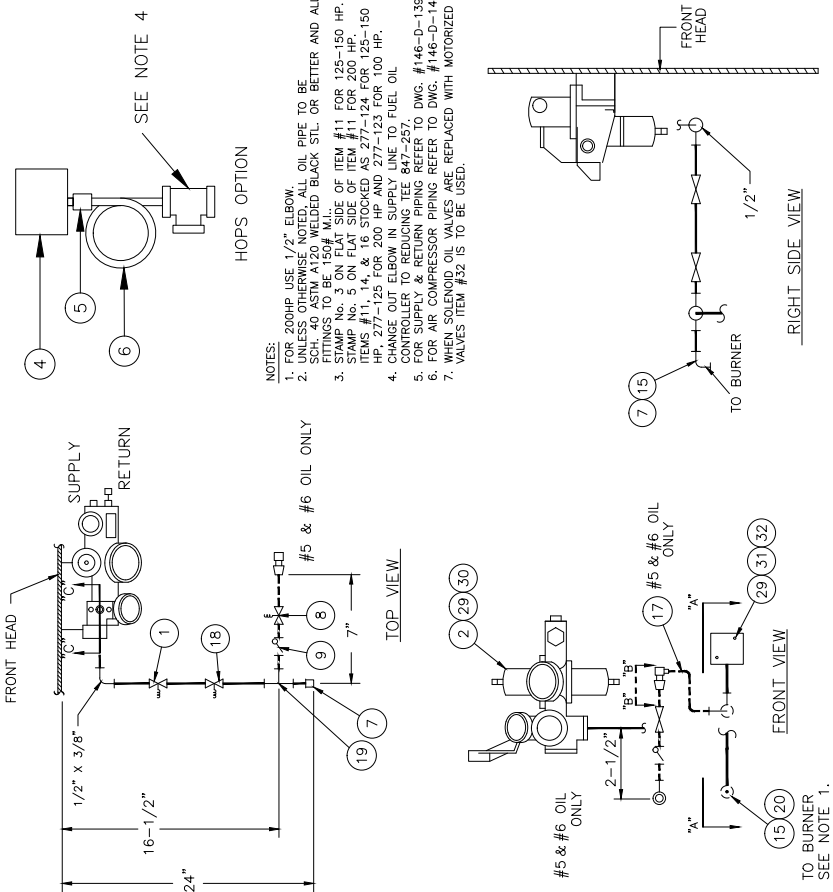

## 9.12.2 - 67"




ITEM	QUANTITY	PART No.	DESCRIPTION	USED ON
(1)	1	948-154	VALVE, SOLENOID	250 NO INS/FM/RI 300 NO INS/FM** 350 NO INS
(2)	1	229-62	VALVE, MOTORIZED	250 NFPA-85 300 NFPA-85/RI 300 CBR FM 350 NFPA-85/FM/RI
(3)	1	739-D-75	VALVE ASSEMBLY	250-350 H.P.
(4)	1	24-86	VALVE STEM (24-B-81)	250-350 H.P.
(5)	1	817-4093	PRESSURE SWITCH, 15-150#	HOPS OPTION
(6)	1	858-19	1/4" COUPLING	HOPS OPTION
(7)	1	854-11	1/4" SIFON	HOPS OPTION
(8)	1	859-80	ELBOW - 1/2"	-
(9)	1	948-153	SOLENOID VALVE - 1/4"	#5 & #6 OIL ONLY
(10)	1	940-710	CHECK VALVE - 1/4"	#5 & #6 OIL ONLY
(11)	1	157-75	REDUCER - 1/2" x 1/4"	#5 & #6 OIL ONLY
(12)	1	106-A-10	OFFICE BLOCK	#5 & #6 OIL ONLY
(13)	1	82-B-83	COMPRESSION SPRING	-
(14)	1	899-80	BURNER NOZZLE	#5 & #6 OIL ONLY
(15)	1	845-5	NUT, SHORT - 452 FLARED x 1/4" ODC	#5 & #6 OIL ONLY
(16)	2	845-42	ELBOW - 1/4" ODC x 1/8" NPT	-
(17)	1	507-A-2648	PURGE LINE TUBING ASSEMBLY	#5 & #6 OIL ONLY
(18)	1	948-154	VALVE, SOLENOID	250 NO INS/FM/RI 300 NO INS/FM**/RI 350 NO INS
(19)	2	868-357	CAPSCREW 1/4"	250 NFPA-85 300 NFPA-85 350 NFPA-85/FM
(20)	2	952-92	LOCKWASHER 1/4"	-
(21)	1	859-106	1/2" STREET ELBOW	-
(22)	1	106-B-118	AIR MANIFOLD BLOCK	-
(23)	1	8-B-2204	BRACKET	-
(24)	1	841-1119	U-BOLT	-
(25)	2	952-92	WASHER	-
(26)	4	868-136	CAPSCREW	-
(27)	1	38-A-26	CAM BODY GUIDE	-
(28)	4	952-93	LOCKWASHER - 3/8"	-
(29)	4	868-157	CAPSCREW-HEX HD.3/8"-18 X 1-1/4" LG.	-
(30)	1	859-106	ELBOW, STREET, 1/2"	-
(31)	1	57-1867	SIZED PIPE - 1/2" X 20' LG. TBC.	-
(32)	1	861-439	FLEXIBLE HOSE, METAL	-
(33)	2	847-420	BUSHING, 1/2" X 3/8"	-
(34)	*2			3/8 VALVES

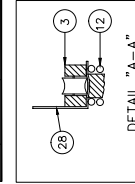

\* MAXIMUM QUANTITY SHOWN BASED ON REQUIREMENTS.  
\*\* EXCEPT 300 HP CBR

— OIL PIPING  
— AIR LINE PIPING


NOTES:  
1. CUT ITEM #23 TO SUIT @ ASSEMBLY.  
2. CUT TUBE, ITEM #17, TO FIT AT ASSEMBLY, AND INSTALL NUT, ITEM #15.  
3. STAMP #6 ON FLAT SIDE OF ITEM #11.  
4. CHANGE OUT ELBOW IN SUPPLY LINE TO FUEL OIL CONTROLLER TO REDUCING TEE 847-257.  
5. FOR SUPPLY & RETURN PIPING REFER TO DWG. #146-01165  
6. BLOCK REFER TO DWG. #146-B-136.  
7. UNLESS OTHERWISE NOTED, ALL OIL PIPE TO BE SCH. 40 ASTM A120 WELDED BLACK STL. OR BETTER AND ALL FITTINGS TO BE 150# M.I..

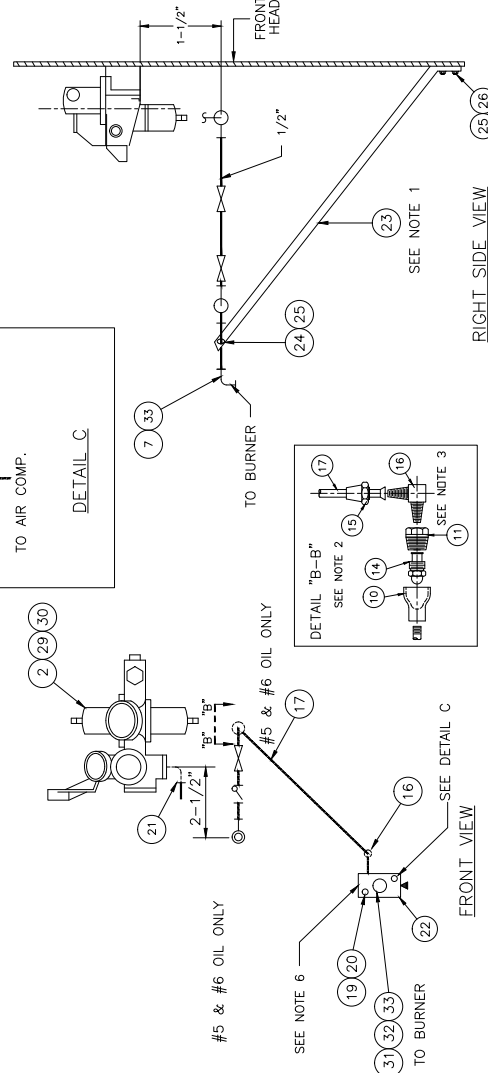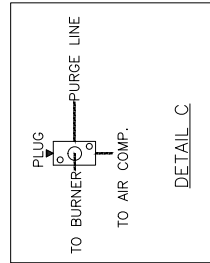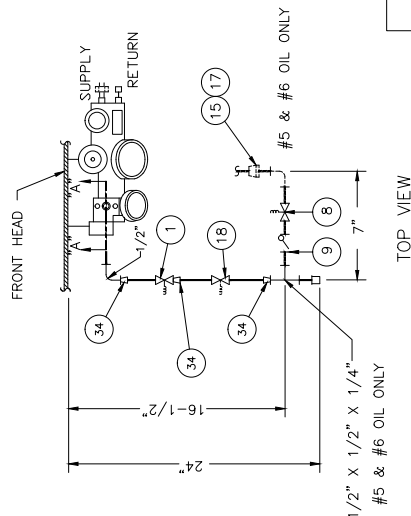


9.12.3 - 83"

ITEM	QUANTITY	PART No.	DESCRIPTION	USED ON
1	1	948-155	VALVE - 1/2"	NO INSUR./RI
2	1	229-62	VALVE - 3/4"	FM / F & I
3	1	739-76	VALVE ASSEMBLY - (739-D-75)	400-750 HP
4	1	739-82	VALVE ASSEMBLY - (739-D-75)	800 HP
5	1	24-87	VALVE STEM (24-A-81)	400 HP
6	1	24-88	VALVE STEM (24-A-81)	500-700 HP
7	1	24-89	VALVE STEM (24-A-81)	800 HP
8	1	817-4093	PRESSURE SWITCH, 15-150#	HOPS OPTION
9	1	858-19	1/4" COUPLING	HOPS OPTION
10	1	854-11	1/4" SPHON	HOPS OPTION
11	1	859-80	ELBOW - 1/2"	—
12	1	848-153	SOLENOID VALVE - 1/4"	#5 & #6 OIL ONLY
13	1	940-710	CHECK VALVE - 1/4"	#5 & #6 OIL ONLY
14	1	157-75	REDUCER - 1/2" x 1/4"	#5 & #6 OIL ONLY
15	1	106-A-10	ORIFICE BLOCK	#5 & #6 OIL ONLY
16	1	82-B-83	COMPRESSION SPRING	—
17	1	845-429	MALE CONNECTOR - 1/4" ODC x 1/8" NPT	—
18	1	859-115	STREET ELBOW - 1/8" x 45°	—
19	1	859-106	STREET ELBOW - 1/2" x 90°	—
20	1	845-8	NUT, SHORT - 45° FLARED x 1/4" ODC	#5 & #6 OIL ONLY
21	1	845-42	ELBOW - 1/4" ODC x 1/8" NPT	#5 & #6 OIL ONLY
22	1	507-A-2648	PURGE LINE TUBING ASSEMBLY	—
23	1	507-A-2845	UPPER VENT LINE TUBING ASSEMBLY	—
24	1	507-A-2846	LOWER VENT LINE TUBING ASSEMBLY	—
25	1	948-155	VALVE 1/2"	NO INSURANCE
26	2	868-387	CAPSCREW 1/4"	FM/F & I/REM/RI
27	2	952-92	LOCKWASHER 1/4"	—
28	1	106-A-118	AIR MANIFOLD BLOCK	—
29	1	8-B-2204	BRACKET	—
30	1	841-1119	U-BOLT	—
31	2	952-92	WASHER	—
32	2	868-136	CAPSCREW	—
33	4	36-A-26	CAM BODY GUIDE	—
34	1	861-438	FLEXIBLE HOSE	—
35	1	861-438	FLEXIBLE HOSE	—
36	1	57-5112	PIPE, 3/4" x 23" LG. T.B.E.	—
37	1	859-107	ELBOW, STREET, 3/4"	—


- NOTES:
1. CUT TUBE, ITEM #21, TO FIT AT ASSEMBLY, AND INSTALL NUT, ITEM # 19.(#5 & #6 OIL ONLY)
  2. STAMP #6 ON FLAT SIDE OF ITEM #11.
  3. FOR SUPPLY & RETURN PIPING REFER TO DWG. #146-01165.
  4. FOR AIR PURGE PIPING REFER TO DWG. #146-01165. FOR MODELS CBL/CBR, OR 146-D-471 FOR MODEL 4WL.
  5. CUT ITEM #30 TO SUIT @ ASSEMBLY.
  6. UNLESS OTHERWISE NOTED, ALL OIL PIPE TO BE FITTINGS TO BE 150# M.L.
  7. CHANGE OUT ELBOW IN SUPPLY LINE TO FUEL OIL TO FUEL OIL CONTROLLER TO REDUCING TEE 847-257.

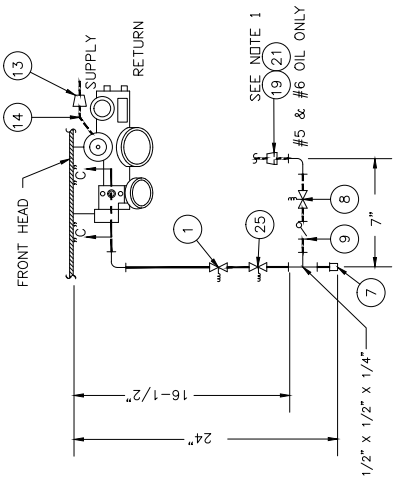




TOP VIEW

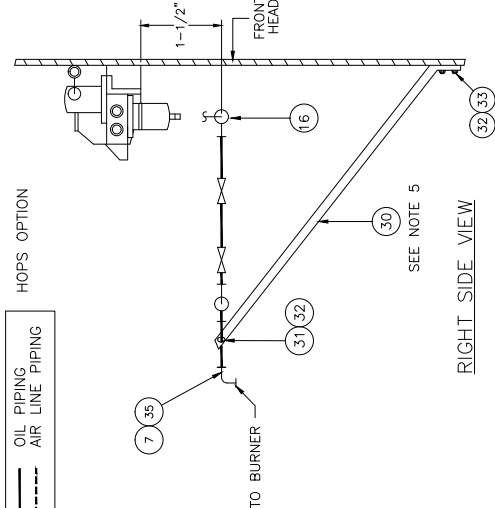

RIGHT SIDE VIEW

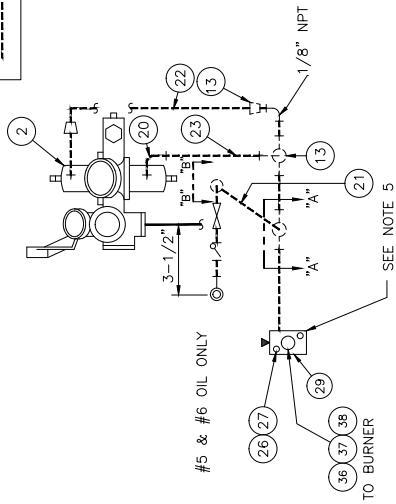

FRONT VIEW

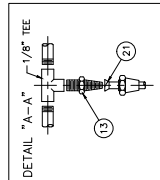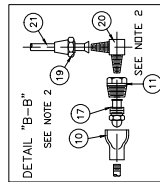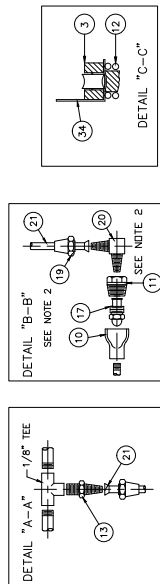

## 9.13 - Common Heavy Oil Parts

SHIPPED LOOSE (NOT SHOWN) (ALL BOILERS)			
QTY	PART NO.	DESCRIPTION	USED ON
1	SEE TABLE	OIL PUMP	SEE TABLE
1	833-494	STARTER	#4 OIL
1	833-1902		#5-#6 OIL
1	923-47	STRAINER	#4-#6 OIL

OIL CONTROLS	LOTS	HOTS	LOPS	HOPS (OPTIONAL)
NO INS.	836-65	836-72	817-4093	817-4093
GE-GAP/FM	817-4288	836-72	817-4093	817-4093
ALL HAWK	817-4288	817-4288	817-4093	817-4093

STEAM-ELECTRIC OIL HEATER					REPLACEMENT GASKT.
RATING	200/230 VOLT	380 VOLT	460 VOLT	600 VOLT	
5 KW	832-288	832-1576	832-289	832-290	853-227
7-1/2 KW	832-509	832-1577	832-510	832-520	
10 KW	832-981	832-1578	832-982	832-983	853-640
15 KW	832-2322	832-2323	832-2324	832-2325	

STRAIGHT ELECTRIC OIL HEATER						REPLACEMENT GASKT.
RATING	200 VOLT	230 VOLT	380 VOLT	460 VOLT	600 VOLT	
3 KW	832-953	832-921	832-970	832-922	832-923	853-227
5 KW	832-948	832-929	832-932	832-933	832-934	
7-1/2 KW	832-936	832-937	832-949	832-938	832-939	
10 KW	832-940	832-941	832-950	832-942	832-943	853-1180
15 KW	832-944	832-945	832-951	832-946	832-947	

OIL PUMP (SHIP LOOSE)									
MODEL	#4 OIL		#5 & #6 OIL						
	VOLTAGE		VOLTAGE						
HP	220/1/50	115/1/60	200		230		380	460	600
	50 HZ.	60 HZ.	50 HZ.	60 HZ.	50 HZ.	60 HZ.	50 HZ.	60 HZ.	60 HZ.
50-100A	506-510	905-1342	-	905-1057	905-1071	905-1050	905-1071	905-1050	-
125,125A-200	506-510	905-1342	905-1072	905-1058	905-1072	905-1051	905-1072	905-1051	-
250-300	-	-	905-1072	905-1058	905-1072	905-1051	905-1072	905-1051	905-1065
350-800	-	-	-	905-1174	905-1180	905-1171	905-1180	905-1171	905-1177

## 9.14 - Rear Head Sealing

### 9.14.1 - 60"



60" DIA. BOILER

ITEM	QTY.	PART #	DESCRIPTION
(1)	1	287-C-45	DAVIT ARM ASSEMBLY, REAR R.H.
(2)	1	32-A-2547	GASKET REAR HEAD
(3)	1	77-390	SPACER FOR 78" DAVIT ASSY.(77A385)
(4)	1	807-64	BEARING - DOUBLE ROW
(5)	1	807-65	BEARING, BALL - SINGLE ROW
(6)	1	SEE TABLE	HEAD, REAR INSULATED
(7)	1	56-A-15	PIN, HINGE, DAVIT - REAR
(8)	-	-	NOT USED
(9)	10	868-94	CAPSCREW, HEX, HD, 5/8"-11 X 4-1/2" LG.
(10)	2	65A355	REAR HEAD BOLT RETAINER
(11)	1	797-1813	ADHESIVE
(12)	21 FT	872-1073	607 MAX BLANKET 1/2" X 2"
(13)	12 OZ.	872-481	ADHESIVE
(14)	5 FT.	853-1036	ROPE - 1-1/2" DIA.
(15)	22	841-507	FASTENER, ALUVECO NO. 1202
(16)	10	952-230	WASHER, SPECIAL, 3/32" THK. STL.
(17)	1	952-194	WASHER, FLAT, 15/16"
(18)	1	869-157	NUT, ELASTIC LOCKNUT, 1" - 8
(19)	1	428-A-17	COMBUSTION RELIEF DOOR, 7"
(20)	1	428-A-37	COMBUSTION RELIEF DOOR, 12"
(21)	1	19-1363	BEARING COVER
(22)	1	550-A-42	CAP, SIGHT HOLE ASSEMBLY
(23)	1	914-147	RING, RETAINER

OPTIONAL  
OPTIONAL

TABLE ITEM (6) (FLAT T.S.)

PART NO.	USED ON
465-2621	50-100 HP - U.S. & CAN.
465-2734	100S HP
465-D-2075	125S, 150S, 175S & 125-200HP CBR
465-2083	125-200 HP - U.S. & CAN. CB/LE
465-D-2381	250-350 HP. - U.S. & CAN.
-	-
465-D-2177	400-800 HP. CB - U.S. & CANADA
465-D-2493	400-800 HP.CBLE - U.S. & CANADA
465-2622	50-100HP - U.S. & CAN. W/ 7" DOOR
465-2623	50-100HP - U.S. & CAN. W/ 12" DOOR
465-2084	125-200HP - U.S. & CAN. W/ 7" DOOR CB/LE
465-2144-004	125-200HP - U.S. & CAN. W/ 12" DOOR CB/LE
-	-
-	-
465-2468	250-350 HP. - U.S. & CAN. W/12" DOOR
-	-
465-2178	400-800 HP.CB - W/12" DOOR U.S. & CANADA
465-2494	400-800 HP.CBLE - W/12" DOOR U.S. & CANADA

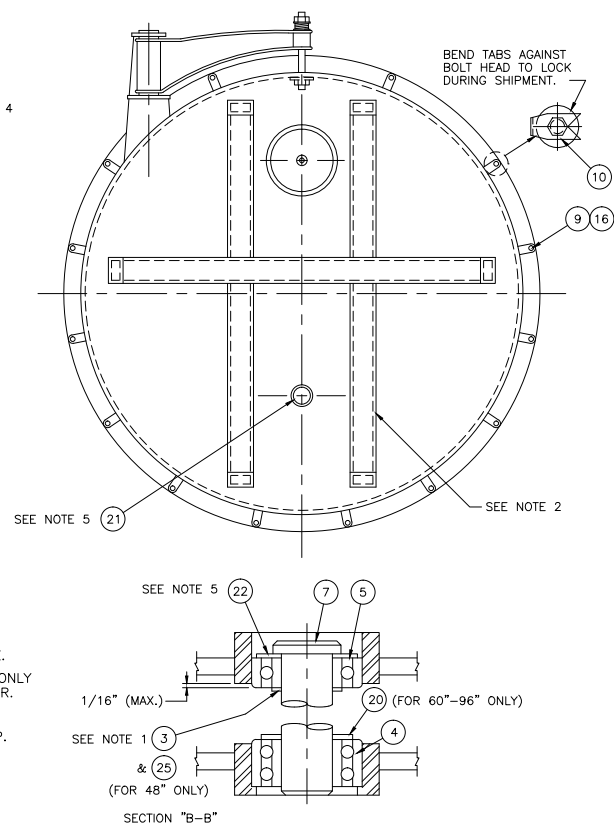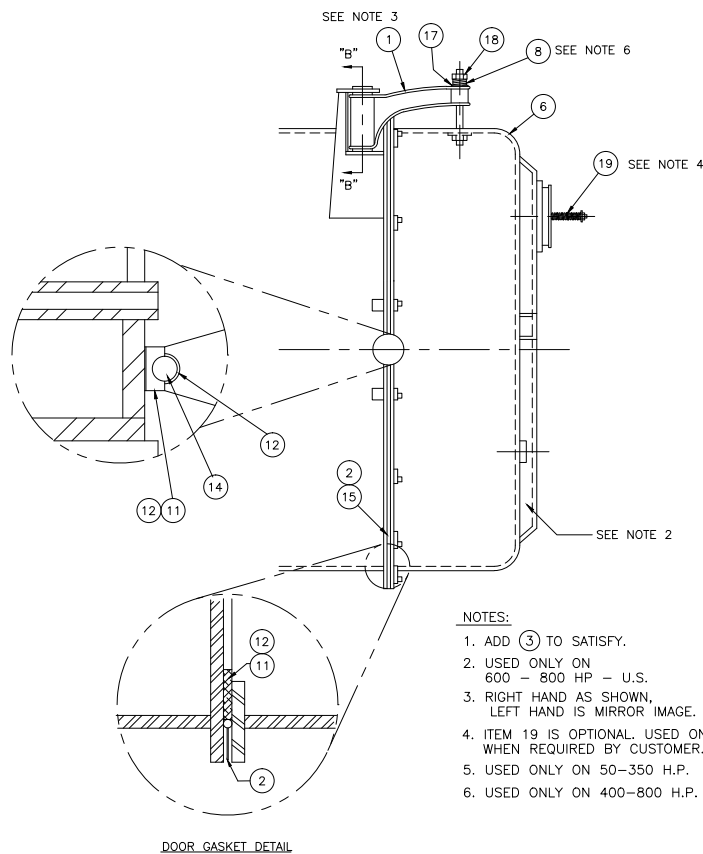



e-mail: [info@cleaverbrooks.com](mailto:info@cleaverbrooks.com)

Web Address: <http://www.cleaverbrooks.com>